


# HP ProLiant BL p-Class GbE2 Interconnect Switch

## Command Reference Guide

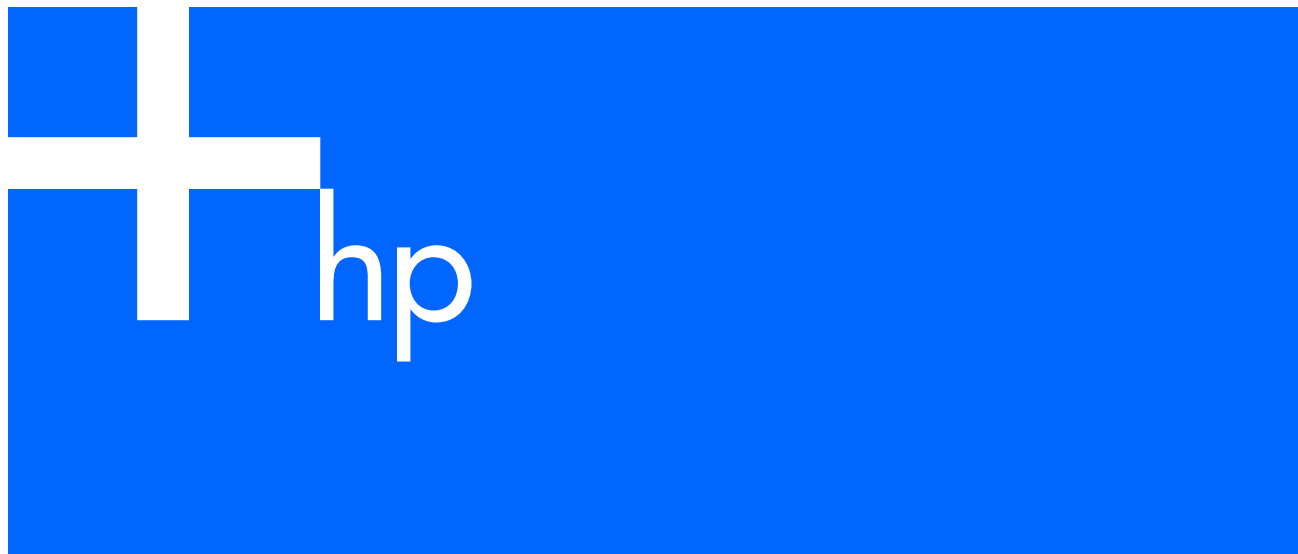

**Legal notices**

© 2004, 2007 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

SunOS™ and Solaris™ are trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Cisco® is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

Part number: 331404-008

Eighth edition: March 2007

---

# Contents

## Command line interface

Introduction .....	9
Additional references .....	9
Connecting to the GbE2 Interconnect Switch .....	9
Establishing a console connection .....	9
Setting an IP address .....	10
Establishing a Telnet connection .....	10
Establishing an SSH connection .....	10
Accessing the GbE2 Interconnect Switch .....	11
Idle timeout .....	12
Typographical conventions .....	13

## Menu basics

Introduction .....	14
Main Menu .....	14
Menu summary .....	14
Global commands .....	15
Command line history and editing .....	16
Command line interface shortcuts .....	17
Command stacking .....	17
Command abbreviation .....	17
Tab completion .....	17

## First-time configuration

Introduction .....	18
Configure Simple Network Management Protocol support .....	18
Setting passwords .....	19
Changing the default administrator password .....	19
Changing the default user password .....	20
Changing the default operator password .....	21

## Information Menu

Introduction .....	22
Menu overview .....	22
System Information Menu .....	23
SNMPv3 Information Menu .....	23
SNMPv3 USM User Table information .....	24
SNMPv3 View Table information .....	25
SNMPv3 Access Table information .....	25
SNMPv3 Group Table information .....	26
SNMPv3 Community Table information .....	26
SNMPv3 Target Address Table information .....	27
SNMPv3 Target Parameters Table information .....	27
SNMPv3 Notify Table information .....	28
SNMPv3 dump .....	29
System information .....	30
Show last 100 syslog messages .....	31
System user information .....	31
Layer 2 information .....	32
FDB information menu .....	33
Show all FDB information .....	33
Link Aggregation Control Protocol information .....	34
LACP dump .....	34
Hot Links Trigger information .....	35
802.1p information .....	35

ACL information.....	36
802.1x information.....	37
Spanning Tree information.....	38
Rapid Spanning Tree and Multiple Spanning Tree information.....	40
Common Internal Spanning Tree information.....	42
Trunk group information.....	43
VLAN information.....	44
Layer 2 general information.....	44
Layer 3 information.....	44
Route information.....	45
Show all IP Route information.....	46
ARP information.....	46
Show all ARP entry information.....	47
ARP address list information.....	47
OSPF information.....	48
OSPF general information.....	49
OSPF interface information.....	49
OSPF Database information menu.....	49
OSPF route codes information.....	51
Routing Information Protocol menu.....	51
RIP Routes information.....	51
RIP user configuration.....	52
IP information.....	52
IGMP multicast group information.....	52
IGMP multicast router port information.....	53
VRRP information.....	53
RMON Information Menu.....	54
RMON history information.....	54
RMON alarm information.....	55
RMON event information.....	56
Link status information.....	56
Port information.....	57
Logical Port to GEA Port mapping.....	58
Uplink Failure Detection information.....	58
Information dump.....	59

## Statistics Menu

Introduction.....	60
Menu information.....	60
Port Statistics Menu.....	61
802.1x statistics.....	62
Bridging statistics.....	63
Ethernet statistics.....	64
Interface statistics.....	66
Internet Protocol (IP) statistics.....	67
Link statistics.....	67
Port RMON statistics.....	67
Layer 2 statistics.....	69
FDB statistics.....	69
LACP statistics.....	69
Hot Links statistics.....	70
Layer 3 statistics.....	70
GEA Layer 3 statistics menu.....	71
GEA Layer 3 statistics.....	71
IP statistics.....	71
Route statistics.....	72
ARP statistics.....	73
DNS statistics.....	73

ICMP statistics .....	73
TCP statistics.....	75
UDP statistics .....	76
IGMP Multicast Group statistics.....	76
OSPF statistics menu .....	77
OSPF global statistics .....	77
VRRP statistics .....	79
RIP statistics .....	80
Management Processor statistics .....	80
TCP statistics.....	81
UDP statistics .....	81
CPU statistics .....	81
Access Control List (ACL) statistics menu .....	82
ACL statistics .....	82
ACL meter statistics.....	82
SNMP statistics .....	82
NTP statistics .....	84
Link statistics.....	85
DNS statistics .....	85
Uplink Failure Detection statistics.....	86
Statistics dump.....	86

## Configuration Menu

Introduction.....	87
Menu information .....	87
Viewing, applying, reverting, and saving changes .....	88
Viewing pending changes.....	88
Applying pending changes .....	88
Reverting changes.....	88
Saving the configuration .....	88
Reminders.....	89
System configuration .....	89
System host log configuration .....	91
Secure Shell Server configuration .....	92
RADIUS server configuration.....	92
TACACS+ server configuration .....	94
NTP server configuration.....	95
System SNMP configuration .....	96
SNMPv3 configuration .....	97
User Security Model configuration.....	98
SNMPv3 View configuration .....	98
View-based Access Control Model configuration.....	99
SNMPv3 Group configuration .....	100
SNMPv3 Community Table configuration .....	100
SNMPv3 Target Address Table configuration.....	101
SNMPv3 Target Parameters Table configuration.....	102
SNMPv3 Notify Table configuration .....	102
System Access configuration.....	103
Management Networks configuration .....	104
User Access Control configuration.....	104
User ID configuration.....	105
HTTPS Access configuration.....	105
Port configuration.....	106
Temporarily disabling a port .....	107
Port link configuration.....	107
Port fiber link control .....	108
ACL Port configuration.....	108
ACL Port Metering configuration .....	109

ACL Port Re-Mark configuration .....	109
ACL Port Re-Mark In-Profile configuration.....	110
Re-Mark Update User Priority configuration .....	110
ACL Port Re-Mark Out-of-Profile configuration .....	110
Layer 2 configuration .....	111
802.1x configuration .....	111
802.1x Global configuration.....	112
802.1x Port configuration .....	113
Rapid Spanning Tree Protocol / Multiple Spanning Tree Protocol configuration.....	114
Common Internal Spanning Tree configuration.....	115
CIST bridge configuration .....	115
CIST port configuration .....	116
Spanning Tree configuration.....	117
Bridge Spanning Tree configuration .....	118
Spanning Tree port configuration .....	119
Forwarding Database configuration .....	120
Static FDB configuration.....	120
Trunk configuration .....	121
IP Trunk Hash configuration .....	121
Layer 2 IP Trunk Hash configuration .....	122
Link Aggregation Control Protocol configuration.....	122
LACP Port configuration .....	123
Hot Links configuration .....	123
Hot Links Trigger configuration.....	124
Hot Links Master configuration .....	124
Hot Links Backup configuration .....	124
VLAN configuration.....	125
Layer 3 configuration .....	126
IP interface configuration .....	126
Default Gateway configuration .....	127
IP Static Route configuration .....	128
Address Resolution Protocol configuration .....	128
ARP Static configuration.....	128
IP Forwarding configuration .....	129
Network Filter configuration .....	129
Route Map configuration.....	129
IP Access List configuration.....	131
Autonomous System Path configuration .....	131
Routing Information Protocol configuration .....	132
RIP Interface configuration.....	132
RIP Route Redistribution configuration .....	133
Open Shortest Path First configuration .....	134
OSFP Area Index configuration.....	135
OSPF Summary Range configuration .....	136
OSPF Interface configuration .....	136
OSPF Virtual Link configuration .....	137
OSPF Host Entry configuration .....	137
OSPF Route Redistribution configuration.....	138
OSPF MD5 Key configuration .....	139
IGMP configuration .....	139
IGMP snooping configuration .....	140
IGMP static multicast router configuration .....	141
IGMP filtering configuration.....	141
IGMP filter definition .....	142
IGMP filtering port configuration .....	142
Domain name system configuration .....	143
Bootstrap Protocol Relay configuration.....	143

Virtual Router Redundancy Protocol configuration .....	144
VRRP Virtual Router configuration .....	144
VRRP Virtual Router Priority Tracking configuration .....	146
VRRP Virtual Router Group configuration .....	146
VRRP Virtual Router Group Priority Tracking configuration .....	147
VRRP Interface configuration .....	148
VRRP Tracking configuration .....	148
Quality of Service configuration .....	149
QoS 802.1p configuration .....	149
Access Control configuration .....	149
Access Control List configuration .....	150
ACL Ethernet Filter configuration .....	151
ACL IP Version 4 Filter configuration .....	151
ACL TCP/UDP Filter configuration .....	152
ACL Packet Format configuration .....	153
ACL Block configuration .....	153
ACL Group configuration .....	153
Remote Monitoring configuration .....	154
RMON history configuration .....	154
RMON event configuration .....	155
RMON alarm configuration .....	155
Port mirroring .....	156
Port-based port mirroring .....	157
Uplink Failure Detection configuration .....	157
Failure Detection Pair configuration .....	158
Link to Monitor configuration .....	158
Link to Disable configuration .....	159
Dump .....	159
Saving the active GbE2 Interconnect Switch configuration .....	159
Restoring the active GbE2 Interconnect Switch configuration .....	160

## Operations Menu

Introduction .....	161
Menu information .....	161
Operations-level port options .....	161
Operations-level port 802.1x options .....	162
Operations-level VRRP options .....	162

## Boot Options Menu

Introduction .....	163
Menu information .....	163
Updating the GbE2 Interconnect Switch software image .....	163
Downloading new software to your GbE2 Interconnect Switch .....	163
Selecting a software image to run .....	165
Uploading a software image from your GbE2 Interconnect Switch .....	165
Selecting a configuration block .....	166
Resetting the GbE2 Interconnect Switch .....	166
Accessing the ISCLI .....	166

## Maintenance Menu

Introduction .....	167
Menu information .....	167
System maintenance options .....	168
Forwarding Database options .....	168
Debugging options .....	168
ARP cache options .....	169
IP Route Manipulation options .....	170
IGMP Multicast Group options .....	170
IGMP Snooping options .....	170

IGMP Mrouter options .....	171
Uuencode flash dump .....	171
FTP/TFTP system dump put .....	172
Clearing dump information.....	172
Panic command .....	172
Unscheduled system dumps .....	173

[Index](#)



# Command line interface

## Introduction

Your HP ProLiant BL p-Class GbE2 Interconnect Switch is ready to perform basic switching functions right out of the box. Some of the more advanced features, however, require some administrative configuration before they can be used effectively.

The extensive switching software included in your GbE2 Interconnect Switch provides a variety of options for accessing and configuring the GbE2 Interconnect Switch:

- A built-in, text-based command line interface (CLI) and menu system for access via a local terminal or remote Telnet/Secure Shell (SSH) session
- Simple Network Management Protocol (SNMP) support for access through network management software such as HP OpenView and HP Insight Manager 7
- A browser-based management interface for interactive network access through your Web browser

The command line interface is the most direct method for collecting GbE2 Interconnect Switch information and performing switch configuration. Using a basic terminal, you are presented with a hierarchy of menus that enable you to view information and statistics about the GbE2 Interconnect Switch, and to perform any necessary configuration.

This chapter explains how to access the CLI to the GbE2 Interconnect Switch.

## Additional references

Additional information about installing and configuring the GbE2 Interconnect Switch is available in the following guides, which are available at <http://www.hp.com/support>.

- *HP ProLiant BL p-Class GbE2 Interconnect Switch User Guide*
- *HP ProLiant BL p-Class GbE2 Interconnect Switch Application Guide*
- *HP ProLiant BL p-Class GbE2 Interconnect Switch Browser-based Interface Reference Guide*
- *HP ProLiant BL p-Class C-GbE2 Interconnect Kit Quick Setup Instructions*
- *HP ProLiant BL p-Class F-GbE2 Interconnect Kit Quick Setup Instructions*
- *HP BladeSystem p-Class SAN Connectivity Kit Quick Setup Instructions*

## Connecting to the GbE2 Interconnect Switch

You can access the command line interface in one of the following ways:

- Using a console connection via the console port
- Using a Telnet connection over the network
- Using a Secure Shell (SSH) connection to securely log in over a network

## Establishing a console connection

To establish a console connection with the GbE2 Interconnect Switch, you need:

- A null modem cable with a female DB-9 connector (See the *HP ProLiant BL p-Class GbE2 Interconnect Switch User Guide* for more information.)
- An ASCII terminal or a computer running terminal emulation software set to the parameters shown in the table below

**Table 1** Console configuration parameters

Parameter	Value
Baud Rate	9600
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

To establish a console connection with the GbE2 Interconnect Switch:

1. Connect the terminal to the console port using the null modem cable.
2. Power on the terminal.
3. Press the **Enter** key a few times on your terminal to establish the connection.
4. You will be required to enter a password for access to the GbE2 Interconnect Switch. (For more information, see the “Setting passwords” section in the “First-time configuration” chapter.)

## Setting an IP address

To access the GbE2 Interconnect Switch via a Telnet or an SSH connection, you need to have an Internet Protocol (IP) address set for the switch. The GbE2 Interconnect Switch can get its IP address in one of two ways:

- Using a Bootstrap Protocol (BOOTP) server—By default, the management interface is set up to request its IP address from a BOOTP server. If you have a BOOTP server on your network, add the Media Access Control (MAC) address of the GbE2 Interconnect Switch to the BOOTP configuration file located on the BOOTP server. The MAC address can be found on a small white label on the back panel of the GbE2 Interconnect Switch. The MAC address can also be found in the System Information menu (See the “System information” section in the “Information Menu” chapter.) If you are using a DHCP server that also does BOOTP, you do not have to configure the MAC address.
- Configuring manually—If your network does not support BOOTP, you must configure the management port with an IP address.

## Establishing a Telnet connection

A Telnet connection offers the convenience of accessing the GbE2 Interconnect Switch from any workstation connected to the network. Telnet provides the same options for user, operator, and administrator access as those available through the console port. By default, Telnet is enabled on the GbE2 Interconnect Switch. The GbE2 Interconnect Switch supports four concurrent Telnet connections.

Once the IP parameters are configured, you can access the CLI using a Telnet connection. To establish a Telnet connection with the GbE2 Interconnect Switch, run the Telnet program on your workstation and enter the **telnet** command, followed by the GbE2 Interconnect Switch IP address:

```
telnet <GbE2 Interconnect Switch IP address>
```

You will then be prompted to enter a password. The password entered determines the access level: administrator, operator, or user. See the “Accessing the GbE2 Interconnect Switch” section later in this chapter for description of default passwords.

## Establishing an SSH connection

Although a remote network administrator can manage the configuration of a GbE2 Interconnect Switch via Telnet, this method does not provide a secure connection. The Secure Shell (SSH) protocol enables you to securely log into the GbE2 Interconnect Switch over the network.

As a secure alternative to using Telnet to manage GbE2 Interconnect Switch configuration, SSH ensures that all data sent over the network is encrypted and secure. In order to use SSH, you must first configure it on the GbE2 Interconnect Switch. See the “Secure Shell Server configuration” section in the “Configuration Menu” chapter for information on how to configure SSH.

The GbE2 Interconnect Switch can perform only one session of key/cipher generation at a time. Therefore, an SSH/Secure Copy (SCP) client will not be able to log in if the GbE2 Interconnect Switch is performing key generation at that time or if another client has just logged in before this client. Similarly, the system will fail to perform the key generation if an SSH/SCP client is logging in at that time.

The supported SSH encryption and authentication methods are listed below.

- Server Host Authentication—Client RSA authenticates the GbE2 Interconnect Switch in the beginning of every connection
- Key Exchange—RSA

- Encryption:
  - AES256-CBC
  - AES192-CBC
  - AES128-CBC
  - 3DES-CBC
  - 3DES
  - ARCFOUR
- User Authentication—Local password authentication; Remote Authentication Dial-in User Service (RADIUS)

The following SSH clients are supported:

- SSH 3.0.1 for Linux (freeware)
- SecureCRT® 4.1.8 (VanDyke Technologies, Inc.)
- OpenSSH\_3.9 for Linux (FC 3)
- FedoraCore 3 for SCP commands
- PuTTY Release 0.58 (Simon Tatham) for Windows



**NOTE:** The GbE2 Interconnect Switch implementation of SSH is based on versions 1.5 and 2.0, and supports SSH clients from version 1.0 through version 2.0. SSH clients of other versions are not supported. You may configure the client software to use protocol SSH version 1 or version 2.

By default, SSH service is not enabled on the GbE2 Interconnect Switch. Once the IP parameters are configured, you can access the command line interface to enable SSH.

To establish an SSH connection with the GbE2 Interconnect Switch, run the SSH program on your workstation by issuing the **ssh** command, followed by the user account name and the GbE2 Interconnect Switch IP address:

```
>> # ssh <user><GbE2 Interconnect Switch IP address>
```

You will then be prompted to enter your password.



**NOTE:** The first time you run SSH from your workstation, a warning message might appear. At the prompt, enter **yes** to continue.

## Accessing the GbE2 Interconnect Switch

To enable better switch management and user accountability, the GbE2 Interconnect Switch provides different levels or classes of user access. Levels of access to the CLI and Web management functions and screens increase as needed to perform various GbE2 Interconnect Switch management tasks. The three levels of access are:

- User—User interaction with the GbE2 Interconnect Switch is completely passive; nothing can be changed on the GbE2 Interconnect Switch. Users may display information that has no security or privacy implications, such as GbE2 Interconnect Switch statistics and current operational state information.
- Operator—Operators can only effect temporary changes on the GbE2 Interconnect Switch. These changes will be lost when the GbE2 Interconnect Switch is rebooted/reset. Operators have access to the GbE2 Interconnect Switch management features used for daily GbE2 Interconnect Switch operations. Because any changes an operator makes are undone by a reset of the GbE2 Interconnect Switch, operators cannot severely impact switch operation, but do have access to the Maintenance menu.
- Administrator—Only administrators can make permanent changes to the GbE2 Interconnect Switch configuration, changes that are persistent across a reboot/reset of the GbE2 Interconnect Switch. Administrators can access GbE2 Interconnect Switch functions to configure and troubleshoot problems on the switch. Because administrators can also make temporary (operator-level) changes as well, they must be aware of the interactions between temporary and permanent changes.

Access to GbE2 Interconnect Switch functions is controlled through the use of unique usernames and passwords. Once you are connected to the GbE2 Interconnect Switch via the local console, Telnet, or SSH, you are prompted to enter a password. The password entered determines the access level. The default user names/password for each access level is listed in the following table.



**NOTE:** It is recommended that you change default GbE2 Interconnect Switch passwords after initial configuration and as regularly as required under your network security policies. For more information, see the “Setting passwords” section in the “First-time configuration” chapter.

**Table 2** User access levels

User account	Description and tasks performed
User	The user has no direct responsibility for GbE2 Interconnect Switch management. He or she can view all GbE2 Interconnect Switch status information and statistics, but cannot make any configuration changes to the GbE2 Interconnect Switch. The user account is enabled by default.
Operator	The operator manages all functions of the GbE2 Interconnect Switch. The operator can reset ports or the entire GbE2 Interconnect Switch. By default, the operator account is disabled and has no password.
Administrator	The super user administrator has complete access to all menus, information, and configuration commands on the GbE2 Interconnect Switch, including the ability to change both the user and administrator passwords.



**NOTE:** With the exception of the **admin** user, setting the password to an empty value can disable access to each user level. By default, **user** and **admin** are enabled.

Once you enter the administrator password and it is verified, you are given complete access to the GbE2 Interconnect Switch.

After logging in, the Main Menu of the CLI is displayed. See the “Menu basics” chapter for a summary of the Main Menu options.

```
[Main Menu]
info       - Information Menu
stats      - Statistics Menu
cfg        - Configuration Menu
oper       - Operations Command Menu
boot       - Boot Options Menu
maint      - Maintenance Menu
diff       - Show pending config changes [global command]
apply      - Apply pending config changes [global command]
save       - Save updated config to FLASH [global command]
revert     - Revert pending or applied changes [global command]
exit       - Exit [global command, always available]

>> Main#
```

## Idle timeout

By default, the GbE2 Interconnect Switch will disconnect your console, Telnet, or SSH session after five minutes of inactivity. This function is controlled by the idle timeout parameter, which can be set from 1 to 60 minutes. For information on changing this parameter, see the “System configuration” section in the “Configuration Menu” chapter.

# Typographical conventions

The following table describes the typographic styles used in this guide:

**Table 3** Typographic conventions

Typeface or symbol	Meaning	Example
AaBbCc123	This type depicts onscreen computer output and prompts.	Main#
AaBbCc123	This type displays in command examples and shows text that must be typed in exactly as shown.	Main# sys
<AaBbCc123>	This italicized type displays in command examples as a parameter placeholder. Replace the indicated text with the appropriate real name or value when using the command. Do not type the brackets. This also shows guide titles, special terms, or words to be emphasized.	To establish a Telnet session, enter: host# telnet <IP address> Read your user guide thoroughly.
[ ]	Command items shown inside brackets are optional and can be used or excluded as the situation demands. Do not type the brackets.	host# ls [-a]

# Menu basics

## Introduction

The HP ProLiant BL p-Class GbE2 Interconnect Switch CLI is used for viewing switch information and statistics. In addition, the administrator can use the CLI for performing all levels of GbE2 Interconnect Switch configuration.

To make the CLI easy to use, the various commands have been logically grouped into a series of menus and submenus. Each menu displays a list of commands and/or submenus that are available, along with a summary of what each command will do. Below each menu is a prompt where you can enter any command appropriate to the current menu.

This chapter describes the Main Menu commands, and provides a list of commands and shortcuts that are commonly available from all the menus within the CLI.

## Main Menu

The Main Menu displays after a successful connection and login. The following table shows the Main Menu for the administrator login. Some features are not available under the user login.

```
[Main Menu]
info      - Information Menu
stats     - Statistics Menu
cfg       - Configuration Menu
oper      - Operations Command Menu
boot      - Boot Options Menu
maint     - Maintenance Menu
diff      - Show pending config changes [global command]
apply     - Apply pending config changes [global command]
save      - Save updated config to FLASH [global command]
revert    - Revert pending or applied changes [global command]
exit      - Exit [global command, always available]
```

## Menu summary

The Main Menu displays the following submenus:

- **Information Menu**  
The Information Menu provides submenus for displaying information about the current status of the GbE2 Interconnect Switch: from basic system settings to VLANs, and more.
- **Statistics Menu**  
This menu provides submenus for displaying GbE2 Interconnect Switch performance statistics. Included are port, IF, IP, ICMP, TCP, UDP, SNMP, routing, ARP, and DNS.
- **Configuration Menu**  
This menu is available only from an administrator login. It includes submenus for configuring every aspect of the GbE2 Interconnect Switch. Changes to configuration are not active until explicitly applied. Changes can be saved to non-volatile memory (NVRAM).
- **Operations Command Menu**  
Operations-level commands are used for making immediate and temporary changes to GbE2 Interconnect Switch configuration. This menu is used for bringing ports temporarily in and out of service. This menu is available only from an administrator and operator login.
- **Boot Options Menu**  
The Boot Options Menu is available only from an administrator login. This menu is used for upgrading GbE2 Interconnect Switch software, selecting configuration blocks, and for resetting the GbE2 Interconnect Switch when necessary. This menu is also used to set the GbE2 Interconnect Switch back to factory settings.
- **Maintenance Menu**  
This menu is used for debugging purposes, enabling you to generate a technical support dump of the critical state information in the GbE2 Interconnect Switch, and to clear entries in the Forwarding Database and the Address Resolution Protocol (ARP) and routing tables. This menu is available only from an administrator and operator login.

## Global commands

Some basic commands are recognized throughout the menu hierarchy. These commands are useful for obtaining online Help, navigating through menus, and for applying and saving configuration changes.

For help on a specific command, type help. The following screen displays:

```
Global Commands: [can be issued from any menu]
help             up             print             pwd
lines           verbose        exit             quit
diff            apply          save            revert
ping            traceroute    telnet          history
pushd           popd            who

The following are used to navigate the menu structure:
.   Print current menu
..  Move up one menu level
/   Top menu if first, or command separator
!   Execute command from history
```

The following table describes the global commands.

**Table 4** Global commands

Command	Action
? command or help	Provides usage information about a specific command on the current menu. When used without the command parameter, a summary of the global commands is displayed.
. or print	Displays the current menu.
.. or up	Moves up one level in the menu structure.
/	If placed at the beginning of a command, displays the Main Menu. Otherwise, this is used to separate multiple commands placed on the same line.
lines	Sets the number of lines (n) that display on the screen at one time. The default is 24 lines. When used without a value, the current setting is displayed.
diff	Shows any pending configuration changes that have not been applied. diff flash displays all pending configuration changes that have been applied but not saved to flash memory (NVRAM), as well as those that have not been applied.
apply	Applies pending configuration changes.
save	Saves the active configuration to backup, and saves the current configuration as active. save n saves the current configuration as active, without saving the active configuration to backup.
revert	Removes changes that have been made, but not applied. revert apply removes all changes that have not been saved.
exit or quit	Exits from the command line interface and logs out.
ping	Verifies station-to-station connectivity across the network. The format is: ping <host name>   <IP address> [ (number of tries)> [ msec delay ]] <ul style="list-style-type: none"><li>• IP address is the hostname or IP address of the device.</li><li>• number of tries (optional) is the number of attempts (1-32).</li><li>• msec delay (optional) is the number of milliseconds between attempts.</li></ul>
traceroute	Identifies the route used for station-to-station connectivity across the network. The format is: traceroute <host name>   <IP address> [<max-hops> [ msec delay ]] <ul style="list-style-type: none"><li>• IP address is the hostname or IP address of the target station.</li><li>• max-hops (optional) is the maximum distance to trace (1-16 devices)</li><li>• msec delay (optional) is the number of milliseconds to wait for the response.</li></ul>
pwd	Displays the command path used to reach the current menu.

**Table 4** Global commands

Command	Action
verbose n	Sets the level of information displayed on the screen: <ul style="list-style-type: none"> <li>• 0 = Quiet: Nothing displays except errors, not even prompts.</li> <li>• 1 = Normal: Prompts and requested output are shown, but no menus.</li> <li>• 2 = Verbose: Everything is shown. This is the default.</li> <li>• When used without a value, the current setting is displayed.</li> </ul>
telnet	This command is used to Telnet out of the GbE2 Interconnect Switch. The format is: telnet <hostname>   <IP address> [port]
history	Displays the history of the last ten commands.
pushd	Remembers the current location in the directory of menu commands.
popd	Returns to the last <b>pushd</b> location.
who	Displays users who are logged in.

## Command line history and editing

Using the command line interface, you can retrieve and modify previously entered commands with just a few keystrokes. The following options are available globally at the command line:

**Table 5** Command line history and editing options

Option	Description
history	Displays a numbered list of the last ten previously entered commands.
!!	Repeats the last entered command.
!n	Repeats the nth command shown on the history list.
<Ctrl-p> or <b>Up arrow</b> key	Recalls the previous command from the history list. This can be used multiple times to work backward through the last ten commands. The recalled command can be entered as is, or edited using the options below.
<Ctrl-n> or <b>Down arrow</b> key	Recalls the next command from the history list. This can be used multiple times to work forward through the last ten commands. The recalled command can be entered as is, or edited using the options below.
<Ctrl-a>	Moves the cursor to the beginning of the command line.
<Ctrl-e>	Moves cursor to the end of the command line.
<Ctrl-b> or <b>Left arrow</b> key	Moves the cursor back one position to the left.
<Ctrl-f> or <b>Right arrow</b> key	Moves the cursor forward one position to the right.
<Backspace> or <b>Delete</b> key	Erases one character to the left of the cursor position.
<Ctrl-d>	Deletes one character at the cursor position.
<Ctrl-k>	Erases all characters from the cursor position to the end of the command line.
<Ctrl-l>	Redisplays the current line.
<Ctrl-u>	Clears the entire line.
Other keys	Inserts new characters at the cursor position.
.	Prints the current level menu list.
..	Moves to the previous directory level.



## Command line interface shortcuts

The following shortcuts allow you to enter commands quickly and easily.

### Command stacking

As a shortcut, you can type multiple commands on a single line, separated by forward slashes (/). You can connect as many commands as required to access the menu option that you want.

For example, the keyboard shortcut to access the Simple Network Management Protocol (SNMP) Configuration Menu from the Main# prompt is:

```
Main# cfg/sys/ssnmp/name
```

### Command abbreviation

Most commands can be abbreviated by entering the first characters that distinguish the command from the others in the same menu or submenu.

For example, the command shown above could also be entered as:

```
Main# c/sn/n
```

### Tab completion

By entering the first letter of a command at any menu prompt and pressing the Tab key, the CLI will display all commands or options in that menu that begin with that letter. Entering additional letters will further refine the list of commands or options displayed.

If only one command fits the input text when the Tab key is pressed, that command will be supplied on the command line, waiting to be entered. If the Tab key is pressed without any input on the command line, the currently active menu displays.

# First-time configuration

## Introduction

This chapter describes how to perform first-time configuration and how to change system passwords.

To begin first-time configuration of the switch, perform the following steps.

1. Connect to the GbE2 Interconnect Switch console. After connecting, the login prompt displays.

```
HP ProLiant BL p-Class C-GbE2 Interconnect Switch A
Copyright (C) 2003 Hewlett-Packard Development Company, L.P.
```

Password:

2. Enter admin as the default administrator password.

The system displays the Main Menu with administrator privileges.

```
[Main Menu]
info      - Information Menu
stats     - Statistics Menu
cfg       - Configuration Menu
oper      - Operations Command Menu
boot      - Boot Options Menu
maint     - Maintenance Menu
diff      - Show pending config changes [global command]
apply     - Apply pending config changes [global command]
save      - Save updated config to FLASH [global command]
revert    - Revert pending or applied changes [global command]
exit      - Exit [global command, always available]
```

>> Main#

3. From the Main Menu, enter the following command to access the Configuration Menu:

```
Main# /cfg
```

The Configuration Menu is displayed.

```
[Configuration Menu]
sys       - System-wide Parameter Menu
port      - Port Menu
l2        - Layer 2 Menu
l3        - Layer 3 Menu
qos       - QOS Menu
acl       - Access Control List Menu
rmon      - RMON Menu
pmirr     - Port Mirroring Menu
ufd       - Uplink Failure Detection Menu
dump      - Dump current configuration to script file
ptcfg     - Backup current configuration to FTP/TFTP server
gtcfg     - Restore current configuration from FTP/TFTP server
cur       - Display current configuration
```

## Configure Simple Network Management Protocol support



**NOTE:** SNMP support is enabled by default.

1. Use the following command to enable SNMP:

```
>> # /cfg/sys/access/snmp disable|read only|read/write
```

2. Set SNMP read or write community string. By default, they are public and private respectively:

```
>> # /cfg/sys/ssnmp/rcomm|wcomm
```

3. When prompted, enter the proper community string.

4. Apply and save configuration if you are not configuring the GbE2 Interconnect Switch with Telnet support. Otherwise apply and save after the performing the “Optional Setup for Telnet Support” steps.

```
>> System# apply
>> System# save
```

## Setting passwords

HP recommends that you change all passwords after initial configuration and as regularly as required under your network security policies. See the “Accessing the GbE2 Interconnect Switch” section in the “Command line interface” chapter for a description of the user access levels.

To change the user, operator, or administrator password, you must log in using the administrator password. Passwords cannot be modified from the user or operator command mode.



**NOTE:** If you forget your administrator password, call HP technical support for help using the password fix-up mode.

## Changing the default administrator password

The administrator has complete access to all menus, information, and configuration commands, including the ability to change the user, operator, and administrator passwords.

The default password for the administrator account is admin. To change the default password:

1. Connect to the GbE2 Interconnect Switch and log in using the admin password.
2. From the Main Menu, use the following command to access the Configuration Menu:

```
Main# /cfg
```

The Configuration Menu is displayed.

```
[Configuration Menu]
sys      - System-wide Parameter Menu
port     - Port Menu
l2       - Layer 2 Menu
l3       - Layer 3 Menu
qos      - QOS Menu
acl      - Access Control List Menu
rmon     - RMON Menu
pmirr    - Port Mirroring Menu
ufd      - Uplink Failure Detection Menu
dump     - Dump current configuration to script file
ptcfg    - Backup current configuration to FTP/TFTP server
gtcfg    - Restore current configuration from FTP/TFTP server
cur      - Display current configuration
```

3. From the Configuration Menu, use the following command to select the System Menu:

```
>> Configuration# sys
```

The System Menu is displayed.

```
[System Menu]
syslog      - Syslog Menu
sshd        - SSH Server Menu
radius      - RADIUS Authentication Menu
tacacs+     - TACACS+ Authentication Menu
ntp         - NTP Server Menu
ssnmp       - System SNMP Menu
access      - System Access Menu
date        - Set system date
time        - Set system time
timezone    - Set system timezone (daylight savings)
idle        - Set timeout for idle CLI sessions
notice      - Set login notice
bannr       - Set login banner
hprompt     - Enable/disable display hostname (sysName) in CLI prompt
bootp       - Enable/disable use of BOOTP
reminders   - Enable/disable Reminders
cur         - Display current system-wide parameters
```

4. Enter the following command to set the administrator password:

```
System# access/user/admpw
```

5. Enter the current administrator password at the prompt:

```
Changing ADMINISTRATOR password; validation required...

Enter current administrator password:
```



**NOTE:** If you forget your administrator password, call your technical support representative for help using the password fix-up mode.

6. Enter the new administrator password at the prompt:

```
Enter new administrator password:
```

7. Enter the new administrator password, again, at the prompt:

```
Re-enter new administrator password:
```

8. Apply and save your change by entering the following commands:

```
System# apply
System# save
```

## Changing the default user password

The user login has limited control of the GbE2 Interconnect Switch. Through a user account, you can view GbE2 Interconnect Switch information and statistics, but you cannot make configuration changes.

The default password for the user account is user. This password cannot be changed from the user account. Only the administrator has the ability to change passwords, as shown in the following procedure.

1. Connect to the GbE2 Interconnect Switch and log in using the **admin** password.
2. From the Main Menu, use the following command to access the Configuration Menu:

```
Main# cfg
```

3. From the Configuration Menu, use the following command to select the System Menu:

```
>> Configuration# sys
```

4. Enter the following command to set the user password:

```
System# access/user/usrpw
```

5. Enter the current administrator password at the prompt.  
Only the administrator can change the user password. Entering the administrator password confirms your authority.

```
Changing USER password; validation required...  
Enter current administrator password:
```

6. Enter the new user password at the prompt:

```
Enter new user password:
```

7. Enter the new user password, again, at the prompt:

```
Re-enter new user password:
```

8. Apply and save your changes:

```
System# apply  
System# save
```

## Changing the default operator password

The operator manages all functions of the GbE2 Interconnect Switch. The operator can reset ports or the entire GbE2 Interconnect Switch. Operators can only effect temporary changes on the GbE2 Interconnect Switch. These changes will be lost when the GbE2 Interconnect Switch is rebooted/reset. Operators have access to the GbE2 Interconnect Switch management features used for daily GbE2 Interconnect Switch operations. Because any changes an operator makes are undone by a reset of the GbE2 Interconnect Switch, operators cannot severely impact GbE2 Interconnect Switch operation.

By default, the operator account is disabled and has no password. This password cannot be changed from the operator account. Only the administrator has the ability to change passwords, as shown in the following procedure.

1. Connect to the GbE2 Interconnect Switch and log in using the **admin** password.
2. From the Main Menu, use the following command to access the Configuration Menu:

```
Main# cfg
```

3. From the Configuration Menu, use the following command to select the System Menu:

```
>> Configuration# sys
```

4. Enter the following command to set the operator password:

```
System# access/user/opw
```

5. Enter the current administrator password at the prompt.  
Only the administrator can change the user password. Entering the administrator password confirms your authority.

```
Changing OPERATOR password; validation required...  
Enter current administrator password:
```

6. Enter the new operator password at the prompt:

```
Enter new operator password:
```

7. Enter the new operator password, again, at the prompt:

```
Re-enter new operator password:
```

8. Apply and save your changes:

```
System# apply  
System# save
```

# Information Menu

## Introduction

You can view configuration information for the GbE2 Interconnect Switch in the user, operator, and administrator command modes. This chapter discusses how to use the CLI to display GbE2 Interconnect Switch information.

## Menu overview

**Command:** /info

```
[Information Menu]
  sys      - System Information Menu
  12       - Layer 2 Information Menu
  13       - Layer 3 Information Menu
  rmon     - Show RMON information
  link     - Show link status
  port     - Show port information
  geaport  - Show system port and gea port mapping
  ufd      - Show Uplink Failure Detection information
  dump     - Dump all information
```

The following table describes the Information Menu options.

**Table 6** Information Menu options

Command	Usage
sys	Displays system information.
12	Displays the Layer 2 Information Menu.
13	Displays the Layer 3 Information Menu.
rmon	Displays the Remote Monitoring Information Menu.
link	Displays configuration information about each port, including: <ul style="list-style-type: none"><li>• Port number</li><li>• Port speed (10 Mb/s, 100 Mb/s, 1000 Mb/s, or any)</li><li>• Duplex mode (half, full, or any)</li><li>• Flow control for transmit and receive (no, yes, or any)</li><li>• Link status (up or down)</li></ul>
port	Displays port status information, including: <ul style="list-style-type: none"><li>• Port number</li><li>• Whether the port uses VLAN tagging or not</li><li>• Port VLAN ID (PVID)</li><li>• Port name</li><li>• VLAN membership</li></ul>
geaport	Displays GEA port mapping information, used by service personnel.
ufd	Displays Uplink Failure Detection information
dump	Dumps all GbE2 Interconnect Switch information available from the Information Menu (10K or more, depending on your configuration). If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

## System Information Menu

**Command:** /info/sys

```
[System Menu]
  snmpv3 - SNMPv3 Information Menu
  general - Show general system information
  log     - Show last 30 syslog messages
  user    - Show current user status
  dump    - Dump all system information
```

The following table describes the System Information Menu options.

**Table 7** System Information Menu options

Command	Usage
snmpv3	Displays the SNMP v3 Menu.
general	Displays system information, including: <ul style="list-style-type: none"><li>• System date and time</li><li>• Switch model name and number</li><li>• Switch name and location</li><li>• Time of last boot</li><li>• MAC address of the switch management processor</li><li>• IP address of IP interface #1</li><li>• Hardware version and part number</li><li>• Software image file and version number</li><li>• Configuration name</li><li>• Log-in banner, if one is configured</li></ul>
log	Displays 100 most recent syslog messages.
user	Displays the User Access Information Menu.
dump	Dumps all switch information available from the Information Menu (10K or more, depending on your configuration).

## SNMPv3 Information Menu

**Command:** /info/sys/snmpv3

```
[SNMPv3 Information Menu]
  usm      - Show usmUser table information
  view     - Show vacmViewTreeFamily table information
  access   - Show vacmAccess table information
  group    - Show vacmSecurityToGroup table information
  comm     - Show community table information
  taddr    - Show targetAddr table information
  tparam   - Show targetParams table information
  notify   - Show notify table information
  dump     - Show all SNMPv3 information
```

SNMP version 3 (SNMPv3) is an extensible SNMP Framework that supplements the SNMPv2 Framework by supporting the following:

- a new SNMP message format
- security for messages
- access control
- remote configuration of SNMP parameters

For more details on the SNMPv3 architecture, see RFC2271 to RFC2275.

The following table describes the SNMPv3 Information Menu options.

**Table 8** SNMPv3 Information Menu options

Command	Usage
usm	Displays User Security Model (USM) table information.
view	Displays information about view name, subtrees, mask and type of view.
access	Displays View-based Access Control information.
group	Displays information about the group that includes the security model, user name, and group name.
comm	Displays information about the community table.
taddr	Displays the Target Address table.
tparam	Displays the Target parameters table.
notify	Displays the Notify table.
dump	Displays all the SNMPv3 information.

## SNMPv3 USM User Table information

**Command:** /info/sys/snmpv3/usm

```
usmUser Table:
User Name          Protocol
-----
adminmd5           HMAC_MD5, DES PRIVACY
adminsha           HMAC_SHA, DES PRIVACY
v1v2only           NO AUTH, NO PRIVACY
```

The User-based Security Model (USM) in SNMPv3 provides security services such as authentication and privacy of messages. This security model makes use of a defined set of user identities displayed in the USM user table. The USM user table contains information like:

- the user name
- a security name in the form of a string whose format is independent of the Security Model
- an authentication protocol, which is an indication that the messages sent on behalf of the user can be authenticated
- the privacy protocol.

The following table describes the SNMPv3 User Table information.

**Table 9** User Table parameters

Field	Description
User Name	This is a string that represents the name of the user that you can use to access the switch.
Protocol	This indicates whether messages sent on behalf of this user are protected from disclosure using a privacy protocol. GbE2 software supports DES algorithm for privacy. The software also supports two authentication algorithms: MD5 and HMAC-SHA.



## SNMPv3 View Table information

**Command:** /info/sys/snmpv3/view

View Name	Subtree	Mask	Type
-----	-----	-----	-----
iso	1		included
v1v2only	1		included
v1v2only	1.3.6.1.6.3.15		excluded
v1v2only	1.3.6.1.6.3.16		excluded
v1v2only	1.3.6.1.6.3.18		excluded

The user can control and restrict the access allowed to a group to only a subset of the management information in the management domain that the group can access within each context by specifying the group's rights in terms of a particular MIB view for security reasons.

The following table describes the SNMPv3 View Table information.

**Table 10** View Table parameters

Field	Description
View Name	Displays the name of the view.
Subtree	Displays the MIB subtree as an OID string. A view subtree is the set of all MIB object instances which have a common Object Identifier prefix to their names.
Mask	Displays the bit mask.
Type	Displays whether a family of view subtrees is included or excluded from the MIB view.

## SNMPv3 Access Table information

**Command:** /info/sys/snmpv3/access

Group Name	Prefix	Model	Level	Match	ReadV	WriteV	NotifyV
-----	-----	-----	-----	-----	-----	-----	-----
v1v2grp		snmpv1	noAuthNoPriv	exact	iso	iso	v1v2only
admingrp		usm	authPriv	exact	iso	iso	iso

The access control sub system provides authorization services.

The vacmAccessTable maps a group name, security information, a context, and a message type, which could be the read or write type of operation or notification into a MIB view.

The View-based Access Control Model defines a set of services that an application can use for checking access rights of a group. This group's access rights are determined by a read-view, a write-view, and a notify-view. The read-view represents the set of object instances authorized for the group while reading the objects. The write-view represents the set of object instances authorized for the group when writing objects. The notify-view represents the set of object instances authorized for the group when sending a notification.

The following table describes the SNMPv3 Access Table information.

**Table 11** Access Table parameters

Field	Description
Group Name	Displays the name of group.
Prefix	Displays the prefix that is configured to match the values.
Model	Displays the security model used, for example, SNMPv1, or SNMPv2 or USM.
Level	Displays the minimum level of security required to gain rights of access. For example, noAuthNoPriv, authNoPriv, or auth-Priv.
Match	Displays the match for the contextName. The options are: exact and prefix.

**Table 11** Access Table parameters

Field	Description
ReadV	Displays the MIB view to which this entry authorizes the read access.
WriteV	Displays the MIB view to which this entry authorizes the write access.
NotifyV	Displays the Notify view to which this entry authorizes the notify access.

## SNMPv3 Group Table information

**Command:** /info/sys/snmpv3/group

Sec Model	User Name	Group Name
-----	-----	-----
snmpv1	v1v2only	v1v2grp
usm	adminmd5	admingrp
usm	adminsha	admingrp

A group is a combination of security model and security name that defines the access rights assigned to all the security names belonging to that group. The group is identified by a group name.

The following table describes the SNMPv3 Group Table information.

**Table 12** Group Table parameters

Field	Description
Sec Model	Displays the security model used, which is any one of: USM, SNMPv1, SNMPv2, and SNMPv3.
User Name	Displays the name for the group.
Group Name	Displays the access name of the group.

## SNMPv3 Community Table information

**Command:** /info/sys/snmpv3/comm

Index	Name	User Name	Tag
-----	-----	-----	-----
trap1	public	v1v2only	v1v2trap

This command displays the community table information stored in the SNMP engine.

The following table describes the SNMPv3 Community Table information.

**Table 13** Community Table Information parameters

Field	Description
Index	Displays the unique index value of a row in this table.
Name	Displays the community string, which represents the configuration.
User Name	Displays the User Security Model (USM) user name.
Tag	Displays the community tag. This tag specifies a set of transport endpoints from which a command responder application accepts management requests and to which a command responder application sends an SNMP trap.

## SNMPv3 Target Address Table information

**Command:** /info/sys/snmpv3/taddr

Name	Transport Addr	Port	Taglist	Params
-----	-----	-----	-----	-----
trap1	47.81.25.66	162	v1v2trap	v1v2param

This command displays the SNMPv3 target address table information, which is stored in the SNMP engine.

The following table describes the SNMPv3 Target Address Table information.

**Table 14** Target Address Table Information parameters

Field	Description
Name	Displays the locally arbitrary, but unique identifier associated with this snmpTargetAddrEntry.
Transport Addr	Displays the transport addresses.
Port	Displays the SNMP UDP port number.
Taglist	This column contains a list of tag values which are used to select target addresses for a particular SNMP message.
Params	The value of this object identifies an entry in the snmpTargetParamsTable. The identified entry contains SNMP parameters to be used when generating messages to be sent to this transport address.

## SNMPv3 Target Parameters Table information

**Command:** /info/sys/snmpv3/tparam

Name	MP Model	User Name	Sec Model	Sec Level
-----	-----	-----	-----	-----
v1v2param	snmpv2c	v1v2only	snmpv1	noAuthNoPriv

The following table describes the SNMPv3 Target Parameters Table information.

**Table 15** Target Parameters Table

Field	Description
Name	Displays the locally arbitrary, but unique identifier associated with this snmpTargetParamsEntry.
MP Model	Displays the Message Processing Model used when generating SNMP messages using this entry.
User Name	Displays the securityName, which identifies the entry on whose behalf SNMP messages will be generated using this entry.
Sec Model	Displays the security model used when generating SNMP messages using this entry. The system may choose to return an inconsistentValue error if an attempt is made to set this variable to a value for a security model which the system does not support.
Sec Level	Displays the level of security used when generating SNMP messages using this entry.

# SNMPv3 Notify Table information

**Command:** /info/sys/snmpv3/notify

Name	Tag
-----	-----
v1v2trap	v1v2trap

The following table describes the SNMPv3 Notify Table information.

**Table 16** SNMPv3 Notify Table

Field	Description
Name	The locally arbitrary, but unique identifier associated with this snmpNotifyEntry.
Tag	This represents a single tag value which is used to select entries in the snmpTargetAddrTable. Any entry in the snmpTargetAddrTable that contains a tag value equal to the value of this entry is selected. If this entry contains a value of zero length, no entries are selected.

# SNMPv3 dump

**Command:** /info/sys/snmpv3/dump

```
Engine ID = 80:00:07:50:03:00:0F:6A:F8:EF:00
usmUser Table:
User Name Protocol
-----
admin NO AUTH, NO PRIVACY
adminmd5 HMAC_MD5, DES PRIVACY
adminsha HMAC_SHA, DES PRIVACY
v1v2only NO AUTH, NO PRIVACY

vacmAccess Table:
Group Name Prefix Model Level Match ReadV WriteV NotifyV
-----
admin usm noAuthNoPriv exact org org org
v1v2grp snmpv1 noAuthNoPriv exact org org v1v2only
admingrp usm authPriv exact org org org

vacmViewTreeFamily Table:
View Name Subtree Mask Type
-----
org 1.3 included
v1v2only 1.3 included
v1v2only 1.3.6.1.6.3.15 excluded
v1v2only 1.3.6.1.6.3.16 excluded
v1v2only 1.3.6.1.6.3.18 excluded

vacmSecurityToGroup Table:
Sec Model User Name Group Name
-----
snmpv1 v1v2only v1v2grp
usm admin admin
usm adminsha admingrp

snmpCommunity Table:
Index Name User Name Tag
-----

snmpNotify Table:
Name Tag
-----

snmpTargetAddr Table:
Name Transport Addr Port Taglist Params
-----

snmpTargetParams Table:
Name MP Model User Name Sec Model Sec Level
-----
```

## System information

**Command:** /info/sys/gen

```
System Information at 17:29:18 Mon Feb 26, 2007

HP ProLiant BL p-Class C-GbE2 Interconnect Switch B
sysName: 2JUnit1
sysLocation: Houston
RackID: 3334KJP3D030
RackName: BkRm3
Enclosure: D304JTK7D013
EnclosureName: Enterprise
Slot: B

Switch is up 1 days, 2 hours, 3 minutes and 40 seconds.
Last boot: 17:25:38 Mon Feb 26, 2007 (software reset)

MAC address: 00:01:81:2e:ae:e0 IP (If 2) address: 10.30.52.193
Revision: 0A
Switch Serial No: K72550AQKP1863
Hardware Part No: 336181-001 Spare Part No: 321148-001
Interconnect Module Part Number : 283192-B21 Spare Part Number:
321147-001
OctalFC Interconnect Module not present
Software: Version 3.2.0 (FLASH image1), active configuration
```

System information includes:

- System date and time
- GbE2 Interconnect Switch model name and number
- GbE2 Interconnect Switch name and location
- Time of last boot
- MAC address of the GbE2 Interconnect Switch management processor
- IP address of the switch
- Hardware version and part number
- Software image file and version number
- Current configuration block (active, backup, or factory default)
- Login banner, if one is configured

# Show last 100 syslog messages

**Command:** /info/sys/log

Date	Time	Severity level	Message
----	----	-----	-----
Jul 8	17:25:41	NOTICE	system: link up on port 1
Jul 8	17:25:41	NOTICE	system: link up on port 8
Jul 8	17:25:41	NOTICE	system: link up on port 7
Jul 8	17:25:41	NOTICE	system: link up on port 12
Jul 8	17:25:41	NOTICE	system: link up on port 11
Jul 8	17:25:41	NOTICE	system: link up on port 14
Jul 8	17:25:41	NOTICE	system: link up on port 13
Jul 8	17:25:41	NOTICE	system: link up on port 16
Jul 8	17:25:41	NOTICE	system: link up on port 15
Jul 8	17:25:41	NOTICE	system: link up on port 17
Jul 8	17:25:41	NOTICE	system: link up on port 20
Jul 8	17:25:41	NOTICE	system: link up on port 22
Jul 8	17:25:41	NOTICE	system: link up on port 23
Jul 8	17:25:41	NOTICE	system: link up on port 21
Jul 8	17:25:42	NOTICE	system: link up on port 4
Jul 8	17:25:42	NOTICE	system: link up on port 3
Jul 8	17:25:42	NOTICE	system: link up on port 6
Jul 8	17:25:42	NOTICE	system: link up on port 5
Jul 8	17:25:42	NOTICE	system: link up on port 10
Jul 8	17:25:42	NOTICE	system: link up on port 9

Each message contains a date and time field and has a severity level associated with it. One of eight different prefixes is used to indicate the condition:

- EMERG—indicates the system is unusable
- ALERT—indicates action should be taken immediately
- CRIT—indicates critical conditions
- ERR—indicates error conditions or eroded operations
- WARNING—indicates warning conditions
- NOTICE—indicates a normal but significant condition
- INFO—indicates an information message
- DEBUG—indicates a debug-level message

# System user information

**Command:** /info/sys/user

Usernames:			
user	-	enabled	
oper	-	disabled	
admin	-	Always Enabled	
Current User ID table:			
1:	name tech1	, ena, cos user	, password valid, online
2:	name tech2	, ena, cos user	, password valid, offline

The following table describes the User Name information.

**Table 17** User Name Information menu

Field	Usage
user	Displays the status of the user access level.
oper	Displays the status of the oper (operator) access level.
admin	Displays the status of the admin (administrator) access level.
Current User ID Table	Displays the status of configured user IDs. To configure new user IDs, use the /cfg/sys/access/user/uid command.

## Layer 2 information

**Command:** /info/l2

```
[Layer 2 Menu]
fdb      - Forwarding Database Information Menu
lacp     - Link Aggregation Control Protocol Menu
hotlink  - Show Hot Links information
8021p    - Show QOS 802.1p information
acl      - Show ACL information
8021x    - Show 802.1x information
stp      - Show STP information
cist     - Show CIST information
trunk    - Show Trunk Group information
vlan     - Show VLAN information
gen      - Show general information
dump     - Dump all layer 2 information
```

The following table describes the Layer 2 Information menu options.

**Table 18** Layer 2 Information menu options

Command	Usage
fdb	Displays the Forwarding Database Information Menu.
lacp	Displays the Link Aggregation Control Protocol Information Menu.
hotlink	Displays Hot Links information.
8021p	Displays the 802.1p Information Menu.
acl	Displays Access Control List information.
8021x	Displays the 802.1x Information Menu.
stp	<p>In addition to seeing if STP is enabled or disabled, you can view the following STP bridge information:</p> <ul style="list-style-type: none"><li>• Priority</li><li>• Hello interval</li><li>• Maximum age value</li><li>• Forwarding delay</li><li>• Aging time</li></ul> <p>You can also refer to the following port-specific STP information:</p> <ul style="list-style-type: none"><li>• Port number and priority</li><li>• Cost</li><li>• State</li></ul>
cist	<p>Displays Common internal Spanning Tree (CIST) bridge information, including the following:</p> <ul style="list-style-type: none"><li>• Priority</li><li>• Hello interval</li><li>• Maximum age value</li><li>• Forwarding delay</li></ul> <p>You can also view port-specific CIST information, including the following:</p> <ul style="list-style-type: none"><li>• Port number and priority</li><li>• Cost</li><li>• State</li></ul>
trunk	When trunk groups are configured, you can view the state of each port in the various trunk groups.
vlan	<p>Displays VLAN configuration information, including:</p> <ul style="list-style-type: none"><li>• VLAN Number</li><li>• VLAN Name</li><li>• Status</li><li>• Port membership of the VLAN</li></ul>
gen	Displays general Layer 2 configuration information.



**Table 18** Layer 2 Information menu options

Command	Usage
dump	Dumps all switch information available from the Layer 2 menu (10K or more, depending on your configuration). If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

## FDB information menu

**Command:** /info/l2/fdb

```
[Forwarding Database Menu]
  find      - Show a single FDB entry by MAC address
  port      - Show FDB entries on a single port
  vlan      - Show FDB entries on a single VLAN
  state     - Show FDB entries by state
  dump      - Show all FDB entries
```

The forwarding database (FDB) contains information that maps the media access control (MAC) address of each known device to the GbE2 Interconnect Switch port where the device address was learned. The FDB also shows which other ports have seen frames destined for a particular MAC address.



**NOTE:** The master forwarding database supports up to 16K MAC address entries on the management processor (MP) per GbE2 Interconnect Switch.

**Table 19** FDB information menu /info/l2/fdb

Command	Usage
find <MAC address> [<VLAN>]	Displays a single database entry by its MAC address. You are prompted to enter the MAC address of the device. Enter the MAC address using the format: <b>xx:xx:xx:xx:xx:xx</b> . (For example: 08:00:20:12:34:56) You can also enter the MAC address using the format: <b>xxxxxxxxxxxx</b> . (For example: 080020123456)
port <port number>	Displays all FDB entries for a particular port.
vlan <1-4095>	Displays all FDB entries on a single VLAN.
state unknown ignore forward flood trunk ifmac	Displays all FDB entries that match a particular state.
dump	Displays all entries in the Forwarding Database.

## Show all FDB information

**Command:** /info/l2/fdb/dump

MAC address	VLAN	Port	State
00:02:01:00:00:00	300	23	FWD
00:02:01:00:00:01	300	23	FWD
00:02:01:00:00:02	300	23	FWD
00:02:01:00:00:03	300	23	FWD
00:02:01:00:00:04	300	23	FWD
00:02:01:00:00:05	300	23	FWD
00:02:01:00:00:06	300	23	FWD
00:02:01:00:00:07	300	23	FWD
00:02:01:00:00:08	300	23	FWD
00:02:01:00:00:09	300	23	FWD
00:02:01:00:00:0a	300	23	FWD
00:02:01:00:00:0b	300	23	FWD
00:02:01:00:00:0c	300	23	FWD

An address that is in the forwarding (FWD) state indicates that the GbE2 Interconnect Switch has learned it. When in the trunking (TRK) state, the port field represents the trunk group number. If the state for the port is listed as unknown

(UNK), the MAC address has not yet been learned by the GbE2 Interconnect Switch, but has only been seen as a destination address. When an address is in the unknown state, no outbound port is indicated.

## Clearing entries from the forwarding database

To delete a MAC address from the forwarding database (FDB), see the “Static FDB configuration” section in the “Configuration Menu” chapter. To clear the entire forwarding database (FDB), see the “Forwarding Database options” section in the “Maintenance Menu” chapter.

## Link Aggregation Control Protocol information

**Command:** /info/l2/lacp

```
[LACP Menu]
  aggr      - Show LACP aggregator information for the port
  port      - Show LACP port information
  dump      - Show all LACP ports information
```

The following table describes the Link Aggregation Control Protocol Menu options.

**Table 20** LACP information

Command	Usage
aggr	Displays LACP aggregator information for the port.
port	Displays LACP information for the port.
dump	Displays all LACP information parameters.

## LACP dump

**Command:** /info/l2/lacp/dump

```
>> LACP# dump
port  lacp      adminkey  operkey  selected  prio    attached  trunk
      aggr
-----
  1  off         1         1         n    32768    --        --
  2  off         2         2         n    32768    --        --
  3  off         3         3         n    32768    --        --
  4  off         4         4         n    32768    --        --
  5  off         5         5         n    32768    --        --
  6  off         6         6         n    32768    --        --
  7  off         7         7         n    32768    --        --
  8  off         8         8         n    32768    --        --
  ...
```

LACP dump includes the following information for each port in the GbE2 Interconnect Switch:

- lacp—Displays the port’s LACP mode (active, passive, or off).
- adminkey—Displays the value of the port’s adminkey.
- operkey—Shows the value of the port’s operational key.
- selected—Indicates whether the port has been selected to be part of a Link Aggregation Group.
- prio—Shows the value of the port priority.
- attached aggr—Displays the aggregator associated with each port.
- trunk—This value represents the LACP trunk group number.

## Hot Links Trigger information

**Command:** /info/l2/hotlink/trigger

```
Hot Links Info: Trigger

Current global Hot Links setting: ON
sndfdb disabled

Current Trigger 1 setting: enabled
Name "Corporate Uplinks", preempt disabled, fdelay 1 sec
    Active state: None

Master settings:
    port 20
Backup settings:
    port 21
```

Hot Links Trigger information includes the following information:

- Operational status (on or off)
- FDB Update status (enabled or disabled)
- Trigger configuration
- Trigger state

## 802.1p information

**Command:** /info/l2/8021p

```
Current priority to COS queue information:
Priority  COSq  Weight
-----  -
0         0     1
1         1     2
2         2     3
3         3     4
4         4     5
5         5     7
6         6    15
7         7     0

Current port priority information:
Port      Priority  COSq  Weight
-----  -
1         0     0     1
2         0     0     1
3         0     0     1
4         0     0     1
...
23        0     0     1
24        0     0     1
```

The following table describes the IEEE 802.1p priority to COS queue information.

**Table 21** 802.1p Priority to COS Queue information

Field	Description
Priority	Displays the 802.1p Priority level.
Cosq	Displays the Class of Service queue.
Weight	Displays the scheduling weight of the COS queue.

The following table describes the IEEE 802.1p port priority information.

**Table 22** 802.1p Port Priority information

Field	Description
-------	-------------

**Table 22** 802.1p Port Priority information

Field	Description
Port	Displays the port number.
Priority	Displays the 802.1p Priority level.
Cosq	Displays the Class of Service queue.
Weight	Displays the scheduling weight.

## ACL information

**Command:** /info/12/acl

```
Current ACL information:
-----
Filter 1 profile:
  Ethernet
    - VID      : 1/0xfff
    Actions    : Set COS to 0
Filter 2 profile:
  Ethernet
    - VID      : 1/0xfff
    Actions    : Permit
ACL block 1:
  - ACL 1
  - ACL 2
No ACL groups configured.
```

ACL information provides configuration parameters for each Access Control List. It also shows which ACLs are included in each ACL Block, and which ACLs and ACL Blocks are included in each ACL Group.

## 802.1x information

**Command:** /info/12/8021x

```

System capability : Authenticator
System status    : disabled
Protocol version : 1

Port    Auth Mode    Auth Status    Authenticator PAE State    Backend Auth State
-----
1      force-auth    unauthorized    initialize    initialize
2      force-auth    unauthorized    initialize    initialize
3      force-auth    unauthorized    initialize    initialize
4      force-auth    unauthorized    initialize    initialize
5      force-auth    unauthorized    initialize    initialize
6      force-auth    unauthorized    initialize    initialize
7      force-auth    unauthorized    initialize    initialize
8      force-auth    unauthorized    initialize    initialize
9      force-auth    unauthorized    initialize    initialize
10     force-auth    unauthorized    initialize    initialize
11     force-auth    unauthorized    initialize    initialize
12     force-auth    unauthorized    initialize    initialize
13     force-auth    unauthorized    initialize    initialize
14     force-auth    unauthorized    initialize    initialize
15     force-auth    unauthorized    initialize    initialize
16     force-auth    unauthorized    initialize    initialize
*17    force-auth    unauthorized    initialize    initialize
*18    force-auth    unauthorized    initialize    initialize
19     force-auth    unauthorized    initialize    initialize
20     force-auth    unauthorized    initialize    initialize
*21    force-auth    unauthorized    initialize    initialize
22     force-auth    unauthorized    initialize    initialize
*23    force-auth    unauthorized    initialize    initialize
*24    force-auth    unauthorized    initialize    initialize
-----
* - Port down or disabled

```

The following table describes the IEEE 802.1x parameters.

**Table 23** 802.1x information

Field	Description
Port	Displays each port's name.
Auth Mode	Displays the Access Control authorization mode for the port. The Authorization mode can be one of the following: <ul style="list-style-type: none"> <li>force-unauth</li> <li>auto</li> <li>force-auth</li> </ul>
Auth Status	Displays the current authorization status of the port, either authorized or unauthorized.
Authenticator PAE State	Displays the Authenticator Port Access Entity State. The PAE state can be one of the following: <ul style="list-style-type: none"> <li>initialize</li> <li>disconnected</li> <li>connecting</li> <li>authenticating</li> <li>authenticated</li> <li>aborting</li> <li>held</li> <li>forceAuth</li> </ul>
Backend Auth State	Displays the Backend Authorization State. The Backend Authorization state can be one of the following: <ul style="list-style-type: none"> <li>request</li> <li>response</li> <li>success</li> <li>fail</li> <li>timeout</li> <li>idle</li> </ul>

The following table describes the IEEE 802.1p port priority information.

**Table 24** 802.1p Port Priority information

Command	Usage
Port	Displays the port number.
Priority	Displays the 802.1p Priority level.
Cosq	Displays the Class of Service queue.
Weight	Displays the scheduling weight.

## Spanning Tree information

**Command:** /info/l2/stp

```
Spanning Tree Group 1: On (STP/PVST)
VLANs: 1

Current Root:          Path-Cost    Port    Hello MaxAge FwdDel Aging
8000 00:02:a5:d1:0f:ed      8        20      2      20     15    180

Parameters:  Priority    Hello    MaxAge    FwdDel    Aging
              32768      2        20        15        180

Port  Priority    Cost    FastFwd    State    Designated Bridge    Des Port
-----
  1         0        0         n    FORWARDING *
  2         0        0         n    FORWARDING *
  3         0        0         n    FORWARDING *
```

The GbE2 Interconnect Switch software uses the IEEE 802.1d Spanning Tree Protocol (STP). If RSTP/MSTP is turned on, see the “Rapid Spanning Tree information” section for Spanning Tree Group information. In addition to seeing if STP is enabled or disabled, you can view the following STP bridge information:

- Current root MAC address
- Path-Cost
- Port
- Hello interval
- Maximum age value
- Forwarding delay
- Aging time

You can also refer to the following port-specific STP information:

- Port number and priority
- Cost
- State
- Port Fast Forwarding state
- Designated bridge
- Designated port

The following table describes the STP parameters.

**Table 25** STP parameters

Parameter	Description
Current Root	Shows information about the root bridge for the Spanning Tree. Information includes the priority (hex) and MAC address of the root.
Path-Cost	Path-cost is the total path cost to the root bridge. It is the summation of the path cost between bridges (up to the root bridge).
Port	The current root port refers to the port on the GbE2 Interconnect Switch that receives data from the current root. Zero (0) indicates the root bridge of the STP.
Priority (bridge)	The bridge priority parameter controls which bridge on the network will become the STP root bridge.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from learning state to forwarding state.
Aging	The aging time parameter specifies, in seconds, the amount of time the bridge waits without receiving a packet from a station before removing the station from the Forwarding Database.
Priority (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost.
State	The State field shows the current state of the port. The State field can be one of the following: BLOCKING, LISTENING, LEARNING, FORWARDING, or DISABLED.
Designated bridge	Shows information about the bridge connected to each port, if applicable. Information includes the priority (hex) and MAC address of the Designated Bridge.
Designated port	The port ID of the port on the Designated Bridge to which this port is connected.

# Rapid Spanning Tree and Multiple Spanning Tree information

**Command:** /info/l2/stp

Spanning Tree Group 1: On (RSTP)									
VLANs: 1									
Current Root:		Path-Cost		Port	Hello	MaxAge	FwdDel	Aging	
8000 00:00:01:00:19:00		0		0	9	20	15	300	
Parameters:		Priority	Hello	MaxAge	FwdDel	Aging			
		32768	9	20	15	300			
Port	Prio	Cost	State	Role	Designated Bridge		Des Port	Type	
----	----	----	----	----	-----		-----	----	
1	0	0	DSB						
2	0	0	DSB						
3	0	0	DSB						
4	0	0	DSB						
5	0	0	DSB						
6	0	0	DSB						
7	0	0	DSB						
8	0	0	DSB						
9	0	0	DSB						
10	0	0	DISC						
11	0	0	FWD	DESG	8000-00:00:01:00:19:00		8017	P2P2,Edge	
12	0	0	FWD	DESG	8000-00:00:01:00:19:00		8018	P2P	

The switch software can be set to use the IEEE 802.1w Rapid Spanning Tree Protocol (RSTP) or the IEEE 802.1s Multiple Spanning Tree Protocol (MSTP). If RSTP/MSTP is turned on, you can view the following RSTP bridge information for the Spanning Tree Group:

- Current root MAC address
- Path-Cost
- Port
- Hello interval
- Maximum age value
- Forwarding delay
- Aging time

You can also refer to the following port-specific RSTP information:

- Port number and priority
- Cost
- State
- Role
- Designated bridge and port
- Link type

The following table describes the STP parameters in RSTP or MSTP mode.

**Table 26** Rapid Spanning Tree parameter descriptions

Parameter	Description
Current Root	Shows information about the root bridge for the Spanning Tree. Information includes the priority (hex) and MAC address of the root.
Path-Cost	Path-cost is the total path cost to the root bridge. It is the summation of the path cost between bridges (up to the root bridge).
Port	The current root port refers to the port on the GbE2 Interconnect Switch that receives data from the current root. Zero (0) indicates the root bridge of the STP.
Priority (bridge)	The bridge priority parameter controls which bridge on the network will become the STP root bridge.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configurationbridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.



**Table 26** Rapid Spanning Tree parameter descriptions

Parameter	Description
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from learning state to forwarding state.
Aging	The aging time parameter specifies, in seconds, the amount of time the bridge waits without receiving a packet from a station before removing the station from the Forwarding Database.
Priority (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of zero (0) indicates that the cost will be set to the appropriate default after the link speed has been auto-negotiated.
State	Shows the current state of the port. The State field in RSTP/MSTP mode can be one of the following: Discarding (DISC), Learning (LRN), Forwarding (FWD), or Disabled (DSB).
Role	Shows the current role of this port in the Spanning Tree. The port role can be one of the following: Designated (DESG), Root (ROOT), Alternate (ALTN), Backup (BKUP), Master (MAST), or Unknown (UNK).
Designated bridge	Shows information about the bridge connected to each port, if applicable. Information includes the priority (hex) and MAC address of the Designated Bridge.
Designated port	The port ID of the port on the Designated Bridge to which this port is connected.
Type	Type of link connected to the port, and whether the port is an edge port. Link type values are AUTO, P2P, or SHARED. MSTP: The Type field appears in /info/cist.

# Common Internal Spanning Tree information

**Command:** /info/l2/cist

```
Mstp Digest: 0xac36177f50283cd4b83821d8ab26de62
Common Internal Spanning Tree:
VLANs: 1 3-4094

Current Root:          Path-Cost  Port    MaxAge  FwdDel
8000 00:03:42:fa:3b:80    11      1       20     15

CIST Regional Root:    Path-Cost
8000 00:03:42:fa:3b:80    11

Parameters:  Priority  MaxAge  FwdDel  Hops
              32768    20      15     20

Port Prio Cost State  Role Designated Bridge    Des Port Hello Type
-----
  1  128  2000   FWD   DESG 8000-00:03:42:fa:3b:80  8001    4  P2P, Edge
  2  128  2000   FWD   DESG 8000-00:03:42:fa:3b:80  8002
  3  128  2000   DSB
  4  128  2000   DSB
  5  128  2000   DSB
  6  128  2000   DSB
  7  128  2000   DSB
  8  128  2000   DSB
  9  128  2000   DSB
 10  128    0   DSB
 11  128  2000   FWD   DESG 8000-00:03:42:fa:3b:80
 12  128  2000   DSB
```

In addition to seeing if Common Internal Spanning Tree (CIST) is enabled or disabled, you can view the following CIST bridge information:

- CIST root
- CIST regional root
- Priority
- Maximum age value
- Forwarding delay
- Hops

You can also refer to the following port-specific CIST information:

- Port number and priority
- Cost
- State
- Role
- Designated bridge and port
- Hello interval
- Link type and port type

The following table describes the CIST parameters.

**Table 27** Common Internal Spanning Tree parameter descriptions

Parameter	Description
CIST Root	Shows information about the root bridge for the Common Internal Spanning Tree (CIST). Values on this row of information refer to the CIST root.
CIST Regional Root	Shows information about the root bridge for this MSTP region. Values on this row of information refer to the regional root.
Priority (bridge)	The bridge priority parameter controls which bridge on the network will become the STP root bridge.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from learning state to forwarding state.
Hops	Shows the maximum number of bridge hops allowed before a packet is dropped.
Priority (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of zero (0) indicates that the cost will be set to the appropriate default after the link speed has been auto-negotiated.
State	Shows the current state of the port. The state field can be one of the following: Discarding (DISC), Learning (LRN), Forwarding (FWD), or Disabled (DSB).
Role	Shows the current role of this port in the Spanning Tree. The port role can be one of the following: Designated (DESG), Root (ROOT), Alternate (ALTN), Backup (BKUP), Master (MAST), or Unknown (UNK).
Designated Bridge	Shows information about the bridge connected to each port, if applicable. Information includes the priority (hex) and MAC address of the Designated Bridge.
Designated Port	The port ID of the port on the Designated Bridge to which this port is connected.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
Type	Type of link connected to the port, and whether the port is an edge port. Link type values are AUTO, P2P, or SHARED.

## Trunk group information

**Command:** /info/12/trunk

```
Trunk group 1, port state:
 1: STG 1 forwarding
 2: STG 1 forwarding
```

When trunk groups are configured, you can view the state of each port in the various trunk groups.



**NOTE:** If Spanning Tree Protocol on any port in the trunk group is set to forwarding, the remaining ports in the trunk group will also be set to forwarding.

## VLAN information

**Command:** /info/l2/vlan

VLAN	Name	Status	Ports
1	Default VLAN	ena	4 5
2	pc03p	ena	2
7	pc07f	ena	7
11	pc04u	ena	11
14	8600-14	ena	14
15	8600-15	ena	15
16	8600-16	ena	16
17	8600-17	ena	17
18	35k-1	ena	18
19	35k-2	ena	19
20	35k-3	ena	20
21	35k-4	ena	21
22	pc07z	ena	22
24	redlan	ena	24
300	ixiaTraffic	ena	1 12 13 23
4000	bpsports	ena	3-6 8-10

This information display includes all configured VLANs and all member ports that have an active link state.

VLAN information includes:

- VLAN Number
- VLAN Name
- Status
- Port membership of the VLAN

## Layer 2 general information

**Command:** /info/l2/gen

```
STP uplink fast mode : disabled
```

The following table describes the Layer 2 general information.

**Table 28** L2 general information

Field	Description
STP uplink fast mode	Displays the status of STP Uplink Fast: enabled or disabled.

## Layer 3 information

**Command:** /info/l3

```
[Layer 3 Menu]
route      - IP Routing Information Menu
arp        - ARP Information Menu
ospf       - OSPF Routing Information Menu
rip        - RIP Routing Information Menu
ip         - Show IP information
igmp       - Show IGMP Snooping Multicast Group information
vrrp       - Show Virtual Router Redundancy Protocol information
dump       - Dump all layer 3 information
```

The following table describes the **Layer 3 Information Menu** options.

**Table 29** Layer 3 information menu options

Command	Usage
route	Displays the IP Routing Menu. Using the options of this menu, the system displays the following for each configured or learned route: <ul style="list-style-type: none"><li>• Route destination IP address, subnet mask, and gateway address</li><li>• Type of route</li><li>• Tag indicating origin of route</li><li>• Metric for RIP tagged routes, specifying the number of hops to the destination (1-15 hops, or 16 for infinite hops)</li><li>• The IP interface that the route uses</li></ul>
arp	Displays the Address Resolution Protocol (ARP) Information Menu.
ospf	Displays OSPF routing Information Menu.
rip	Displays Routing Information Protocol Menu.
ip	Displays IP Information. IP information, includes: <ul style="list-style-type: none"><li>• IP interface information: Interface number, IP address, subnet mask, VLAN number, and operational status.</li><li>• Default gateway information: Metric for selecting which configured gateway to use, gateway number, IP address, and health status</li><li>• IP forwarding information: Enable status, lnet and lmask</li><li>• Port status</li></ul>
igmp	Displays IGMP Information Menu.
vrrp	Displays the VRRP Information Menu.
dump	Dumps all switch information available from the Layer 3 Menu (10K or more, depending on your configuration). If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

## Route information

**Command:** /info/l3/route

```
[IP Routing Menu]
  find      - Show a single route by destination IP address
  gw        - Show routes to a single gateway
  type      - Show routes of a single type
  tag       - Show routes of a single tag
  if        - Show routes on a single interface
  dump      - Show all routes
```

Using the commands listed below, you can display all or a portion of the IP routes currently held in the switch.

**Table 30** Route Information menu options

Command	Usage
find <IP address>	Displays a single route by IP address. For example, 100.10.1.1
gw <IP address>	Displays routes to a single gateway. For example, 100.10.1.2
type indirect direct local  broadcast martian multicast	Displays routes of a single type.
tag fixed static addr rip ospf  broadcast martian multicast	Displays routes of a single tag.
if <IP address>	Displays routes on a single interface.
dump	Displays all routes configured in the switch.

## Show all IP Route information

**Command:** /info/l3/route/dump

```
Status code: * - best
Destination      Mask             Gateway          Type      Tag      Metr  If
-----
* 11.0.0.0        255.0.0.0        11.0.0.1         direct    fixed                211
* 11.0.0.1        255.255.255.255  11.0.0.1         local     addr                211
* 11.255.255.255  255.255.255.255  11.255.255.255  broadcast broadcast        211
* 12.0.0.0        255.0.0.0        12.0.0.1         direct    fixed                12
* 12.0.0.1        255.255.255.255  12.0.0.1         local     addr                12
* 12.255.255.255  255.255.255.255  12.255.255.255  broadcast broadcast        12
* 13.0.0.0        255.0.0.0        11.0.0.2         indirect  ospf             2    211
* 47.0.0.0        255.0.0.0        47.133.88.1      indirect  static            24
* 47.133.88.0     255.255.255.0    47.133.88.46     direct    fixed              24
* 172.30.52.223   255.255.255.255  172.30.52.223    broadcast broadcast        2
* 224.0.0.0       224.0.0.0        0.0.0.0          martian   martian
* 224.0.0.5       255.255.255.255  0.0.0.0          multicast addr
```

The following table describes the Type parameter.

**Table 31** IP Routing Type information

Field	Description
indirect	The next hop to the host or subnet destination will be forwarded through a router at the Gateway address.
direct	Packets will be delivered to a destination host or subnet attached to the switch.
local	Indicates a route to one of the switch's IP interfaces.
broadcast	Indicates a broadcast route.
martian	The destination belongs to a host or subnet which is filtered out. Packets to this destination are discarded.
multicast	Indicates a multicast route.

The following table describes the Tag parameter.

**Table 32** IP Routing Tag information

Field	Description
fixed	The address belongs to a host or subnet attached to the switch.
static	The address is a static route which has been configured on the GbE2 Switch.
addr	The address belongs to one of the switch's IP interfaces.
rip	The address was learned by the Routing Information Protocol (RIP).
ospf	The address was learned by Open Shortest Path First (OSPF).
broadcast	Indicates a broadcast address.
martian	The address belongs to a filtered group.

## ARP information

**Command:** /info/arp

```
[Address Resolution Protocol Menu]
  find    - Show a single ARP entry by IP address
  port    - Show ARP entries on a single port
  vlan    - Show ARP entries on a single VLAN
  addr    - Show ARP address list
  dump    - Show all ARP entries
```

The Address Resolution Protocol (ARP) information includes IP address and MAC address of each entry, address status flags, VLAN, and port for the address, and port referencing information.

The following table describes the **Address Resolution Protocol Menu** options.

**Table 33** ARP information

Command	Usage
find <IP address>	Displays a single ARP entry by IP address. For example, 100.10.1.1
port <port number>	Displays the ARP entries on a single port.
vlan <1-4095>	Displays the ARP entries on a single VLAN.
addr	Displays the ARP address list: IP address, IP mask, MAC address, and VLAN flags.
dump	Displays all ARP entries, including: <ul style="list-style-type: none"><li>• IP address and MAC address of each entry</li><li>• Address status flag</li><li>• The VLAN and port to which the address belongs</li></ul> The ports which have referenced the address (empty if no port has routed traffic to the IP address shown)

## Show all ARP entry information

**Command:** /info/arp/dump

IP address	Flags	MAC address	VLAN	Port
-----	----	-----	----	----
192.168.2.4		00:50:8b:b2:32:cb	1	18
192.168.2.19		00:0e:7f:25:89:b5	1	17
192.168.2.61	P	00:0f:6a:ed:46:00	1	

The Flag field provides additional information about an entry. If no flag displays, the entry is normal.

**Table 34** ARP dump flag parameters

Flag	Description
P	Permanent entry created for GbE2 Interconnect Switch IP interface.
R	Indirect route entry.
U	Unresolved ARP entry. The MAC address has not been learned.

## ARP address list information

**Command:** /info/arp/addr

IP address	IP mask	MAC address	VLAN	Flags
-----	-----	-----	----	----
205.178.18.66	255.255.255.255	00:70:cf:03:20:04		P
205.178.50.1	255.255.255.255	00:70:cf:03:20:06	1	
205.178.18.64	255.255.255.255	00:70:cf:03:20:05	1	

This screen displays all entries in the ARP cache.

# OSPF information

**Command:** /info/13/ospf

```
[OSPF Information Menu]
  general - Show general information
  aindex  - Show area(s) information
  if      - Show interface(s) information
  virtual - Show details of virtual links
  nbr     - Show neighbor(s) information
  dbase   - Database Menu
  sumaddr - Show summary address list
  nsumadd - Show NSSA summary address list
  routes  - Show OSPF routes
  dump    - Show OSPF information
```

The following table describes the OSPF Menu options.

**Table 35** OSPF information

Command	Usage
general	Displays general OSPF information.
aindex <0-2>	Displays area information for a particular area index. If no parameter is supplied, it displays area information for all the areas.
if <1-255>	Displays interface information for a particular interface. If no parameter is supplied, it displays information for all the interfaces.
virtual	Displays information about all the configured virtual links.
nbr <nbr router-id (A.B.C.D)>	Displays the status of a neighbor with a particular router ID. If no router ID is supplied, it displays the information about all the current neighbors.
dbase	Displays OSPF database menu.
sumaddr <0-2>	Displays the list of summary ranges belonging to non-NSSA areas.
nsumadd <0-2>	Displays the list of summary ranges belonging to NSSA areas.
routes	Displays OSPF routing table.
dump	Displays all OSPF information.



## OSPF general information

**Command:** /info/l3/ospf/general

```
OSPF Version 2
Router ID: 10.10.10.1
Started at 1663 and the process uptime is 4626
Area Border Router: yes, AS Boundary Router: no
LS types supported are 6
External LSA count 0
External LSA checksum sum 0x0
Number of interfaces in this router is 2
Number of virtual links in this router is 1
16 new lsa received and 34 lsa originated from this router
Total number of entries in the LSDB 10
Database checksum sum 0x0
Total neighbors are 1, of which
                                2 are >=INIT state,
                                2 are >=EXCH state,
                                2 are =FULL state
Number of areas is 2, of which 3-transit 0-nssa
  Area Id : 0.0.0.0
  Authentication : none
  Import ASEextern : yes
  Number of times SPF ran : 8
  Area Border Router count : 2
  AS Boundary Router count : 0
  LSA count : 5
  LSA Checksum sum : 0x2237B
  Summary : noSummary
```

## OSPF interface information

**Command:** /info/l3/ospf/if

```
Ip Address 10.10.12.1, Area 0.0.0.1, Admin Status UP
Router ID 10.10.10.1, State DR, Priority 1
Designated Router (ID) 10.10.10.1, Ip Address 10.10.12.1
Backup Designated Router (ID) 10.10.14.1, Ip Address 10.10.12.2
Timer intervals, Hello 10, Dead 40, Wait 1663, Retransmit 5,
Transit delay 1
Neighbor count is 1 If Events 4, Authentication type none
```

## OSPF Database information menu

**Command:** /info/l3/ospf/dbase

```
[OSPF Database Menu]
advrtr  - LS Database info for an Advertising Router
asbrsum - ASBR Summary LS Database info
dbsumm  - LS Database summary
ext     - External LS Database info
nw      - Network LS Database info
nssa    - NSSA External LS Database info
rtr     - Router LS Database info
self    - Self Originated LS Database info
summ    - Network-Summary LS Database info
all     - All
```

The following table describes the OSPF Database information menu options.

**Table 36** OSPF Database information

Command	Usage
<code>advrtr &lt;router-id (A.B.C.D)&gt;</code>	Takes advertising router as a parameter. Displays all the Link State Advertisements (LSAs) in the LS database that have the advertising router with the specified router ID, for example: 20.1.1.1.
<code>asbrsum &lt;adv-rtr (A.B.C.D)&gt; &lt;link_state_id (A.B.C.D)&gt; &lt;self&gt;</code>	Displays ASBR summary LSAs. The usage of this command is as follows: <ul style="list-style-type: none"> <li>a. <code>asbrsum adv-rtr 20.1.1.1</code> displays ASBR summary LSAs having the advertising router 20.1.1.1.</li> <li>b. <code>asbrsum link_state_id 10.1.1.1</code> displays ASBR summary LSAs having the link state ID 10.1.1.1.</li> <li>c. <code>asbrsum self</code> displays the self advertised ASBR summary LSAs.</li> <li>d. <code>asbrsum</code> with no parameters displays all the ASBR summary LSAs.</li> </ul>
<code>dbsumm</code>	Displays the following information about the LS database in a table format: <ul style="list-style-type: none"> <li>a. The number of LSAs of each type in each area.</li> <li>b. The total number of LSAs for each area.</li> <li>c. The total number of LSAs for each LSA type for all areas combined.</li> <li>d. The total number of LSAs for all LSA types for all areas combined.</li> </ul> No parameters are required.
<code>ext &lt;adv-rtr (A.B.C.D)&gt; &lt;link_state_id (A.B.C.D)&gt; &lt;self&gt;</code>	Displays the AS-external (type 5) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command <code>asbrsum</code> .
<code>nw &lt;adv-rtr (A.B.C.D)&gt; &lt;link_state_id (A.B.C.D)&gt; &lt;self&gt;</code>	Displays the network (type 2) LSAs with detailed information of each field of the LSA.network LS database. The usage of this command is the same as the usage of the command <code>asbrsum</code> .
<code>nssa &lt;adv-rtr (A.B.C.D)&gt; &lt;link_state_id (A.B.C.D)&gt; &lt;self&gt;</code>	Displays the NSSA (type 7) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command <code>asbrsum</code> .
<code>rtr &lt;adv-rtr (A.B.C.D)&gt; &lt;link_state_id (A.B.C.D)&gt; &lt;self&gt;</code>	Displays the router (type 1) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command <code>asbrsum</code> .
<code>self</code>	Displays all the self-advertised LSAs. No parameters are required.
<code>summ &lt;adv-rtr (A.B.C.D)&gt; &lt;link_state_id (A.B.C.D)&gt; &lt;self&gt;</code>	Displays the network summary (type 3) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command <code>asbrsum</code> .
<code>all</code>	Displays all the LSAs.

# OSPF route codes information

**Command:** /info/l3/ospf/routes

```
Codes: IA - OSPF inter area,
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
IA 10.10.0.0/16 via 200.1.1.2
IA 40.1.1.0/28 via 20.1.1.2
IA 80.1.1.0/24 via 200.1.1.2
IA 100.1.1.0/24 via 20.1.1.2
IA 140.1.1.0/27 via 20.1.1.2
IA 150.1.1.0/28 via 200.1.1.2
E2 172.18.1.1/32 via 30.1.1.2
E2 172.18.1.2/32 via 30.1.1.2
E2 172.18.1.3/32 via 30.1.1.2
E2 172.18.1.4/32 via 30.1.1.2
E2 172.18.1.5/32 via 30.1.1.2
E2 172.18.1.6/32 via 30.1.1.2
E2 172.18.1.7/32 via 30.1.1.2
E2 172.18.1.8/32 via 30.1.1.2
```

# Routing Information Protocol menu

**Command:** /info/l3/rip

```
[RIP Information Menu]
routes      - Show RIP routes
dump       - Show RIP user's configuration
```

The following table describes the Routing Information Protocol information menu options.

**Table 37** RIP information

Command	Usage
routes	Displays information about RIP routes.
dump <0-255>	Displays RIP user's configuration. Enter 0 (zero) for all interfaces.

# RIP Routes information

**Command:** /info/l3/rip/routes

```
>> IP Routing# /info/l3/rip/routes
3.0.0.0/8 via 30.1.1.11 metric 4
4.0.0.0/16 via 30.1.1.11 metric 16
10.0.0.0/8 via 30.1.1.2 metric 3
20.0.0.0/8 via 30.1.1.2 metric 2
```

This table contains all dynamic routes learned through RIP, including the routes that are undergoing garbage collection with metric = 16. This table does not contain directly connected routes and locally configured static routes.

## RIP user configuration

**Command:** /info/l3/rip/dump <1-255>

```
RIP USER CONFIGURATION :
RIP on updat 30
RIP Interface 2 : 102.1.1.1, enabled
version 2, listen enabled, supply enabled, default none
poison disabled, trigg enabled, mcast enabled, metric 1
auth none,key none
RIP Interface 3 : 103.1.1.1, enabled
version 2, listen enabled, supply enabled, default none
poison disabled, trigg enabled, mcast enabled, metric 1
```

## IP information

**Command:** /info/l3/ip

```
Interface information:
 1: 47.80.23.243      255.255.254.0    47.80.23.255,      up

Default gateway information:
 1: 47.80.22.1,      up
 2: 47.80.225.2,     up

Current BOOTP relay settings: OFF
      0.0.0.0, 0.0.0.0

Current IP forwarding settings: OFF, dirbr disabled

Current network filter settings:
      none

Current route map settings:
```

The following interface and default gateway information is displayed:

- Interface number
- IP address
- IP mask
- IP broadcast address
- Operational status
- BootP relay settings
- IP forwarding settings
- Network filter settings
- Route map settings

## IGMP multicast group information

**Command:** /info/l3/igmp

```
[IGMP Multicast Group Menu]
mrouter - Show IGMP Snooping Multicast Router Port information
find    - Show a single group by IP group address
vlan    - Show groups on a single vlan
port    - Show groups on a single port
trunk   - Show groups on a single trunk
dump    - Show all groups
```

The following table describes the commands used to display information about IGMP groups learned by the switch.

**Table 38** IGMP Multicast Group menu options

Command	Usage
mrouter	Displays the Multicast Router Menu.
find <IP address>	Displays a single IGMP multicast group by its IP address. For example, 100.10.1.1
vlan <1-4095>	Displays all IGMP multicast groups on a single VLAN.
port <port number>	Displays all IGMP multicast groups on a single port.
trunk <1-12>	Displays all IGMP multicast groups on a single trunk group.
dump	Displays information for all multicast groups.

## IGMP multicast router port information

**Command:** /info/13/igmp/mrouter

```
[IGMP Multicast Router Menu]
vlan - Show all multicast router ports on a single vlan
dump - Show all learned multicast router ports
```

The following table describes the commands used to display information about multicast routers learned through IGMP Snooping.

**Table 39** IGMP Multicast Router menu options

Command	Usage
vlan <1-4095>	Displays information for all multicast groups learned on a single VLAN
dump	Displays information for all multicast groups learned by the switch.

## VRRP information

Virtual Router Redundancy Protocol (VRRP) support on GbE2 Interconnect Switch provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

**Command:** /info/13/vrrp

```
VRRP information:
1: vrid 2, 205.178.18.210, if 1, renter, prio 100, master, server
2: vrid 1, 205.178.18.202, if 1, renter, prio 100, backup
3: vrid 3, 205.178.18.204, if 1, renter, prio 100, master, proxy
```

When virtual routers are configured, you can view the status of each virtual router using this command. VRRP information includes:

- Virtual router number
- Virtual router ID and IP address
- Interface number
- Ownership status
  - **owner** identifies the preferred master virtual router. A virtual router is the owner when the IP address of the virtual router and its IP interface are the same.
  - **renter** identifies virtual routers which are not owned by this device
- Priority value. During the election process, the virtual router with the highest priority becomes master.

- Activity status
  - `master` identifies the elected master virtual router.
  - `backup` identifies that the virtual router is in backup mode.
  - `init` identifies that the virtual router is waiting for a startup event. Once it receives a startup event, it transitions to master if its priority is 255, (the IP address owner), or transitions to backup if it is not the IP address owner.
- Server status. The `server` state identifies virtual routers.
- Proxy status. The proxy state identifies virtual proxy routers, where the virtual router shares the same IP address as a proxy IP address. The use of virtual proxy routers enables redundant switches to share the same IP address, minimizing the number of unique IP addresses that must be configured.

## RMON Information Menu

**Command:** `/info/rmon`

```
[RMON Information Menu]
hist      - Show RMON History group information
alarm     - Show RMON Alarm group information
event     - Show RMON Event group information
dump      - Show all RMON information
```

The following table describes the RMON Information parameters.

**Table 40** RMON History Information Menu `/info/rmon/hist`

Command	Usage
<code>hist</code>	Displays RMON History Information.
<code>alarm</code>	Displays RMON Alarm Information.
<code>event</code>	Displays RMON Event Information.
<code>dump</code>	Displays all RMON Information parameters.

## RMON history information

**Command:** `/info/rmon/hist`

RMON History group configuration:

Index	IFOID	Interval	Rbnum	Gbnum
----	-----	-----	----	----
1	1.3.6.1.2.1.2.2.1.1.24	30	5	5
2	1.3.6.1.2.1.2.2.1.1.24	30	5	5
3	1.3.6.1.2.1.2.2.1.1.18	30	5	5
4	1.3.6.1.2.1.2.2.1.1.19	30	5	5
5	1.3.6.1.2.1.2.2.1.1.24	1800	5	5

The following table describes the RMON History Information parameters.

**Table 41** RMON History Information: `/info/rmon/hist`

Command	Usage
Index	Displays the index number that identifies each history instance.
IFOID	Displays the MIB Object Identifier.
Interval	Displays the time interval for each for each sampling bucket.
Rbnum	Displays the number of requested buckets, which is the number of data slots into which data is to be saved.
Gbnum	Displays the number of granted buckets that may hold sampled data.

## RMON alarm information

**Command:** /info/rmon/alarm

RMON Alarm group configuration:							
Index	Interval	Type	rLimit	fLimit	rEvtIdx	fEvtIdx	last value
1	30	abs	10	0	1	0	0
2	900	abs	0	10	0	2	0
3	300	abs	10	20	0	0	0
4	1800	abs	10	0	1	0	0
5	1800	abs	10	0	1	0	0
8	1800	abs	10	0	1	0	56344540
10	1800	abs	10	0	1	0	0
11	1800	abs	10	0	1	0	0
15	1800	abs	10	0	1	0	0
18	1800	abs	10	0	1	0	0
100	1800	abs	10	0	1	0	0

Index	OID
1	1.3.6.1.2.1.2.2.1.10.257
2	1.3.6.1.2.1.2.2.1.11.258
3	1.3.6.1.2.1.2.2.1.12.259
4	1.3.6.1.2.1.2.2.1.13.260
5	1.3.6.1.2.1.2.2.1.14.261
8	1.3.6.1.2.1.2.2.1.10.280
10	1.3.6.1.2.1.2.2.1.15.262
11	1.3.6.1.2.1.2.2.1.16.263
15	1.3.6.1.2.1.2.2.1.19.266
18	1.3.6.1.2.1.2.2.1.10.279
100	1.3.6.1.2.1.2.2.1.17.264

The following table describes the RMON Alarm Information parameters.

**Table 42** RMON Alarm Information: /info/rmon/alarm

Command	Usage
Index	Displays the index number that identifies each alarm instance.
Interval	Displays the time interval over which data is sampled and compared with the rising and falling thresholds.
Type	Displays the method of sampling the selected variable and calculating the value to be compared against the thresholds, as follows: <b>abs:</b> absolute value, the value of the selected variable is compared directly with the thresholds at the end of the sampling interval. <b>delta:</b> delta value, the value of the selected variable at the last sample is subtracted from the current value, and the difference compared with the thresholds.
rLimit	Displays the rising threshold for the sampled statistic.
fLimit	Displays the falling threshold for the sampled statistic.
rEvtIdx	Displays the rising alarm event index that is triggered when a rising threshold is crossed.
fEvtIdx	Displays the falling alarm event index that is triggered when a falling threshold is crossed.
Last value	Displays the last sampled value.
OID	Displays the MIB Object Identifier for each alarm index.

## RMON event information

**Command:** /info/rmon/event

RMON Event group configuration:

Index	Type	Last Sent	Description
-----	----	-----	-----
1	both	0D: 0H: 1M:20S	Event_1
2	none	0D: 0H: 0M: 0S	Event_2
3	log	0D: 0H: 0M: 0S	Event_3
4	trap	0D: 0H: 0M: 0S	Event_4
5	both	0D: 0H: 0M: 0S	Log and trap event for Link Down
10	both	0D: 0H: 0M: 0S	Log and trap event for Link Up
11	both	0D: 0H: 0M: 0S	Send log and trap for icmpInMsg
15	both	0D: 0H: 0M: 0S	Send log and trap for icmpInEchos
100	both	0D: 0H: 0M: 0S	Event_100

The following table describes the RMON Event Information parameters.

**Table 43** RMON Event Information: /info/rmon/event

Command	Usage
Index	Displays the index number that identifies each event instance.
Type	Displays the type of notification provided for this event, as follows: none, log, trap, both.
Last Sent	Displays the time that passed since the last switch reboot, when the most recent event was triggered. This value is cleared when the switch reboots.
Description	Displays a text description of the event.

## Link status information

**Command:** /info/link

Port	Speed	Duplex	Flow Ctrl		Link
----	-----	-----	--TX--	--RX--	-----
1	any	any	yes	yes	down
2	any	any	yes	yes	down
3	1000	full	yes	yes	down
4	100	full	yes	yes	down
5	any	any	yes	yes	down
6	any	any	yes	yes	down
7	any	any	yes	yes	down
8	1000	full	no	yes	up
9	100	full	yes	yes	down
10	100	full	yes	yes	down
11	any	any	yes	yes	down
12	any	any	yes	yes	down
13	any	any	yes	yes	down
14	any	any	yes	yes	down
15	any	any	yes	yes	down
16	any	any	yes	yes	down
17	100	full	yes	yes	down
18	100	full	yes	yes	down
19	100	full	yes	yes	down
20	100	full	yes	yes	down
21	1000	full	yes	yes	down
22	any	any	yes	yes	down
23	any	any	yes	yes	down
24	any	any	yes	yes	down



Use this command to display link status information about each port on a GbE2 Interconnect Switch, including:

- Port number
- Port speed (10 Mb/s, 100 Mb/s, 1000 Mb/s, or any)
- Duplex mode (half, full, or any)
- Flow control for transmit and receive (no, yes, or any)
- Link status (up or down)

## Port information

**Command:** /info/port

Port	Tag	RMON	PVID	NAME	VLAN (s)
1	n	d	1	Downlink1	1
2	n	d	1	Downlink2	1
3	n	d	1	Downlink3	1
4	n	d	1	Downlink4	1
5	n	d	1	Downlink5	1
6	n	d	1	Downlink6	1
7	n	d	1	Downlink7	1
8	n	d	1	Downlink8	1
9	n	d	1	Downlink9	1
10	n	d	1	Downlink10	1
11	n	d	1	Downlink11	1
12	n	d	1	Downlink12	1
13	n	d	1	Downlink13	1
14	n	d	1	Downlink14	1
15	n	d	1	Downlink15	1
16	n	d	1	Downlink16	1
17	n	d	1	Xconnect1	1
18	n	d	1	Xconnect2	1
19	n	d	3	Uplink1	3
20	n	d	3	Uplink2	3
21	n	d	1	Uplink3	1
22	n	d	1	Uplink4	1
23	n	d	1	FrontPanel1	1
24	n	d	1	FrontPanel2	1

Port information includes:

- Port number
- Whether the port uses VLAN tagging or not (y or n)
- Whether Remote Monitoring (RMON) is enabled or disabled (e or d)
- Port VLAN ID (PVID)
- Port name
- VLAN membership

## Logical Port to GEA Port mapping

**Command:** /info/geaport

Logical Port	GEA Port (0-based)	GEA Unit
1	3	0
2	2	0
3	5	0
4	7	0
5	4	0
6	6	0
7	6	2
8	0	0
9	7	2
10	8	2
11	11	2
12	10	2
13	2	2
14	4	2
15	3	2
16	5	2
17	9	2
18	1	0
19	11	0
20	10	0
21	9	0
22	8	0
23	0	2
24	1	2

This display correlates the logical port number to the GEA unit on which each port resides.

## Uplink Failure Detection information

**Command:** /info/ufd

Uplink Failure Detection: Enabled			
LtM status: Down			
Member	STG	STG State	Link Status
-----	---	-----	-----
port 24			down
	1	DISABLED	
	10	DISABLED *	
	16	DISABLED *	
* = STP turned off for this port.			
LtD status: Auto Disabled			
Member	Link Status		
-----	-----		
port 1	disabled		
port 2	disabled		
port 3	disabled		
port 4	disabled		

Uplink Failure Detection (UFD) information includes:

- UFD status, either enabled or disabled
- LtM status and member ports
- Spanning Tree status for LtM ports
- LtD status and member ports

## Information dump

**Command:** `/info/dump`

Use the **dump** command to dump all GbE2 Interconnect Switch information available from the Information Menu (10K or more, depending on your configuration). This data is useful for tuning and debugging GbE2 Interconnect Switch performance.

If you want to capture dump data to a file, set the communication software on your workstation to capture session data prior to issuing the dump commands.

# Statistics Menu

## Introduction

You can view GbE2 Interconnect Switch performance statistics in the user, operator, and administrator command modes. This chapter discusses how to use the CLI to display GbE2 Interconnect Switch statistics.

## Menu information

**Command:** /stats

```
[Statistics Menu]
port      - Port Stats Menu
l2        - Layer 2 Stats Menu
l3        - Layer 3 Stats Menu
mp        - MP-specific Stats Menu
acl       - ACL Stats Menu
snmp      - Show SNMP stats
ntp       - Show NTP stats
ufd       - Show Uplink Failure Detection stats
clrmp     - Clear all MP related stats
dump      - Dump all stats
```

The following table describes the Statistics Menu options.

**Table 44** Statistics Menu options

Command	Usage
port <port number>	Displays the Port Statistics Menu for the specified port. Use this command to display traffic statistics on a port-by-port basis. Traffic statistics are included in SNMP Management Information Base (MIB) objects.
l2	Displays the Layer 2 Statistics Menu.
l3	Displays the Layer 3 Statistics Menu.
mp	Displays the Management Processor Statistics Menu. Use this command to view information on how GbE2 Interconnect Switch management processes and resources are currently being allocated.
acl	Displays the Access Control List Statistics Menu.
snmp	Displays SNMP statistics.
ntp <clear>	Displays Network Time Protocol (NTP) Statistics. You can execute the clear command option to delete all statistics.
ufd <clear>	Displays Uplink Failure Detection statistics. Add the argument, clear, to clear UFD statistics.
clrmp	Clear all MP-related statistics.
dump	Dumps all GbE2 Interconnect Switch statistics. Use this command to gather data for tuning and debugging GbE2 Interconnect Switch performance. If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump command.

# Port Statistics Menu

**Command:** /stats/port <port number>

```
[Port Statistics Menu]
8021x  - Show 802.1x stats
brg    - Show bridging ("dot1") stats
ether  - Show Ethernet ("dot3") stats
if     - Show interface ("if") stats
ip     - Show Internet Protocol ("IP") stats
link   - Show link stats
rmon   - Show RMON stats
clear  - Clear all port stats
```

This menu displays traffic statistics on a port-by-port basis.

The following table describes the Port Statistics Menu options:

**Table 45** Port Statistics Menu options

Command	Usage
8021x	Displays IEEE 802.1x statistics
brg	Displays bridging ("dot1") statistics for the port.
ether	Displays Ethernet ("dot3") statistics for the port.
if	Displays interface statistics for the port.
ip	Displays Internet Protocol statistics for the port.
link	Displays link statistics for the port.
rmon	Displays Remote Monitoring (RMON) statistics for the port.
clear	Clears all the statistics on the port.

## 802.1x statistics

**Command:** /stats/port <port number>/8021x

```

Authenticator Statistics:
  eapolFramesRx           = 0
  eapolFramesTx           = 0
  eapolStartFramesRx      = 0
  eapolLogoffFramesRx     = 0
  eapolRespIdFramesRx     = 0
  eapolRespFramesRx       = 0
  eapolReqIdFramesTx      = 0
  eapolReqFramesTx        = 0
  invalidEapolFramesRx    = 0
  eapLengthErrorFramesRx  = 0
  lastEapolFrameVersion   = 0
  lastEapolFrameSource    = 00:00:00:00:00:00

Authenticator Diagnostics:
  authEntersConnecting           = 0
  authEapLogoffsWhileConnecting = 0
  authEntersAuthenticating       = 0
  authSuccessesWhileAuthenticating = 0
  authTimeoutsWhileAuthenticating = 0
  authFailWhileAuthenticating    = 0
  authReauthsWhileAuthenticating = 0
  authEapStartsWhileAuthenticating = 0
  authEapLogoffWhileAuthenticating = 0
  authReauthsWhileAuthenticated = 0
  authEapStartsWhileAuthenticated = 0
  authEapLogoffWhileAuthenticated = 0
  backendResponses               = 0
  backendAccessChallenges        = 0
  backendOtherRequestsToSupplicant = 0
  backendNonNakResponsesFromSupplicant = 0
  backendAuthSuccesses           = 0
  backendAuthFails               = 0

```

The following table describes the 802.1x authenticator diagnostics for a selected port:

**Table 46** 802.1x statistics for port

Statistics	Description
<b>Authenticator Diagnostics</b>	
authEntersConnecting	Total number of times that the state machine transitions to the CONNECTING state from any other state.
authEapLogoffsWhileConnecting	Total number of times that the state machine transitions from CONNECTING to DISCONNECTED as a result of receiving an EAPOL-Logoff message.
authEntersAuthenticating	Total number of times that the state machine transitions from CONNECTING to AUTHENTICATING, as a result of an EAPResponse/Identity message being received from the Supplicant.
authSuccessesWhile Authenticating	Total number of times that the state machine transitions from AUTHENTICATING to AUTHENTICATED, as a result of the Backend Authentication state machine indicating successful authentication of the Supplicant.
authTimeoutsWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of the Backend Authentication state machine indicating authentication timeout.
authFailWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to HELD, as a result of the Backend Authentication state machine indicating authentication failure.
authReauthsWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of a re-authentication request

**Table 46** 802.1x statistics for port

Statistics	Description
authEapStartsWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of an EAPOL-Start message being received from the Supplicant.
authEapLogoffWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of an EAPOL-Logoff message being received from the Supplicant.
authReauthsWhileAuthenticated	Total number of times that the state machine transitions from AUTHENTICATED to CONNECTING, as a result of a re-authentication request.
authEapStartsWhileAuthenticated	Total number of times that the state machine transitions from AUTHENTICATED to CONNECTING, as a result of an EAPOL-Start message being received from the Supplicant.
authEapLogoffWhileAuthenticated	Total number of times that the state machine transitions from AUTHENTICATED to DISCONNECTED, as a result of an EAPOL-Logoff message being received from the Supplicant.
backendResponses	Total number of times that the state machine sends an initial Access-Request packet to the Authentication server. Indicates that the Authenticator attempted communication with the Authentication Server.
backendAccessChallenges	Total number of times that the state machine receives an initial Access-Challenge packet from the Authentication server. Indicates that the Authentication Server has communication with the Authenticator.
backendOtherRequestsToSupplicant	Total number of times that the state machine sends an EAP-Request packet (other than an Identity, Notification, Failure, or Success message) to the Supplicant. Indicates that the Authenticator chose an EAP-method.
backendNonNakResponsesFrom Supplicant	Total number of times that the state machine receives a response from the Supplicant to an initial EAP-Request, and the response is something other than EAP-NAK. Indicates that the Supplicant can respond to the Authenticators chosen EAP-method.
backendAuthSuccesses	Total number of times that the state machine receives an Accept message from the Authentication Server. Indicates that the Supplicant has successfully authenticated to the Authentication Server.
backendAuthFails	Total number of times that the state machine receives a Reject message from the Authentication Server. Indicates that the Supplicant has not authenticated to the Authentication Server.

## Bridging statistics

**Command:** /stats/port <port number>/brg

```
Bridging statistics for port 1:
dot1PortInFrames:          63242584
dot1PortOutFrames:         63277826
dot1PortInDiscards:        0
dot1TpLearnedEntryDiscards: 0
dot1StpPortForwardTransitions: 0
```

The following table describes the bridging statistics for a selected port:

**Table 47** Bridging statistics for port

Statistics	Description
dot1PortInFrames	The number of frames that have been received by this port from its segment. A frame received on the interface corresponding to this port is counted by this object, if and only if, it is for a protocol being processed by the local bridging function, including bridge management frames.
dot1PortOutFrames	The number of frames that have been transmitted by this port to its segment. A frame transmitted on the interface corresponding to this port is counted by this object, if and only if, it is for a protocol being processed by the local bridging function, including bridge management frames.
dot1PortInDiscards	Count of valid frames received which were discarded (that is, filtered) by the forwarding process.
dot1TpLearnedEntryDiscards	The total number of Forwarding Database entries, which have been or would have been learned, but have been discarded due to a lack of space to store them in the Forwarding Database. If this counter is increasing, it indicates that the Forwarding Database is regularly becoming full (a condition which has adverse performance effects on the sub network). If this counter has a significant value but is not presently increasing, it indicates that the problem has been occurring but is not persistent.
dot1StpPortForwardTransitions	The number of times this port has transitioned from the Learning state to the Forwarding state.

## Ethernet statistics

**Command:** `/stats/port <port number>/ether`

```
Ethernet statistics for port 1:
dot3StatsAlignmentErrors:          0
dot3StatsFCSErrors:                0
dot3StatsSingleCollisionFrames:    0
dot3StatsMultipleCollisionFrames:  0
dot3StatsLateCollisions:           0
dot3StatsExcessiveCollisions:      0
dot3StatsInternalMacTransmitErrors: NA
dot3StatsFrameTooLongs:            0
dot3StatsInternalMacReceiveErrors: 0
```

The following table describes the Ethernet statistics for a selected port:

**Table 48** Ethernet statistics for port

Statistics	Description
dot3StatsAlignmentErrors	A count of frames received on a particular interface that are not an integral number of octets in length and do not pass the Frame Check Sequence (FCS) check. The count represented by an instance of this object is incremented when the <code>alignmentError</code> status is returned by the MAC service to the Logical Link Control (LLC) (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.



**Table 48** Ethernet statistics for port

Statistics	Description
dot3StatsFCSErrors	<p>A count of frames received on a particular interface that are an integral number of octets in length but do not pass the Frame Check Sequence (FCS) check.</p> <p>The count represented by an instance of this object is incremented when the <code>frameCheckError</code> status is returned by the MAC service to the LLC (or other MAC user).</p> <p>Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.</p>
dot3StatsSingleCollisionFrames	<p>A count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision.</p> <p>A frame that is counted by an instance of this object is also counted by the corresponding instance of the <code>ifOutUcastPkts</code>, <code>ifOutMulticastPkts</code>, or <code>ifOutBroadcastPkts</code>, and is not counted by the corresponding instance of the <code>dot3StatsMultipleCollisionFrame</code> object.</p>
dot3StatsMultipleCollisionFrames	<p>A count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision.</p> <p>A frame that is counted by an instance of this object is also counted by the corresponding instance of the <code>ifOutUcastPkts</code>, <code>ifOutMulticastPkts</code>, or <code>ifOutBroadcastPkts</code>, and is not counted by the corresponding instance of the <code>dot3StatsSingleCollisionFrames</code> object.</p>
dot3StatsLateCollisions	<p>The number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet.</p> <p>Five hundred and twelve bit-times corresponds to 51.2 microseconds on a 10 Mbit/s system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics.</p>
dot3StatsExcessiveCollisions	<p>A count of frames for which transmission on a particular interface fails due to excessive collisions.</p>
dot3StatsInternalMacTransmitErrors	<p>A count of frames for which transmission on a particular interface fails due to an internal MAC sublayer transmit error.</p> <p>A frame is only counted by an instance of this object if it is not counted by the corresponding instance of the <code>dot3StatsLateCollisions</code> object, the <code>dot3StatsExcessiveCollisions</code> object, or the <code>dot3StatsCarrierSenseErrors</code> object.</p> <p>The precise meaning of the count represented by an instance of this object is implementation specific. In particular, an instance of this object may represent a count of transmission errors on a particular interface that are not otherwise counted.</p>
dot3StatsFrameTooLongs	<p>A count of frames received on a particular interface that exceeds the maximum permitted frame size.</p> <p>The count represented by an instance of this object is incremented when the <code>frameTooLong</code> status is returned by the MAC service to the LLC (or other MAC user).</p> <p>Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.</p>
dot3StatsInternalMacReceiveErrors	<p>A count of frames for which reception on a particular interface fails due to an internal MAC sublayer receive error.</p> <p>A frame is only counted by an instance of this object if it is not counted by the corresponding instance of the <code>dot3StatsFrameTooLongs</code> object, the <code>dot3StatsAlignmentErrors</code> object, or the <code>dot3StatsFCSErrors</code> object.</p> <p>The precise meaning of the count represented by an instance of this object is implementation specific. In particular, an instance of this object may represent a count of received errors on a particular interface that are not otherwise counted.</p>

## Interface statistics

**Command:** /stats/port <port number>/if

```
Interface statistics for port 1:
Octets:          ifHCIn Counters      ifHCOut Counters
UcastPkts:       51697080313          51721056808
BroadcastPkts:   65356399             65385714
MulticastPkts:   0                    6516
Discards:        0                    0
Errors:          0                    21187
```

The following table describes the interface (IF) statistics for a selected port:

**Table 49** Interface statistics for port

Statistics	Description
Octets-IfHCIn	The total number of octets received on the interface, including framing characters.
UcastPkts-IfHCIn	The number of packets, delivered by this sublayer to a higher sublayer, which were not addressed to a multicast or broadcast address at this sublayer.
BroadcastPkts-IfHCIn	The number of packets, delivered by this sublayer to a higher sublayer, which were addressed to a broadcast address at this sublayer.
MulticastPkts-IfHCIn	The total number of packets, delivered by this sublayer. These are the packets that higher-level protocols requested to be transmitted, and which were addressed to a multicast address at this sublayer, including those that were discarded or not sent. For a MAC layer protocol, this includes both group and functional addresses.
Discards-IfHCIn	The number of inbound packets which were chosen to be discarded even though no errors were detected to prevent their being delivered to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
Errors-IfHCIn	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being delivered to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol.
Octets-IfHCOut	The total number of octets transmitted out of the interface, including framing characters.
UcastPkts-IfHCOut	The total number of packets that higher-level protocols requested to be transmitted, and which were not addressed to a multicast or broadcast address at this sublayer, including those that were discarded or not sent.
BroadcastPkts-IfHCOut	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a broadcast address at this sublayer, including those that were discarded or not sent. This object is a 64-bit version of ifOutBroadcastPkts.
MulticastPkts-IfHCOut	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a multicast address at this sublayer, including those that were discarded or not sent. For a MAC layer protocol, this includes both group and functional addresses. This object is a 64-bit version of ifOutMulticastPkts.
Discards-IfHCOut	The number of outbound packets that were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.
Errors-IfHCOut	For packet-oriented interfaces, the number of outbound packets that could not be transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that could not be transmitted because of errors.

## Internet Protocol (IP) statistics

**Command:** `/stats/port <port number>/ip`

```
GEA IP statistics for port 1:
ipInReceives      :      0
ipInHeaderError:    0
ipInDiscards      :      0
```

The following table describes the Internet Protocol (IP) statistics for a selected port:

**Table 50** IP statistics for port

Statistics	Description
ipInReceives	The total number of input datagrams received from interfaces, including those received in error.
ipInHeaderError	The number of input datagrams discarded because the IP address in their IP header's destination field was not a valid address to be received at this entity (the switch).
ipInDiscards	The number of input IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (for example, for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.

## Link statistics

**Command:** `/stats/port <port number>/link`

```
Link statistics for port 1:
linkStateChange:      2
```

The following table describes the link statistics for a selected port:

**Table 51** Link statistics for port

Statistic	Description
linkStateChange	The total number of link state changes.

## Port RMON statistics

**Command:** `/stats/port <port number>/rmon`

```
RMON statistics for port 2:
etherStatsDropEvents:      NA
etherStatsOctets:          0
etherStatsPkts:            0
etherStatsBroadcastPkts:   0
etherStatsMulticastPkts:   0
etherStatsCRCAlignErrors:  0
etherStatsUndersizePkts:   0
etherStatsOversizePkts:    0
etherStatsFragments:      NA
etherStatsJabbers:         0
etherStatsCollisions:      0
etherStatsPkts64Octets:    0
etherStatsPkts65to127Octets: 0
etherStatsPkts128to255Octets: 0
etherStatsPkts256to511Octets: 0
etherStatsPkts640Octets:   0
etherStatsPkts1024to1518Octets: 0
```

The following table describes the Remote Monitoring (RMON) statistics of the selected port:

**Table 52** RMON Statistics

Statistic	Description
etherStatsDropEvents	The total number of packets received that were dropped because of system resource constraints.
etherStatsOctets	The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets).
etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
etherStatsBroadcastPkts	The total number of good packets received that were directed to the broadcast address.
etherStatsMulticastPkts	The total number of good packets received that were directed to a multicast address.
etherStatsCRCAlignErrors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
etherStatsUndersizePkts	The total number of packets received that were less than 64 octets long (excluding framing bits but including FCS octets) and were otherwise well formed.
etherStatsOversizePkts	The total number of packets received that were longer than 1518 octets (excluding framing bits but including FCS octets) and were otherwise well formed.
etherStatsFragments	The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
etherStatsJabbers	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Jabber is defined as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms.
etherStatsCollisions	The best estimate of the total number of collisions on this Ethernet segment.
etherStatsPkts64 Octets	The total number of packets (including bad packets) received that were less than or equal to 64 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts65to127 Octets	The total number of packets (including bad packets) received that were greater than 64 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts128to255 Octets	The total number of packets (including bad packets) received that were greater than 127 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts256to511 Octets	The total number of packets (including bad packets) received that were greater than 255 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts512to1023 Octets	The total number of packets (including bad packets) received that were greater than 511 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts1024to1518 Octets	The total number of packets (including bad packets) received that were greater than 1023 octets in length (excluding framing bits but including FCS octets).

## Layer 2 statistics

**Command:** /stats/l2

```
[Layer 2 Statistics Menu]
fdb      - Show FDB stats
lacp     - Show LACP stats
hotlink  - Show Hot Links stats
```

The following table describes the **Layer 2 statistics menu** options.

**Table 53** Layer 2 statistics menu options

Command	Usage
fdb	Displays the Forwarding Database statistics menu.
lacp	Displays the Link Aggregation Control Protocol statistics menu.
hotlink	Displays Hot Links statistics.

## FDB statistics

**Command:** /stats/l2/fdb

This menu option enables you to display statistics regarding the use of the forwarding database, including the number of current entries and the maximum number of entries ever recorded.

The following table describes the Forwarding Database (FDB) statistics:

**Table 54** Forwarding Database statistics

Statistic	Description
current	Current number of entries in the Forwarding Database.
hiwat	Highest number of entries recorded at any given time in the Forwarding Database.

## LACP statistics

**Command:** /stats/l2/lacp <port number>

```
Valid LACPDUs received      - 0
Valid Marker PDUs received  - 0
Valid Marker Rsp PDUs received - 0
Unknown version/TLV type    - 0
Illegal subtype received     - 0
LACPDUs transmitted         - 0
Marker PDUs transmitted      - 0
Marker Rsp PDUs transmitted  - 0
```

## Hot Links statistics

**Command:** /stats/l2/hotlink

```
Hot Links Trigger Stats:
-----

Trigger 1 statistics:
Trigger Name: Corporate Uplinks
Master active:                0
Backup active:                0
FDB update:                   0   failed:                0
```

The following table describes the Hot Links statistics for each trigger:

**Table 55** Hot Links trigger statistics

Statistics	Description
Master active	Total number of times the Master interface transitioned to the Active state.
Backup active	Total number of times the Backup interface transitioned to the Active state.
FDB update	Total number of FDB update requests sent.
failed	Total number of FDB update requests that failed.

## Layer 3 statistics

**Command:** /stats/l3

```
[Layer 3 Statistics Menu]
geal3    - GEA Layer 3 Stats Menu
ip        - Show IP stats
route    - Show route stats
arp       - Show ARP stats
dns       - Show DNS stats
icmp      - Show ICMP stats
tcp       - Show TCP stats
udp       - Show UDP stats
igmp      - Show IGMP stats
ospf      - OSPF stats
vrrp      - Show VRRP stats
rip       - Show RIP stats
clrigmp   - Clear IGMP stats
ipclear   - Clear IP stats
geal3     -
dump      - Dump layer 3 stats
```

The following table describes the **Layer 3 statistics menu** options.

**Table 56** Layer 3 statistics menu options

Command	Usage
geal3	Displays the GEA statistics menu.
ip	Displays IP statistics.
route	Displays route statistics.
arp <clear>	Displays Address Resolution Protocol (ARP) statistics. Add the argument, clear, to clear ARP statistics.
dns	Displays Domain Name System (DNS) statistics.
icmp	Displays ICMP statistics.

**Table 56** Layer 3 statistics menu options

Command	Usage
tcp	Displays Transmission Control Protocol (TCP) statistics. Add the argument, clear, to clear TCP statistics.
udp	Displays User Datagram Protocol (UDP) statistics. Add the argument, clear, to clear UDP statistics.
igmp	Displays IGMP statistics.
ospf	Displays OSPF statistics menu.
vrrp	When virtual routers are configured, you can display the following <ul style="list-style-type: none"> <li>• Advertisements received (vrrpInAdvers)</li> <li>• Advertisements transmitted (vrrpOutAdvers)</li> <li>• Advertisements received, but ignored (vrrpBadAdvers)</li> </ul>
rip	Displays Routing Information Protocol (RIP) statistics
clrigmp <1-4095> all	Clears all IGMP statistics for the selected VLANs.
ipclear	Clears IP statistics. Use this command with caution as it will delete all the IP statistics.
dump	Displays all Layer 3 statistics.

## GEA Layer 3 statistics menu

**Command:** /stats/l3/geal3

```
[GEA Layer 3 Statistics Menu]
l3bucket - Show GEA L3 bucket for an IP address
dump      - Dump GEA layer 3 stats counter
```

The following table describes the Layer 3 GEA statistics menu options.

**Table 57** Layer 3 GEA statistics menu options

Command	Usage
l3bucket	Displays GEA statistics for a specific IP address.
dump	Displays all GEA statistics.

## GEA Layer 3 statistics

**Command:** /stats/l3/geal3/dump

```
GEA L3 statistics:
  Max L3 table size           : 4096
  Number of L3 entries used   : 9

  Max LPM table size          : 4097
  Number of LPM entries used   : 31
  Max block in LPM table      : 255
  Number of blocks used in LPM table: 24
```

## IP statistics

**Command:** /stats/l3/ip

```
IP statistics:
ipInReceives: 36475      ipInHdrErrors: 0
ipInAddrErrors: 905
ipInUnknownProtos: 0     ipInDiscards: 0
ipInDelivers: 4103       ipOutRequests: 30974
ipOutDiscards: 0
ipDefaultTTL: 255
```

The following table describes the IP statistics:

**Table 58** IP statistics

Statistics	Description
ipInReceives	The total number of input datagrams received from interfaces, including those received in error.
ipInHdrErrors	The number of input datagrams discarded due to errors in their IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options, and so on.
ipInAddrErrors	The number of input datagrams discarded because the IP address in their IP header destination field was not a valid address to be received at this GbE2 Interconnect Switch. This count includes invalid addresses (for example, 0.0.0.0) and addresses of unsupported classes (for example, Class E). For entities which are not IP gateways and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
ipInUnknownProtos	The number of locally addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.
ipInDiscards	The number of input IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (for example, for lack of buffer space). This counter does not include any datagrams discarded while awaiting re-assembly.
ipInDelivers	The total number of input datagrams successfully delivered to IP user-protocols (including ICMP).
ipOutRequests	The total number of IP datagrams that local IP user-protocols (including ICMP) supplied to IP in requests for transmission. This counter does not include any datagrams counted in ipForwDatagrams.
ipOutDiscards	The number of output IP datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (for example, for lack of buffer space). This counter would include datagrams counted in ipForwDatagrams if any such packets met this (discretionary) discard criterion.
ipDefaultTTL	The default value inserted into the Time-To-Live (TTL) field of the IP header of datagrams originated at this GbE2 Interconnect Switch, whenever a TTL value is not supplied by the transport layer protocol.

## Route statistics

**Command:** /stats/l3/route

```
Route statistics:
ipRoutesCur:           7   ipRoutesHighWater:           7
ipRoutesMax:           4096
```

The following table describes the Route statistics:

**Table 59** Route statistics

Statistics	Description
ipRoutesCur	The total number of outstanding routes in the route table.
ipRoutesMax	The maximum number of supported routes.
ipRoutesHighWater	The highest number of routes ever recorded in the route table.



## ARP statistics

**Command:** /stats/l3/arp

```
ARP statistics:
arpEntriesCur:                2  arpEntriesHighWater:                4
```

The following table describes the Address Resolution Protocol (ARP) statistics:

**Table 60** ARP statistics

Statistic	Description
arpEntriesCur	The total number of outstanding ARP entries in the ARP table.
arpEntriesHighWater	The highest number of ARP entries ever recorded in the ARP table.

## DNS statistics

**Command:** /stats/l3/dns

```
DNS statistics:
dnsInRequests:                0  dnsOutRequests:                0
dnsBadRequests:                0
```

The following table describes the Domain Name System (DNS) statistics:

**Table 61** DNS statistics

Statistic	Description
dnsInRequests	The total number of DNS request packets that have been received.
dnsOutRequests	The total number of DNS response packets that have been transmitted.
dnsBadRequests	The total number of DNS request packets received that were dropped.

## ICMP statistics

**Command:** /stats/l3/icmp

```
ICMP statistics:
icmpInMsgs:                245802  icmpInErrors:                1393
icmpInDestUnreaches:        41  icmpInTimeExcds:                0
icmpInParmProbs:            0  icmpInSrcQuenchs:            0
icmpInRedirects:            0  icmpInEchos:                  18
icmpInEchoReps:            244350  icmpInTimestamps:            0
icmpInTimestampReps:        0  icmpInAddrMasks:              0
icmpInAddrMaskReps:         0  icmpOutMsgs:                253810
icmpOutErrors:              0  icmpOutDestUnreaches:        15
icmpOutTimeExcds:           0  icmpOutParmProbs:            0
icmpOutSrcQuenchs:          0  icmpOutRedirects:            0
icmpOutEchos:               253777  icmpOutEchoReps:            18
icmpOutTimestamps:          0  icmpOutTimestampReps:        0
icmpOutAddrMasks:           0  icmpOutAddrMaskReps:         0
```

The following table describes the Internet Control Messaging Protocol (ICMP) statistics:

**Table 62** ICMP statistics

Statistics	Description
icmpInMsgs	The total number of ICMP messages which the GbE2 Interconnect Switch received. Note that this counter includes all those counted by icmpInErrors.
icmpInErrors	The number of ICMP messages which the GbE2 Interconnect Switch received but determined as having ICMP specific errors (for example bad ICMP checksums and bad length).
icmpInDestUnreaches	The number of ICMP Destination Unreachable messages received.
icmpInTimeExcds	The number of ICMP Time Exceeded messages received.

**Table 62** ICMP statistics

Statistics	Description
icmpInParmProbs	The number of ICMP Parameter Problem messages received.
icmpInSrcQuenchs	The number of ICMP Source Quench (buffer almost full, stop sending data) messages received.
icmpInRedirects	The number of ICMP Redirect messages received.
icmpInEchos	The number of ICMP Echo (request) messages received.
icmpInEchoReps	The number of ICMP Echo Reply messages received.
icmpInTimestamps	The number of ICMP Timestamp (request) messages received.
icmpInTimestampReps	The number of ICMP Timestamp Reply messages received.
icmpInAddrMasks	The number of ICMP Address Mask Request messages received.
icmpInAddrMaskReps	The number of ICMP Address Mask Reply messages received.
icmpOutMsgs	The total number of ICMP messages which this GbE2 Interconnect Switch attempted to send. Note that this counter includes all those counted by icmpOutErrors.
icmpOutErrors	The number of ICMP messages that this GbE2 Interconnect Switch did not send due to problems discovered within ICMP such as a lack of buffer. This value should not include errors discovered outside the ICMP layer such as the inability of IP to route the resultant datagram. In some implementations there may be no types of errors that contribute to this counter's value.
icmpOutDestUnreachs	The number of ICMP Destination Unreachable messages sent.
icmpOutTimeExcds	The number of ICMP Time Exceeded messages sent.
icmpOutParmProbs	The number of ICMP Parameter Problem messages sent.
icmpOutSrcQuenchs	The number of ICMP Source Quench (buffer almost full, stop sending data) messages sent.
icmpOutRedirects	The number of ICMP Redirect messages sent.
icmpOutEchos	The number of ICMP Echo (request) messages sent.
icmpOutEchoReps	The number of ICMP Echo Reply messages sent.
icmpOutTimestamps	The number of ICMP Timestamp (request) messages sent.
icmpOutTimestampReps	The number of ICMP Timestamp Reply messages sent.
icmpOutAddrMasks	The number of ICMP Address Mask Request messages sent.
icmpOutAddrMaskReps	The number of ICMP Address Mask Reply messages sent.

## TCP statistics

**Command:** /stats/13/tcp

```
TCP statistics:
tcpRtoAlgorithm:      4      tcpRtoMin:      0
tcpRtoMax:      240000      tcpMaxConn:      512
tcpActiveOpens:      252214      tcpPassiveOpens:      7
tcpAttemptFails:      528      tcpEstabResets:      4
tcpInSegs:      756401      tcpOutSegs:      756655
tcpRetransSegs:      0      tcpInErrs:      0
tcpCurBuff:      0      tcpCurConn:      3
tcpOutRsts:      417
```

The following table describes the Transmission Control Protocol (TCP) statistics:

**Table 63** TCP statistics

Statistics	Description
tcpRtoAlgorithm	The algorithm used to determine the timeout value used for retransmitting unacknowledged octets.
tcpRtoMin	The minimum value permitted by a TCP implementation for the retransmission timeout, measured in milliseconds. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission timeout. In particular, when the timeout algorithm is rsre(3), an object of this type has the semantics of the LBOUND quantity described in Request For Comments (RFC) 793.
tcpRtoMax	The maximum value permitted by a TCP implementation for the retransmission timeout, measured in milliseconds. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission timeout. In particular, when the timeout algorithm is rsre(3), an object of this type has the semantics of the UBOUND quantity described in RFC 793.
tcpMaxConn	The limit on the total number of TCP connections the GbE2 Interconnect Switch can support. In entities where the maximum number of connections is dynamic, this object should contain the value -1.
tcpActiveOpens	The number of times TCP connections have made a direct transition to the SYN-SENT state from the CLOSED state.
tcpPassiveOpens	The number of times TCP connections have made a direct transition to the SYN-RCVD state from the LISTEN state.
tcpAttemptFails	The number of times TCP connections have made a direct transition to the CLOSED state from either the SYN-SENT state or the SYN-RCVD state, plus the number of times TCP connections have made a direct transition to the LISTEN state from the SYN-RCVD state.
tcpEstabResets	The number of times TCP connections have made a direct transition to the CLOSED state from either the ESTABLISHED state or the CLOSE-WAIT state.
tcpInSegs	The total number of segments received, including those received in error. This count includes segments received on currently established connections.
tcpOutSegs	The total number of segments sent, including those on current connections but excluding those containing only retransmitted octets.
tcpRetransSegs	The total number of segments retransmitted, that is, the number of TCP segments transmitted containing one or more previously transmitted octets.
tcpInErrs	The total number of segments received in error (for example, bad TCP checksums).
tcpCurBuff	The total number of outstanding memory allocations from heap by TCP protocol stack.
tcpCurConn	The total number of outstanding TCP sessions that are currently opened.
tcpOutRsts	The number of TCP segments sent containing the reset (RST) flag.

## UDP statistics

**Command:** /stats/13/udp

```
UDP statistics:
udpInDatagrams:      54  udpOutDatagrams:      43
udpInErrors:         0  udpNoPorts:         1578077
```

The following table describes the User Datagram Protocol (UDP) statistics:

**Table 64** UDP statistics

Statistics	Description
udpInDatagrams	The total number of UDP datagrams delivered to the GbE2 Interconnect Switch.
udpOutDatagrams	The total number of UDP datagrams sent from this GbE2 Interconnect Switch.
udpInErrors	The number of received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port.
udpNoPorts	The total number of received UDP datagrams for which there was no application at the destination port.

## IGMP Multicast Group statistics

**Command:** /stats/13/igmp

```
Enter VLAN number: (1-4095) 1
-----
IGMP Snoop vlan 1 statistics:
-----
rxIgmpValidPkts:      0  rxIgmpInvalidPkts:      0
rxIgmpGenQueries:     0  rxIgmpGrpSpecificQueries: 0
rxIgmpLeaves:         0  rxIgmpReports:         0
txIgmpReports:        0  txIgmpGrpSpecificQueries: 0
txIgmpLeaves:         0
```

This menu option enables you to display statistics regarding the use of the IGMP Multicast Groups.

The following table describes the IGMP statistics:

**Table 65** IGMP statistics

Statistic	Description
rxIgmpValidPkts	Total number of valid IGMP packets received
rxIgmpInvalidPkts	Total number of invalid packets received
rxIgmpGenQueries	Total number of General Membership Query packets received
rxIgmpGrpSpecificQueries	Total number of Membership Query packets received from specific groups
rxIgmpLeaves	Total number of Leave requests received
rxIgmpReports	Total number of Membership Reports received
txIgmpReports	Total number of Membership reports transmitted
txIgmpGrpSpecificQueries	Total number of Membership Query packets transmitted to specific groups
txIgmpLeaves	Total number of Leave messages transmitted

## OSPF statistics menu

**Command:** /stats/l3/ospf

```
[OSPF stats Menu]
general - Show global stats
aindex  - Show area(s) stats
if       - Show interface(s) stats
```

The following table describes the OSPF statistics menu options.

**Table 66** OSPF statistics menu options

Command	Usage
general	Displays global statistics.
aindex <0-2>	Displays area index statistics.
if <1-255>	Displays interface statistics.

## OSPF global statistics

**Command:** /stats/l3/ospf/general

```
OSPF stats
-----
Rx/Tx Stats:                Rx                Tx
-----
Pkts                        0                0
hello                      23             518
database                    4                12
ls requests                 3                1
ls acks                     7                7
ls updates                  9                7
Nbr change stats:
  hello                     2
  start                     0
  n2way                     2
  adjoint ok                2
  negotiation done         2
  exchange done             2
  bad requests              0
  bad sequence              0
  loading done              2
  nlway                     0
  rst_ad                    0
  down                      1
Timers kickoff
  hello                     514
  retransmit                1028
  lsa lock                  0
  lsa ack                   0
  dbage                     0
  summary                   0
  ase export                0
Intf change Stats:
  up                        4
  down                      2
  loop                      0
  unloop                    0
  wait timer                2
  backup                    0
  nbr change                5
```

The following table describes the OSPF global statistics:

**Table 67** OSPF global statistics

Statistic	Description
<b>Rx Tx stats:</b>	
Rx Pkts	The sum total of all OSPF packets received on all OSPF areas and interfaces.
Tx Pkts	The sum total of all OSPF packets transmitted on all OSPF areas and interfaces.
Rx Hello	The sum total of all Hello packets received on all OSPF areas and interfaces.
Tx Hello	The sum total of all Hello packets transmitted on all OSPF areas and interfaces.
Rx Database	The sum total of all Database Description packets received on all OSPF areas and interfaces.

**Table 67** OSPF global statistics

Statistic	Description
Tx Database	The sum total of all Database Description packets transmitted on all OSPF areas and interfaces.
Rx ls Requests	The sum total of all Link State Request packets received on all OSPF areas and interfaces.
Tx ls Requests	The sum total of all Link State Request packets transmitted on all OSPF areas and interfaces.
Rx ls Acks	The sum total of all Link State Acknowledgement packets received on all OSPF areas and interfaces.
Tx ls Acks	The sum total of all Link State Acknowledgement packets transmitted on all OSPF areas and interfaces.
Rx ls Updates	The sum total of all Link State Update packets received on all OSPF areas and interfaces.
Tx ls Updates	The sum total of all Link State Update packets transmitted on all OSPF areas and interfaces.
<b>Nbr change stats:</b>	
hello	The sum total of all Hello packets received from neighbors on all OSPF areas and interfaces.
Start	The sum total number of neighbors in this state (that is, an indication that Hello packets should now be sent to the neighbor at intervals of <code>HelloInterval</code> seconds) across all OSPF areas and interfaces.
n2way	The sum total number of bidirectional communication establishment between this router and other neighboring routers.
adjoint ok	The sum total number of decisions to be made (again) as to whether an adjacency should be established/maintained with the neighbor across all OSPF areas and interfaces.
negotiation done	The sum total number of neighbors in this state wherein the Master/slave relationship has been negotiated, and sequence numbers have been exchanged, across all OSPF areas and interfaces.
exchange done	The sum total number of neighbors in this state (that is, in an adjacency's final state) having transmitted a full sequence of Database Description packets, across all OSPF areas and interfaces.
bad requests	The sum total number of Link State Requests which have been received for a link state advertisement not contained in the database across all interfaces and OSPF areas.
bad sequence	<p>The sum total number of Database Description packets which have been received that either:</p> <ul style="list-style-type: none"> <li>• Has an unexpected DD sequence number</li> <li>• Unexpectedly has the init bit set</li> <li>• Has an options field differing from the last Options field received in a Database Description packet.</li> </ul> <p>Any of these conditions indicate that some error has occurred during adjacency establishment for all OSPF areas and interfaces.</p>
loading done	The sum total number of link state updates received for all out-of-date portions of the database across all OSPF areas and interfaces.
n1way	The sum total number of Hello packets received from neighbors, in which this router is not mentioned across all OSPF interfaces and areas.
rst_ad	The sum total number of times the Neighbor adjacency has been reset across all OSPF areas and interfaces.
down	The total number of Neighboring routers down (that is, in the initial state of a neighbor conversation) across all OSPF areas and interfaces.
<b>Intf Change Stats:</b>	
up	The sum total number of interfaces up in all OSPF areas.
down	The sum total number of interfaces down in all OSPF areas.
loop	The sum total of interfaces no longer connected to the attached network across all OSPF areas and interfaces.

**Table 67** OSPF global statistics

Statistic	Description
unloop	The sum total number of interfaces, connected to the attached network in all OSPF areas.
wait timer	The sum total number of times the Wait Timer has been fired, indicating the end of the waiting period that is required before electing a (Backup) Designated Router across all OSPF areas and interfaces.
backup	The sum total number of Backup Designated Routers on the attached network for all OSPF areas and interfaces.
nbr change	The sum total number of changes in the set of bidirectional neighbors associated with any interface across all OSPF areas.
<b>Timers Kickoff:</b>	
hello	The sum total number of times the Hello timer has been fired (which triggers the send of a Hello packet) across all OPSF areas and interfaces.
retransmit	The sum total number of times the Retransmit timer has been fired across all OPSF areas and interfaces.
lsa lock	The sum total number of times the Link State Advertisement (LSA) lock timer has been fired across all OSPF areas and interfaces.
lsa ack	The sum total number of times the LSA Ack timer has been fired across all OSPF areas and interfaces.
dbage	The total number of times the data base age (Dbage) has been fired.
summary	The total number of times the Summary timer has been fired.
ase export	The total number of times the Autonomous System Export (ASE) timer has been fired.

## VRRP statistics

Virtual Router Redundancy Protocol (VRRP) support on the GbE2 Interconnect Switch provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device.

One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

When virtual routers are configured, you can display the following protocol statistics for VRRP:

- Advertisements received (vrrpInAdvers)
- Advertisements transmitted (vrrpOutAdvers)
- Advertisements received, but ignored (vrrpBadAdvers)

**Command:** /stats/l3/vrrp

```
>> Layer 3 Statistics# vrrp
VRRP statistics:
vrrpInAdvers:          0    vrrpBadAdvers:          0
vrrpOutAdvers:         0
vrrpBadVersion:        0    vrrpBadVrid:            0
vrrpBadAddress:        0    vrrpBadData:            0
vrrpBadPassword:       0    vrrpBadInterval:        0
```

The following table describes the VRRP statistics.

**Table 68** VRRP statistics

Field	Description
vrrpInAdvers	The total number of VRRP advertisements that have been received.
vrrpOutAdvers	The total number of VRRP advertisements that have been sent.
vrrpBadVersion	The total number of VRRP advertisements that had a bad version number.
vrrpBadAddress	The total number of VRRP advertisements that had a bad address.
vrrpBadPassword	The total number of VRRP advertisements that had a bad password.
vrrpBadAdvers	The total number of VRRP advertisements received that were dropped.
vrrpBadVrid	The total number of VRRP advertisements that had a bad virtual router ID.
vrrpBadData	The total number of VRRP advertisements that had bad data.
vrrpBadInterval	The total number of VRRP advertisements that had a bad interval.

## RIP statistics

**Command:** /stats/l3/rip

```
RIP ALL STATS INFORMATION:
  RIP packets received = 12
  RIP packets sent = 75
  RIP request received = 0
  RIP response received = 12
  RIP request sent = 3
  RIP response sent = 72
  RIP route timeout = 0
  RIP bad size packet received = 0
  RIP bad version received = 0
  RIP bad zeros received = 0
  RIP bad src port received = 0
  RIP bad src IP received = 0
  RIP packets from self received = 0
```

## Management Processor statistics

**Command:** /stats/mp

```
[MP-specific Statistics Menu]
  tcb      - Show All TCP control blocks in use
  ucb      - Show All UDP control blocks in use
  cpu      - Show CPU utilization
```

The following table describes the MP-specific Statistics Menu options:

**Table 69** MP-specific Statistics Menu

Command	Usage
tcb	Displays all Transmission Control Protocol (TCP) control blocks (TCB) that are in use.
ucb	Displays all User Datagram Protocol (UDP) control blocks (UCB) that are in use.
cpu	Displays CPU utilization for periods of up to 1, 4, and 64 seconds.



## TCP statistics

**Command:** /stats/mp/tcb

```
All TCP allocated control blocks:
10ad41e8:  0.0.0.0          0 <=> 0.0.0.0          80  listen
10ad5790:  47.81.27.5         1171 <=> 47.80.23.243    23  established
```

The following table describes the Transmission Control Protocol (TCP) control block (TCB) statistics shown in this example:

**Table 70** MP specified TCP statistics

Description	Example statistic
Memory	10ad41e8/10ad5790
Destination IP address	0.0.0.0/47.81.27.5
Destination port	0/1171
Source IP	0.0.0.0/47.80.23.243
Source port	80/23
State	listen/established

## UDP statistics

**Command:** /stats/mp/ucb

```
All UDP allocated control blocks:
161:  listen
```

The following table describes the User Datagram Protocol (UDP) control block (UCB) statistics shown in this example:

**Table 71** UDP statistics

Description	Example Statistic
Control block	161
State	listen

## CPU statistics

**Command:** /stats/mp/cpu

```
CPU utilization:
cpuUtil1Second:      8%
cpuUtil4Seconds:     9%
cpuUtil64Seconds:    8%
```

The following table describes the management port CPU utilization statistics:

**Table 72** CPU statistics

Statistics	Description
cpuUtil1Second	The utilization of MP CPU over 1 second. This is shown as a percentage.
cpuUtil4Seconds	The utilization of MP CPU over 4 seconds. This is shown as a percentage.
cpuUtil64Seconds	The utilization of MP CPU over 64 seconds. This is shown as a percentage.

## Access Control List (ACL) statistics menu

**Command:** /stats/acl

```
[ACL Menu]
acl       - Display ACL stats
meter     - Display ACL metering stats
dump      - Display all available ACL stats
clracl    - Clear ACL stats
clrmeter  - Clear ACL metering stats
```

The following table describes the Access Control List (ACL) Statistics menu options:

**Table 73** ACL statistics menu options

Command	Usage
acl <1-4096>	Displays the Access Control List Statistics for a specific ACL.
meter <1-63>	Displays statistics for a specific ACL Meter.
dump	Displays all ACL statistics.
clracl	Clear all ACL statistics.
clrmeter	Clears all ACL metering statistics.

## ACL statistics

**Command:** /stats/acl/acl <1-4096>

```
Hits for ACL 1, port 20: 26057515
Hits for ACL 2, port 21: 26057497
```

## ACL meter statistics

**Command:** /stats/acl/meter <1-63>

```
Meters for ACL Group 1, Port 22: Out of profile: 0
Meters for ACL Group 2, Port 23: Out of profile: 0
```

## SNMP statistics

**Command:** /stats/snmp

```
SNMP statistics:
snmpInPkts:                54    snmpInBadVersions:                0
snmpInBadC'tyNames:        0    snmpInBadC'tyUses:                0
snmpInASNParseErrs:        0    snmpEnableAuthTraps:              0
snmpOutPkts:               54    snmpInBadTypes:                   0
snmpInTooBigs:              0    snmpInNoSuchNames:                0
snmpInBadValues:            0    snmpInReadOnlys:                  0
snmpInGenErrs:              0    snmpInTotalReqVars:               105
snmpInTotalSetVars:         0    snmpInGetRequests:                 2
snmpInGetNexts:            52    snmpInSetRequests:                 0
snmpInGetResponses:         0    snmpInTraps:                       0
snmpOutTooBigs:             0    snmpOutNoSuchNames:                2
snmpOutBadValues:           0    snmpOutReadOnlys:                  0
snmpOutGenErrs:             0    snmpOutGetRequests:                0
snmpOutGetNexts:           0    snmpOutSetRequests:                0
snmpOutGetResponses:       54    snmpOutTraps:                      0
snmpSilentDrops:            0    snmpProxyDrops:                    0
```

The following table describes the Simple Network Management Protocol (SNMP) statistics:

**Table 74** SNMP statistics

Statistics	Description
snmpInPkts	The total number of messages delivered to the SNMP entity from the transport service.
snmpInBadVersions	The total number of SNMP messages, which were delivered to the SNMP protocol entity and were for an unsupported SNMP version.
snmpInBadCommunityNames	The total number of SNMP messages delivered to the SNMP entity that used an SNMP community name not known to the GbE2 Interconnect Switch.
snmpInBadCommunityUses	The total number of SNMP messages delivered to the SNMP protocol entity that represented an SNMP operation which was not allowed by the SNMP community named in the message.
snmpInASNParseErrs	<p>The total number of ASN.1 (Abstract Syntax Notation One) or BER (Basic Encoding Rules), errors encountered by the SNMP protocol entity when decoding SNMP messages received.</p> <p>The Open Systems Interconnection (OSI) method of specifying abstract objects is called ASN.1 (Abstract Syntax Notation One, defined in X.208), and one set of rules for representing such objects as strings of ones and zeros is called the BER (Basic Encoding Rules, defined in X.209).</p> <p>ASN.1 is a flexible notation that allows one to define a variety of data types, from simple types such as integers and bit strings to structured types such as sets and sequences.</p> <p>BER describes how to represent or encode values of each ASN.1 type as a string of eight-bit octets.</p>
snmpEnableAuthTraps	An object to enable or disable the authentication traps generated by this GbE2 Interconnect Switch.
snmpOutPkts	The total number of SNMP messages which were passed from the SNMP protocol entity to the transport service.
snmpInBadTypes	The total number of SNMP messages which failed ASN.1 parsing.
snmpInTooBigs	The total number of SNMP Protocol Data Units (PDUs) that were delivered to the SNMP protocol entity and for which the value of the error-status field is too big.
snmpInNoSuchNames	The total number of SNMP Protocol Data Units (PDUs) that were delivered to the SNMP protocol entity and for which the value of the error-status field is noSuchName.
snmpInBadValues	The total number of SNMP Protocol Data Units (PDUs) that were delivered to the SNMP protocol entity and for which the value of the error-status field is badValue.
snmpInReadOnlyS	<p>The total number of valid SNMP Protocol Data Units (PDUs), which were delivered to the SNMP protocol entity and for which the value of the error-status field is read-only.</p> <p>It should be noted that it is a protocol error to generate an SNMP PDU, which contains the value read-only in the error-status field. As such, this object is provided as a means of detecting incorrect implementations of the SNMP.</p>
snmpInGenErrs	The total number of SNMP Protocol Data Units (PDUs), which were delivered to the SNMP protocol entity and for which the value of the error-status field is genErr.
snmpInTotalReqVars	The total number of MIB objects which have been retrieved successfully by the SNMP protocol entity as a result of receiving valid SNMP Get-Request and Get-Next Protocol Data Units (PDUs).
snmpInTotalSetVars	The total number of MIB objects, which have been altered successfully by the SNMP protocol entity as a result of receiving valid SNMP Set-Request Protocol Data Units (PDUs).
snmpInGetRequests	The total number of SNMP Get-Request Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpInGetNexts	The total number of SNMP Get-Next Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.

**Table 74** SNMP statistics

Statistics	Description
snmpInSetRequests	The total number of SNMP Set-Request Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpInGetResponses	The total number of SNMP Get-Response Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpInTraps	The total number of SNMP Trap Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpOutTooBig	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is too big.
snmpOutNoSuchNames	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status is noSuchName.
snmpOutBadValues	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is badValue.
snmpOutReadOnly	Not in use.
snmpOutGenErrs	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is genErr.
snmpOutGetRequests	The total number of SNMP Get-Request Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutGetNexts	The total number of SNMP Get-Next Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutSetRequests	The total number of SNMP Set-Request Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutGetResponses	The total number of SNMP Get-Response Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutTraps	The total number of SNMP Trap Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpSilentDrops	The total number of GetRequest-PDUs, GetNextRequest-PDUs, GetBulkRequest-PDUs, SetRequest-PDUs, and InformRequest-PDUs delivered to the SNMP entity which were silently dropped because the size of a reply containing an alternate Response-PDU with an empty variable-bindings field was too large.
snmpProxyDrops	The total number of GetRequest-PDUs, GetNextRequest-PDUs, GetBulkRequest-PDUs, SetRequest-PDUs, and InformRequest-PDUs delivered to the SNMP entity which were silently dropped because the transmission of the message to a proxy target failed in a manner (other than a time-out) such that no Response-PDU could be returned.

## NTP statistics

**Command:** /stats/ntp

```

NTP statistics:
  Primary Server:
    Requests Sent:           17
    Responses Received:      17
    Updates:                 1
  Secondary Server:
    Requests Sent:           0
    Responses Received:      0
    Updates:                 0
  Last update based on response from primary server.
  Last update time: 18:04:16 Tue Feb 27, 2007
  Current system time: 18:55:49 Tue Feb 27, 2007

```

The GbE2 Interconnect Switch uses NTP (Network Timing Protocol) version 3 to synchronize the switch's internal clock with an atomic time-calibrated NTP server. With NTP enabled, the switch can accurately update its internal clock to be consistent with other devices on the network and generates accurate syslogs.

The following table describes the NTP statistics:

**Table 75** NTP statistics

Statistics	Description
Primary Server	Requests Sent: The total number of NTP requests the switch sent to the primary NTP server to synchronize time. Responses Received: The total number of NTP responses received from the primary NTP server. Updates: The total number of times the switch updated its time based on the NTP responses received from the primary NTP server.
Secondary Server	Requests Sent: The total number of NTP requests the switch sent to the secondary NTP server to synchronize time. Responses Received: The total number of NTP responses received from the secondary NTP server. Updates: The total number of times the switch updated its time based on the NTP responses received from the secondary NTP server.
Last update based on response from primary server	Last update of time on the switch based on either primary or secondary NTP response received.
Last update time	The time stamp showing the time when the switch was last updated.
Current system time	The switch system time when the command <code>/stats/ntp</code> was issued.

## Link statistics

**Command:** `/stats/port <port number>/link`

```
Link statistics for port 1:
linkStateChange:          1
```

The following table describes the link statistics for a port:

**Table 76** Link statistics

Statistics	Description
linkStateChange	The total number of link state changes.

## DNS statistics

This menu option enables you to display Domain Name system statistics.

**Command:** `/stats/dns`

```
DNS statistics:
dnsInRequests:          0  dnsOutRequests:          0
dnsBadRequests:         0
```

The following table describes the Domain Name System (DNS) statistics:

**Table 77** DNS statistics

Statistic	Description
dnsInRequests	The total number of DNS request packets that have been received.
dnsOutRequests	The total number of DNS response packets that have been transmitted.
dnsBadRequests	The total number of DNS request packets received that were dropped.

## Uplink Failure Detection statistics

This menu option allows you to display Uplink Failure Detection (UFD) statistics. To reset UFD statistics, follow the command `/cfg/ufd` with the following argument: `clear`.

**Command:** `/stats/ufd`

```
Uplink Failure Detection statistics:
Number of times LtM link failure: 1
Number of times LtM link in Blocking State: 0
Number of times LtD got auto disabled: 1
```

The following table describes the Uplink Failure Detection (UFD) statistics:

**Table 78** Uplink Failure Detection statistics

Statistic	Description
Number of times LtM link failure	The total numbers of times that link failures were detected on the uplink ports in the Link to Monitor group.
Number of times LtM link in Blocking State	The total number of times that Spanning Tree Blocking state was detected on the uplink ports in the Link to Monitor group.
Number of times LtD got auto disabled	The total numbers of times that downlink ports in the Link to Disable group were automatically disabled because of a failure in the Link to Monitor group.

## Statistics dump

**Command:** `/stats/dump`

Use the **dump** command to dump all GbE2 Interconnect Switch statistics available from the Statistics Menu (40K or more, depending on your configuration). This data can be used to tune or debug GbE2 Interconnect Switch performance.

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

# Configuration Menu

## Introduction

The Configuration Menu is only available from an administrator login. It includes submenus for configuring every aspect of the GbE2 Interconnect Switch. Changes to configuration are not active until explicitly applied. Changes can be saved to non-volatile memory (NVRAM).

## Menu information

**Command:** /cfg

```
[Configuration Menu]
  sys      - System-wide Parameter Menu
  port     - Port Menu
  l2       - Layer 2 Menu
  l3       - Layer 3 Menu
  qos      - QOS Menu
  acl      - Access Control List Menu
  rmon     - RMON Menu
  pmirr    - Port Mirroring Menu
  ufd      - Uplink Failure Detection Menu
  dump     - Dump current configuration to script file
  ptcfg    - Backup current configuration to FTP/TFTP server
  gtcfg    - Restore current configuration from FTP/TFTP server
  cur      - Display current configuration
```

The following table describes the Configuration Menu options.

**Table 79** Configuration Menu options

Command	Usage
sys	Displays the System Configuration Menu.
port <port number>	Displays the Port Configuration Menu.
l2	Displays the Layer 2 Configuration Menu.
l3	Displays the Layer 3 Configuration Menu.
qos	Displays the Quality of Service Configuration Menu.
acl	Displays the Access Control List Configuration Menu.
rmon	Displays the RMON Configuration Menu.
pmirr	Displays the Mirroring Configuration Menu.
ufd	Displays the Uplink Failure Detection Configuration Menu.
dump	Dumps current configuration to a script file.
ptcfg <host name or IP address of TFTP server> <filename on host>	Backs up current configuration to TFTP server.
gtcfg <host name or IP address of TFTP server> <filename on host>	Restores current configuration from TFTP server.
cur	Displays current configuration parameters of the GbE2.

## Viewing, applying, reverting, and saving changes

As you use the configuration menus to set GbE2 Interconnect Switch parameters, the changes you make do not take effect immediately. All changes are considered pending until you explicitly apply them. Also, any changes are lost the next time the GbE2 Interconnect Switch boots unless the changes are explicitly saved.

While configuration changes are in the pending state, you can:

- View the pending changes
- Apply the pending changes
- Revert to restore configuration parameters set with the last apply command
- Save the changes to flash memory

## Viewing pending changes

You can view all pending configuration changes by entering `diff` at any CLI prompt:

```
# diff
```

You can view all pending configuration changes that have been applied but not saved to flash memory by entering `diff flash` at any CLI prompt:

```
# diff flash
```

## Applying pending changes

To make your configuration changes active, you must apply them. To apply configuration changes, enter the following command at any prompt:

```
# apply
```



**NOTE:** All configuration changes take effect immediately when applied.

## Reverting changes

The **revert** command removes configuration changes that have been made, but not applied. Enter `revert apply` to remove all changes that have not been saved:

```
# revert
```

## Saving the configuration

In addition to applying the configuration changes, you can save them to flash memory on the GbE2 Interconnect Switch.



**IMPORTANT:** If you do not save the changes, they will be lost the next time the system is rebooted.

To save the new configuration, enter the following command at any prompt:

```
# save
```

When you save configuration changes, the changes are saved to the active configuration block. The configuration being replaced by the save is first copied to the backup configuration block. If you do not want the previous configuration block copied to the backup configuration block, enter the following instead:

```
# save n
```



You can decide which configuration you want to run the next time you reset the GbE2 Interconnect Switch. Your options include:

- The active configuration block
- The backup configuration block
- Factory default configuration block

You can view all pending configuration changes that have been applied but not saved to flash memory using the **diff flash** command. It is a global command that can be executed from any prompt.

For instructions on selecting the configuration to run at the next system reset, see the “Selecting a configuration block” section in the “Boot Options Menu” chapter.

## Reminders

CLI reminders prompt users to complete configuration tasks that require multiple steps. The default setting for CLI reminders is enabled. Use the following command to disable CLI reminders: `/cfg/sys/reminders dis`

The following is an example of a configuration task performed with CLI reminders enabled.

```
>> Layer 2# vlan 5
VLAN number 5 with name "VLAN 5" created.
Reminder: VLAN 5 needs to be enabled.

>> VLAN 5# add 9
Port 9 is an UNTAGGED port and its current PVID is 1.
Confirm changing PVID from 1 to 5 [y/n]: y
Current ports for VLAN 5:          empty
Pending new ports for VLAN 5:      9
Reminder: Port 9 needs to be enabled.
Reminder: VLAN 5 needs to be enabled.
```

## System configuration

**Command:** `/cfg/sys`

```
[System Menu]
  syslog      - Syslog Menu
  sshd        - SSH Server Menu
  radius      - RADIUS Authentication Menu
  tacacs+     - TACACS+ Authentication Menu
  ntp         - NTP Server Menu
  snmp        - System SNMP Menu
  access      - System Access Menu
  date        - Set system date
  time        - Set system time
  timezone    - Set system timezone (daylight savings)
  olddst      - Set system DST for US
  idle        - Set timeout for idle CLI sessions
  notice      - Set login notice
  bannr       - Set login banner
  hprompt     - Enable/disable display hostname (sysName) in CLI prompt
  bootp       - Enable/disable use of BOOTP
  reminders   - Enable/disable Reminders
  cur         - Display current system-wide parameters
```

This menu provides configuration of GbE2 Interconnect Switch management parameters such as user and administrator privilege mode passwords, browser-based management settings, and management access list.

The following table describes the System Configuration Menu options.

**Table 80** System Configuration Menu options

Command	Usage
syslog	Displays the Syslog Menu.
sshd	Displays the SSH Server Menu.
radius	Displays the RADIUS Authentication Menu.
tacacs+	Displays the TACACS+ Menu.
ntp	Displays the Network Time Protocol (NTP) Server Menu.
ssnmp	Displays the System SNMP Menu.
access	Displays the System Access Menu.
date	Prompts the user for the system date.
time	Configures the system time using a 24-hour clock format.
timezone	Configures the time zone where the switch resides. You are prompted to select your location (continent, country, region) by the timezone wizard. Once a region is selected, the switch updates the time to reflect local changes to Daylight Savings Time, etc.
olddst	Enables or disables use of the Daylight Saving Time (DST) rules in effect prior to the year 2007. The default value is disabled.
idle <1-60>	Sets the idle timeout for CLI sessions, from 1 to 60 minutes. The default is 5 minutes.
notice <1-1024 character multi-line> <'-' to end>	Displays login notice immediately before the "Enter password:" prompt. This notice can contain up to 1024 characters and new lines.
bannr <1-80 characters>	Configures a login banner of up to 80 characters. When a user or administrator logs into the GbE2 Interconnect Switch, the login banner is displayed. It is also displayed as part of the output from the /info/sys/gen command.
hprompt disable enable	Enables or disables displaying of the host name (system administrator's name) in the command line interface.
bootp disable enable	Enables or disables the use of BOOTP. If you enable BOOTP, the GbE2 Interconnect Switch will query its BOOTP server for all of the GbE2 Interconnect Switch IP parameters. The default is enable.
reminders disable enable	Enables or disables reminder messages in the CLI. The default value is enabled.
cur	Displays the current system parameters.

## System host log configuration

**Command:** /cfg/sys/syslog

```
[Syslog Menu]
host      - Set IP address of first syslog host
host2     - Set IP address of second syslog host
sever     - Set the severity of first syslog host
sever2    - Set the severity of second syslog host
facil     - Set facility of first syslog host
facil2    - Set facility of second syslog host
console   - Enable/disable console output of syslog messages
log       - Enable/disable syslogging of features
cur       - Display current syslog settings
```

The following table describes the Syslog Configuration Menu options.

**Table 81** Syslog Configuration Menu options

Command	Description
host <IP address>	Sets the IP address of the first syslog host. For example, 100.10.1.1
host2 <IP address>	Sets the IP address of the second syslog host. For example, 100.10.1.2
sever <1-7>	Sets the severity level of the first syslog host displayed. The default is 7, which means log all the seven severity levels.
sever2 <1-7>	Sets the severity level of the second syslog host displayed. The default is 7, which means log all the seven severity levels.
facil <1-7>	This option sets the facility level of the first syslog host displayed. The default is 0.
facil2 <1-7>	This option sets the facility level of the second syslog host displayed. The default is 0.
console disable enable	Enables or disables delivering syslog messages to the console. When necessary, disabling console ensures the GbE2 Interconnect Switch is not affected by syslog messages. It is enabled by default.
log <feature all> enable disable	Displays a list of features for which syslog messages can be generated. You can choose to enable/disable specific features or enable/disable syslog on all available features. Features include: <ul style="list-style-type: none"><li>• console</li><li>• system</li><li>• mgmt</li><li>• cli</li><li>• stg</li><li>• vlan</li><li>• ssh</li><li>• vrrp</li><li>• ntp</li><li>• hotlink</li><li>• ip</li><li>• web</li><li>• ospf</li><li>• rmon</li><li>• ufd</li><li>• 802.1x</li><li>• cfg</li></ul>
cur	Displays the current syslog settings.

## Secure Shell Server configuration

**Command:** /cfg/sys/sshd

```
[SSHD Menu]
interval- Set Interval for generating the RSA server key
scpadm   - Set SCP-only admin password
hkeygen  - Generate the RSA host key
skeygen  - Generate the RSA server key
sshport  - Set SSH server port number
ena      - Enable the SCP apply and save
dis      - Disable the SCP apply and save
on       - Turn SSH server ON
off      - Turn SSH server OFF
cur      - Display current SSH server configuration
```

Telnet traffic on the network is not secure. This menu enables Secure Shell (SSH) access from any SSH client. The SSH program securely logs into another computer over a network and executes commands in a secure environment. All data using SSH is encrypted.

Secure Shell can be configured on the GbE2 Interconnect Switch using the console port only. Several of the above menu options do not display if you access the GbE2 Interconnect Switch using Telnet or the Browser-Based Interface (BBI).



**NOTE:** See the *HP ProLiant BL p-Class GbE2 Interconnect Switch Application Guide* for information on SSH.

The following table describes the **SSHD Configuration Menu** options.

**Table 82** SSHD Configuration Menu options

Command	Description
interval <0-24>	Defines interval for auto-generating the RSA server key. The switch will auto-generate the RSA server key at the interval defined in this command. The value of zero (0) means the RSA server key auto-generation is disabled. If the switch has been busy performing any other key generation and the assigned time of interval expires, the RSA server will skip generating the key.
scpadm	Defines the administrator password that is for Secure Copy (SCP) only. The username for this SCP administrator is <i>scpadmin</i> . Typically, SCP is used to copy files securely from one machine to another. In the GbE2 Interconnect Switch, SCP is used to download and upload the switch configuration using secure channels.
hkeygen	Generates the RSA host keys manually. The GbE2 Interconnect Switch creates this key automatically while configuring the switch with Secure Shell (SSH). But you can generate the key manually by using this command if you need to overwrite the key for security reasons. The command will take effect immediately without executing the apply command.
skeygen	Generates the RSA server key. The GbE2 Interconnect Switch creates this key automatically while configuring the switch with Secure Shell (SSH). You can generate the key manually by using this command if you need to overwrite the key for security reasons. The command will take effect immediately without executing the apply command.
sshport <TCP port number>	Sets the SSH server port number.
ena	Enables the SCP apply and save.
dis	Disables the SCP apply and save. This is the default for SCP.
on	Enables the SSH server.
off	Disables the SSH server. This is the default for the SSH server.
cur	Displays the current SSH server configuration.

## RADIUS server configuration

**Command:** /cfg/sys/radius

```

[RADIUS Server Menu]
  prsrv   - Set primary RADIUS server address
  secsrv  - Set secondary RADIUS server address
  secret  - Set primary RADIUS server secret
  secret2 - Set secondary RADIUS server secret
  port    - Set RADIUS port
  retries - Set RADIUS server retries
  timeout - Set RADIUS server timeout
  telnet  - Enable/disable RADIUS backdoor for telnet/ssh/http
  secbd   - Enable/disable RADIUS secure backdoor for telnet/ssh/http
  on      - Turn RADIUS authentication ON
  off     - Turn RADIUS authentication OFF
  cur     - Display current RADIUS configuration

```



**NOTE:** See the *HP ProLiant BL p-Class GbE2 Interconnect Switch Application Guide* for information on RADIUS.

The following table describes the RADIUS Server Configuration Menu options.

**Table 83** RADIUS Server Configuration Menu options

Command	Description
<code>prsrv &lt;IP address&gt;</code>	Sets the primary RADIUS server address. For example, 100.10.1.1
<code>secsrv &lt;IP address&gt;</code>	Sets the secondary RADIUS server address. For example, 100.10.1.2
<code>secret &lt;1-32 characters&gt;</code>	This is the shared secret between the GbE2 Interconnect Switch and the RADIUS server(s).
<code>secret2 &lt;1-32 characters&gt;</code>	This is the secondary shared secret between the switch and the RADIUS server(s).
<code>port &lt;UDP port number&gt;</code>	Enter the number of the User Datagram Protocol (UDP) port to be configured, between 1500-3000. The default is 1645.
<code>retries &lt;1-3&gt;</code>	Sets the number of failed authentication requests before switching to a different RADIUS server. The default is 3 requests.
<code>timeout &lt;1-10&gt;</code>	Sets the amount of time, in seconds, before a RADIUS server authentication attempt is considered to have failed. The default is 3 seconds.
<code>telnet</code>	Enables or disables the RADIUS back door for telnet/SSH/ HTTP/HTTPS. This command does not apply when secure backdoor ( <code>secbd</code> ) is enabled.
<code>secbd enable disable</code>	Enables or disables the RADIUS back door using secure password for telnet/SSH/ HTTP/HTTPS.
<code>on</code>	Enables the RADIUS server.
<code>off</code>	Disables the RADIUS server. This is the default.
<code>cur</code>	Displays the current RADIUS server parameters.



**IMPORTANT:** If RADIUS is enabled, you are required to login using RADIUS when using Telnet. If a RADIUS server is not available and the Telnet backdoor is enabled, type in `noradius` as a backdoor to bypass RADIUS checking, and use the administrator password to log into the GbE2 Interconnect Switch. Using **noradius** is only allowed if the RADIUS server is not available.

## TACACS+ server configuration

**Command:** /cfg/sys/tacacs+

```
[TACACS+ Server Menu]
prisrv - Set IP address of primary TACACS+ server
secsrv - Set IP address of secondary TACACS+ server
secret - Set secret for primary TACACS+ server
secret2 - Set secret for secondary TACACS+ server
port - Set TACACS+ port number
retries - Set number of TACACS+ server retries
timeout - Set timeout value of TACACS+ server retries
telnet - Enable/disable TACACS+ back door for telnet/ssh/http/https
secbd - Enable/disable TACACS+ secure backdoor for telnet/ssh/http/https
cmap - Enable/disable TACACS+ new privilege level mapping
usermap - Set user privilege mappings
on - Enable TACACS+ authentication
off - Disable TACACS+ authentication
cur - Display current TACACS+ settings
```

TACACS+ (Terminal Access Controller Access Control System) is an authentication protocol that allows a remote access server to forward a user's logon password to an authentication server to determine whether access can be allowed to a given system. TACACS+ and Remote Authentication Dial-In User Service (RADIUS) protocols are more secure than the TACACS encryption protocol. TACACS+ is described in RFC 1492.

TACACS+ protocol is more reliable than RADIUS, as TACACS+ uses the Transmission Control Protocol (TCP) whereas RADIUS uses the User Datagram Protocol (UDP). Also, RADIUS combines authentication and authorization in a user profile, whereas TACACS+ separates the two operations.

TACACS+ offers the following advantages over RADIUS as the authentication device:

- TACACS+ is TCP-based, so it facilitates connection-oriented traffic.
- It supports full-packet encryption, as opposed to password-only in authentication requests.
- It supports decoupled authentication, authorization, and accounting.

The following table describes the TACACS+ Server Configuration Menu options.

**Table 84** TACACS+ Server Configuration Menu options

Command	Description
prisrv <IP address>	Defines the primary TACACS+ server address. For example, 100.10.1.1
secsrv <IP address>	Defines the secondary TACACS+ server address. For example, 100.10.1.2
secret <1-32 characters>	This is the shared secret between the switch and the TACACS+ server(s).
secret2 <1-32 characters>	This is the secondary shared secret between the switch and the TACACS+ server(s).
port <TCP port number>	Enter the number of the TCP port to be configured, between 1 - 65000. The default is 49.
retries <1-3>	Sets the number of failed authentication requests before switching to a different TACACS+ server. The range is 1-3 requests. The default is 3 requests.
timeout <4-15>	Sets the amount of time, in seconds, before a TACACS+ server authentication attempt is considered to have failed. The range is 4-15 seconds. The default is 5 seconds.
telnet enable disable	Enables or disables the TACACS+ back door for telnet. The telnet command also applies to SSH/SCP connections and the Browser-based Interface (BBI). This command does not apply when secure backdoor (secbd) is enabled.
secbd enable disable	Enables or disables the TACACS+ back door using secure password for telnet/SSH/ HTTP/HTTPS. This command does not apply when backdoor (telnet) is enabled.
cmap enable disable	Enables or disables TACACS+ privilege-level mapping. The default value is disabled.

**Table 84** TACACS+ Server Configuration Menu options

Command	Description
usermap <0-15> user   oper   admin   none	Maps a TACACS+ privilege level to a GbE2 user level. Enter a TACACS+ privilege level (0-15), followed by the corresponding GbE2 user level.
on	Enables the TACACS+ server.
off	Disables the TACACS+ server.
cur	Displays current TACACS+ configuration parameters.



**IMPORTANT:** If TACACS+ is enabled, you are required to login using TACACS+ when doing Telnet. If a TACACS+ server is not available and the Telnet backdoor is enabled, type in `notacacs` as a backdoor to bypass TACACS+ checking, and use the administrator password to log into the GbE2 Interconnect Switch.

## NTP server configuration

**Command:** /cfg/sys/ntp

```
[NTP Server Menu]
  prsrv   - Set primary NTP server address
  secsrv  - Set secondary NTP server address
  intrval - Set NTP server resync interval
  tzone   - Set NTP timezone offset from GMT
  dlight  - Enable/Disable daylight savings time
  on      - Turn NTP service ON
  off     - Turn NTP service OFF
  cur     - Display current NTP configuration
```

This menu enables you to synchronize the GbE2 Interconnect Switch clock to a Network Time Protocol (NTP) server. By default, this option is disabled.

The following table describes the NTP Server Configuration Menu options.

**Table 85** NTP Server Configuration Menu options

Command	Description
prsrv <IP address>	Prompts for the IP addresses of the primary NTP server to which you want to synchronize the GbE2 Interconnect Switch clock. For example, 100.10.1.1
secsrv <IP address>	Prompts for the IP addresses of the secondary NTP server to which you want to synchronize the GbE2 Interconnect Switch clock. For example, 100.10.1.2
intrval <1-44640>	Specifies the interval, that is, how often, in minutes (1-44640), to resynchronize the switch clock with the NTP server. The default is 1440 seconds.
tzone <hh:mm>	Prompts for the NTP time zone offset from Greenwich Mean Time (GMT), in hours and minutes. The offset format is HH:MM
dlight disable enable	Disables or enables daylight saving time in the system clock. When enabled, the GbE2 Interconnect Switch will add an extra hour to the system clock so that it is consistent with the local clock. By default, this option is disabled.
on	Enables the NTP synchronization service.
off	Disables the NTP synchronization service. This is the default.
cur	Displays the current NTP service settings.

## System SNMP configuration

**Command:** /cfg/sys/ssnmp

```
[SNMP Menu]
snmpv3      - SNMPv3 Menu
name        - Set SNMP "sysName"
locn        - Set SNMP "sysLocation"
cont        - Set SNMP "sysContact"
rcomm       - Set SNMP read community string
wcomm       - Set SNMP write community string
timeout     - Set timeout for the SNMP state machine
auth        - Enable/disable SNMP "sysAuthenTrap"
linkt       - Enable/disable SNMP link up/down trap
ufd         - Enable/disable SNMP Uplink Failure Detection trap
cur         - Display current SNMP configuration
```

GbE2 software supports SNMP-based network management. In SNMP model of network management, a management station (client/manager) accesses a set of variables known as MIBs (Management Information Base) provided by the managed device (agent). If you are running an SNMP network management station on your network, you can manage the switch using the following standard SNMP MIBs:

- MIB II (RFC 1213)
- Ethernet MIB (RFC 1643)
- Bridge MIB (RFC 1493)

An SNMP agent is a software process on the managed device that listens on UDP port 161 for SNMP messages. Each SNMP message sent to the agent contains a list of management objects to retrieve or to modify.

- SNMP parameters that can be modified include:
- System name
- System location
- System contact
- Use of the SNMP system authentication trap function
- Read community string
- Write community string

The following table describes the System SNMP Configuration Menu options.

**Table 86** System SNMP Configuration Menu options

Command	Description
snmpv3	Displays SNMPv3 menu.
name <1-64 characters>	Configures the name for the system. The name can have a maximum of 64 characters.
locn <1-64 characters>	Configures the name of the system location. The location can have a maximum of 64 characters.
cont <1-64 characters>	Configures the name of the system contact. The contact can have a maximum of 64 characters.
rcomm <1-32 characters>	Configures the SNMP read community string. The read community string controls SNMP "get" access to the switch. It can have a maximum of 32 characters. The default read community string is <i>public</i> .
wcomm <1-32 characters>	Configures the SNMP write community string. The write community string controls SNMP "set" and "get" access to the switch. It can have a maximum of 32 characters. The default write community string is <i>private</i> .
timeout <1-30>	Sets the timeout value for the SNMP state machine. The range is 1-30 minutes. The default value is 5 minutes.
auth disable enable	Enables or disables the use of the system authentication trap facility. The default setting is disabled.
linkt <port> [disable enable]	Enables or disables the sending of SNMP link up and link down traps. The default setting is enabled.
ufd	Enables or disables the sending of Uplink Failure Detection traps. The default setting is disabled.



**Table 86** System SNMP Configuration Menu options

Command	Description
cur	Displays the current SNMP configuration.

## SNMPv3 configuration

**Command:** /cfg/sys/ssnmp/snmpv3

```
[SNMPv3 Menu]
  usm      - usmUser Table Menu
  view     - vacmViewTreeFamily Table Menu
  access   - vacmAccess Table Menu
  group    - vacmSecurityToGroup Table Menu
  comm     - community Table Menu
  taddr    - targetAddr Table Menu
  tparam   - targetParams Table Menu
  notify   - notify Table Menu
  v1v2     - Enable/disable V1/V2 access
  cur      - Display current SNMPv3 configuration
```

SNMP version 3 (SNMPv3) is an extensible SNMP Framework that supplements the SNMPv2 Framework by supporting the following:

- a new SNMP message format
- security for messages
- access control
- remote configuration of SNMP parameters

For more details on the SNMPv3 architecture please see RFC2271 to RFC2275.

The following table describes the SNMPv3 Configuration Menu options.

**Table 87** SNMPv3 Configuration Menu options

Command	Description
usm <1-16>	Configures a user security model (USM) entry for an authorized user. You can also configure this entry through SNMP. The range is 1-16.
view <1-128>	Configures different MIB views. The range is 1-128.
access <1-32>	Configures access rights. The View-based Access Control Model defines a set of services that an application can use for checking access rights of the user. You need access control when you have to process retrieval or modification request from an SNMP entity. The range is 1-32.
group <1-16>	Configures an SNMP group. A group maps the user name to the access group names and their access rights needed to access SNMP management objects. A group defines the access rights assigned to all names that belong to a particular group. The range is 1-16.
comm <1-16>	Configures a community table entry. The community table contains objects for mapping community strings and version-independent SNMP message parameters. The range is 1-16.
taddr <1-16>	Configures the destination address and user security levels for outgoing notifications. This is also called the transport endpoint. The range is 1-16.
tparam <1-16>	Configures SNMP parameters, consisting of message processing model, security model, security level, and security name information. There may be multiple transport endpoints associated with a particular set of SNMP parameters, or a particular transport endpoint may be associated with several sets of SNMP parameters.
notify <1-16>	Configures a notification index. A notification application typically monitors a system for particular events or conditions, and generates Notification-Class messages based on these events or conditions. The range is 1-16.
v1v2 disable enable	This command allows you to enable or disable the access to SNMP version 1 and version 2. This command is enabled by default.
cur	Displays the current SNMPv3 configuration.

## User Security Model configuration

**Command:** /cfg/sys/ssnmp/snmpv3/usm

```
[SNMPv3 usmUser 1 Menu]
name      - Set USM user name
auth      - Set authentication protocol
authpw    - Set authentication password
priv      - Set privacy protocol
privpw    - Set privacy password
del        - Delete usmUser entry
cur        - Display current usmUser configuration
```

You can make use of a defined set of user identities using this Security Model. An SNMP engine must have the knowledge of applicable attributes of a user.

This menu helps you create a user security model entry for an authorized user. You need to provide a security name to create the USM entry.

The following table describes the User Security Model Configuration Menu options.

**Table 88** User Security Model Configuration Menu options

Command	Description
name <1-32 characters>	Configures a string up to 32 characters long that represents the name of the user. This is the login name that you need in order to access the switch.
auth md5 sha none	Configures the authentication protocol between HMAC-MD5-96 or HMAC-SHA-96. The default algorithm is none.
authpw	Configures your password for authentication. If you selected an authentication algorithm using the above command, you need to provide a password; otherwise you will get an error message during validation.
priv des none	Configures the type of privacy protocol on the switch. The privacy protocol protects messages from disclosure. The options are des (CBC-DES Symmetric Encryption Protocol) or none. If you specify des as the privacy protocol, then be sure that you have selected one of the authentication protocols (MD5 or HMAC-SHA-96). If you select none as the authentication protocol, you will get an error message.
privpw	This command allows you to create or change the privacy password.
del	Deletes the USM user entries.
cur	Displays the USM user entries.

## SNMPv3 View configuration

**Command:** /cfg/sys/ssnmp/snmpv3/view

```
[SNMPv3 vacmViewTreeFamily 1 Menu]
name      - Set view name
tree      - Set MIB subtree(OID) which defines a family of view subtrees
mask      - Set view mask
type      - Set view type
del        - Delete vacmViewTreeFamily entry
cur        - Display current vacmViewTreeFamily configuration
```

The following table describes the SNMPv3 View Configuration Menu options.

**Table 89** SNMPv3 View Configuration Menu options

Command	Description
name <1-32 characters>	Defines the name for a family of view subtrees up to a maximum of 32 characters.
tree <1-32 characters>	Defines the Object Identifier (OID), a string of maximum 32 characters, which when combined with the corresponding mask defines a family of view subtrees. An example of an OID is 1.3.6.1.2.1.1.1.0
mask <1-32 characters>	Defines the bit mask, which in combination with the corresponding tree defines a family of view subtrees. The mask can have a maximum of 32 characters.
type included excluded	Selects whether the corresponding instances of vacmViewTreeFamilySubtree and vacmViewTreeFamilyMask define a family of view subtrees, which is included in or excluded from the MIB view.
del	Deletes the vacmViewTreeFamily group entry.
cur	Displays the current vacmViewTreeFamily configuration.

## View-based Access Control Model configuration

**Command:** /cfg/sys/ssnmp/snmpv3/access

```
[SNMPv3 vacmAccess 1 Menu]
name      - Set group name
prefix    - Set context prefix
model     - Set security model
level     - Set minimum level of security
match     - Set prefix only or exact match
rview     - Set read view index
wview     - Set write view index
nview     - Set notify view index
del       - Delete vacmAccess entry
cur       - Display current vacmAccess configuration
```

The view-based Access Control Model defines a set of services that an application can use for checking access rights of the user. Access control is needed when the user has to process SNMP retrieval or modification request from an SNMP entity.

The following table describes the User Access Control Configuration Menu options.

**Table 90** View-based Access Control Configuration Menu options

Command	Description
name <1-32 characters>	Defines the name of the group, up to a maximum of 32 characters.
model usm snmpv1 snmpv2	Selects the security model to be used.
level noAuthNoPriv authNoPriv authPriv	Defines the minimum level of security required to gain access rights. The level noAuthNoPriv means that the SNMP message will be sent without authentication and without using a privacy protocol. The level authNoPriv means that the SNMP message will be sent with authentication but without using a privacy protocol. The authPriv means that the SNMP message will be sent both with authentication and using a privacy protocol.
rview <1-32 characters>	Defines a 32 character long read view name that allows you read access to a particular MIB view. If the value is empty or if there is no active MIB view having this value then no access is granted.
wview <1-32 characters>	Defines a 32 character long write view name that allows you write access to the MIB view. If the value is empty or if there is no active MIB view having this value then no access is granted.
nview <1-32 characters>	Defines a 32 character long notify view name that allows you notify access to the MIB view.

**Table 90** View-based Access Control Configuration Menu options

Command	Description
name <1-32 characters>	Defines the name of the group, up to a maximum of 32 characters.
model usm snmpv1 snmpv2	Selects the security model to be used.
del	Deletes the View-based Access Control entry.
cur	Displays the View-based Access Control configuration.

## SNMPv3 Group configuration

**Command:** /cfg/sys/ssnmp/snmpv3/group

```
[SNMPv3 vacmSecurityToGroup 1 Menu]
  model      - Set security model
  uname      - Set USM user name
  gname      - Set group name
  del        - Delete vacmSecurityToGroup entry
  cur        - Display current vacmSecurityToGroup configuration
```

The following table describes the SNMPv3 Group Configuration Menu options.

**Table 91** SNMPv3 Group Configuration Menu options

Command	Description
model usm snmpv1 snmpv2	Defines the security model.
uname <1-32 characters>	Sets the user name as defined in /cfg/sys/ssnmp/snmpv3/usm/name. The user name can have a maximum of 32 characters.
gname <1-32 characters>	Configures the name for the access group as defined in /cfg/sys/ssnmp/snmpv3/access/name. The group name can have a maximum of 32 characters.
del	Deletes the vacmSecurityToGroup entry.
cur	Displays the current vacmSecurityToGroup configuration.

## SNMPv3 Community Table configuration

**Command:** /cfg/sys/ssnmp/snmpv3/comm

```
[SNMPv3 snmpCommunityTable 1 Menu]
  index      - Set community index
  name       - Set community string
  uname      - Set USM user name
  tag        - Set community tag
  del        - Delete communityTable entry
  cur        - Display current communityTable configuration
```

This command is used for configuring the community table entry. The configured entry is stored in the community table list in the SNMP engine. This table is used to configure community strings in the Local Configuration Datastore (LCD) of SNMP engine.

The following table describes the SNMPv3 Community Table Configuration Menu options.

**Table 92** SNMPv3 Community Table Configuration Menu options

Command	Description
index <1-32 characters>	Configures the unique index value of a row in this table. The index can have a maximum of 32 characters.
name <1-32 characters>	Defines the name as defined in /cfg/sys/ssnmp/snmpv3/usm/name. The name can have a maximum of 32 characters.
uname <1-32 characters>	Defines a readable 32 character string that represents the corresponding value of an SNMP community name in a security model.
tag <1-255 characters>	Configures a tag of up to 255 characters maximum. This tag specifies a set of transport endpoints to which a command responder application sends an SNMP trap.
del	Deletes the community table entry.
cur	Displays the community table configuration.

## SNMPv3 Target Address Table configuration

**Command:** /cfg/sys/ssnmp/snmpv3/taddr

```
[SNMPv3 snmpTargetAddrTable 1 Menu]
  name      - Set target address name
  addr      - Set target transport address IP
  port      - Set target transport address port
  taglist   - Set tag list
  pname     - Set targetParams name
  del       - Delete targetAddrTable entry
  cur       - Display current targetAddrTable configuration
```

This menu allows you to set passwords and display current user statistics. Passwords can be a maximum of 15 characters. To disable a user, set the password to null by simply pressing the **Enter** key when prompted for the password.

The following table describes the SNMPv3 Target Address Table Configuration Menu options.

**Table 93** SNMPv3 Target Address Table Configuration Menu options

Command	Description
name <1-32 characters>	Configures the locally arbitrary, but unique identifier, target address name associated with this entry.
addr <transport address IP>	Configures a transport address IP that can be used in the generation of SNMP traps.
port <transport address port>	Configures a transport address port that can be used in the generation of SNMP traps.
taglist <1-255 characters>	Configures a list of tags (up to 255 characters maximum) that are used to select target addresses for a particular operation.
pname <1-32 characters>	Defines the name as defined in /cfg/sys/ssnmp/snmpv3/tparam/name.
del	Deletes the Target Address Table entry.
cur	Displays the current Target Address Table configuration.

## SNMPv3 Target Parameters Table configuration

**Command:** /cfg/sys/ssnmp/snmpv3/tparam

```
[SNMPv3 snmpTargetParamsTable 1 Menu]
name      - Set targetParams name
mpmodel   - Set message processing model
model     - Set security model
uname     - Set USM user name
level     - Set minimum level of security
del       - Delete targetParamsTable entry
cur       - Display current targetParamsTable configuration
```

You can configure the target parameters entry and store it in the target parameters table in the SNMP engine. This table contains parameters that are used to generate a message. The parameters include the message processing model (for example: SNMPv3, SNMPv2c, SNMPv1), the security model (for example: USM), the security name, and the security level (noAuthNoPriv, authNoPriv, or authPriv).

The following table describes the SNMPv3 Target Parameters Table Configuration Menu options.

**Table 94** SNMPv3 Target Parameters Table Configuration Menu options

Command	Description
name <1-32 characters>	Configures the locally arbitrary, but unique identifier that is associated with this entry.
mpmodel snmpv1   snmpv2c   snmp v3	Configures the message processing model that is used to generate SNMP messages.
model usm   snmpv1   snmpv2	Selects the security model to be used when generating the SNMP messages.
uname <1-32 characters>	Defines the name that identifies the user in the USM table, on whose behalf the SNMP messages are generated using this entry.
level noAuthNoPriv   authNo Priv   authPriv	Selects the level of security to be used when generating the SNMP messages using this entry. The level noAuthNoPriv means that the SNMP message will be sent without authentication and without using a privacy protocol. The level authNoPriv means that the SNMP message will be sent with authentication but without using a privacy protocol. The authPriv means that the SNMP message will be sent both with authentication and using a privacy protocol.
del	Deletes the targetParamsTable entry.
cur	Displays the current targetParamsTable configuration.

## SNMPv3 Notify Table configuration

**Command:** /cfg/sys/ssnmp/snmpv3/notify

```
[SNMPv3 snmpNotifyTable 1 Menu]
name      - Set notify name
tag       - Set notify tag
del       - Delete notifyTable entry
cur       - Display current notifyTable configuration
```

SNMPv3 uses Notification Originator to send out traps. A notification typically monitors a system for particular events or conditions, and generates Notification-Class messages based on these events or conditions.

The following table describes the SNMPv3 Notify Table Configuration menu options.

**Table 95** SNMPv3 Notify Table Configuration Menu options

Command	Description
name <1-32 characters>	Defines a locally arbitrary but unique identifier associated with this SNMP notify entry.
tag <1-255 characters>	Defines a tag of 255 characters maximum that contains a tag value which is used to select entries in the Target Address Table. Any entry in the <code>snmpTargetAddrTable</code> , that matches the value of this tag, is selected.
del	Deletes the notify table entry.
cur	Displays the current notify table configuration.

## System Access configuration

**Command:** /cfg/sys/access

```
[System Access Menu]
mgmt      - Management Network Definition Menu
user      - User Access Control Menu (passwords)
http      - Enable/disable HTTP (Web) access
https     - HTTPS Web Access Menu
wport     - Set HTTP (Web) server port number
snmp      - Set SNMP access control
tnet      - Enable/disable Telnet access
tnport    - Set Telnet server port number
tport     - Set the TFTP Port for the system
cur       - Display current system access configuration
```

The following table describes the System Access Configuration menu options.

**Table 96** System Access Configuration Menu options

Command	Description
mgmt	Displays the Management Configuration Menu.
user	Displays the User Access Control Menu.
http disable enable	Enables or disables HTTP (Web) access to the Browser-Based Interface. It is enabled by default.
https	Displays the HTTPS Menu.
wport <TCP port number>	Sets the switch port used for serving switch Web content. The default is HTTP port 80. If Global Server Load Balancing is to be used, set this to a different port (such as 8080).
snmp disable read-only read-write	Disables or provides read-only/write-read SNMP access.
tnet	Enables or disables telnet access. This command is enabled by default. You will see this command only if you are connected to the switch through the management module.
tnport <TCP port number>	Sets an optional telnet server port number for cases where the server listens for telnet sessions on a non-standard port.
tport <TFTP port number>	Sets an optional telnet server port number for cases where the server listens for telnet sessions on a non-standard port.
cur	Displays the current system access parameters.

## Management Networks configuration

**Command:** /cfg/sys/access/mgmt

```
[Management Networks Menu]
add      - Add mgmt network definition
rem      - Remove mgmt network definition
cur      - Display current mgmt network definitions
```

The following table describes the Management Networks Configuration menu options.

**Table 97** Management Networks Configuration menu options

Command	Description
add <IP address> <IP mask>	Adds a defined network through which switch access is allowed through Telnet, SNMP, RIP, or the browser-based interface. A range of IP addresses is produced when used with a network mask address. Specify an IP address and mask address in dotted-decimal notation.
rem <IP address> <IP mask>	Removes a defined network, which consists of a management network address and a management network mask address.
cur	Displays the current management networks parameters.

## User Access Control configuration

**Command:** /cfg/sys/access/user

```
[User Access Control Menu]
uid      - User ID Menu
usrpw    - Set user password (user)
opw      - Set operator password (oper)
admpw    - Set administrator password (admin)
cur      - Display current user status
```

The following table describes the User Access Control menu options.

**Table 98** User Access Control Configuration menu options

Command	Description
uid <1-10>	Displays the User ID Menu for the selected user.
eject <1-10>	Ejects the selected user from the switch.
usrpw <1-128 characters>	Sets the user (user) password (maximum 128 characters). The user has no direct responsibility for switch management. He or she can view switch status information and statistics, but cannot make any configuration changes.
opw <1-128 characters>	Sets the operator (oper) password (maximum 128 characters). The operator manages all functions of the switch. He or she can view all switch information and statistics and can reset ports or the entire switch.
admpw <1-128 characters>	Sets the administrator (admin) password (maximum 128 characters). The super user administrator has complete access to all menus, information, and configuration commands on the switch, including the ability to change both the user and administrator passwords.
cur	Displays the current user status.



## User ID configuration

**Command:** /cfg/sys/access/user/uid <1-10>

```
[User ID 1 Menu]
cos          - Set class of service
name         - Set user name
pswd         - Set user password
ena          - Enable user ID
dis          - Disable user ID
del          - Delete user ID
cur          - Display current user configuration
```

The following table describes the User ID Configuration menu options.

**Table 99** User ID Configuration menu options

Command	Description
cos <user oper admin>	Sets the Class-of-Service to define the user's authority level.
name <1-8 characters>	Defines the user name.
pswd <1-128 characters>	Sets the user password of up to 128 characters maximum.
ena	Enables the user ID.
dis	Disables the user ID.
del	Deletes the user ID.
cur	Displays the current user ID parameters.

## HTTPS Access configuration

**Command:** /cfg/sys/access/https

```
[https Menu]
access       - Enable/Disable HTTPS Web access
port         - HTTPS WebServer port number
generate     - Generate self-signed HTTPS server certificate
certSave     - save HTTPS certificate
cur          - Display current SSL Web Access configuration
```

The following table describes the HTTPS Access Configuration menu options.

**Table 100** HTTPS Access Configuration menu options

Command	Description
access	Enables or disables BBI access (Web access) using HTTPS.
port <TCP port number>	Defines the HTTPS Web server port number.
generate	<p>Allows you to generate a certificate to connect to the SSL to be used during the key exchange. A default certificate is created when HTTPS is enabled for the first time. The user can create a new certificate defining the information that they want to be used in the various fields. For example:</p> <ul style="list-style-type: none"><li>• Country Name (2 letter code) [ ]: CA</li><li>• State or Province Name (full name) [ ]: Ontario</li><li>• Locality Name (for example, city) [ ]: Ottawa</li><li>• Organization Name (for example, company) [ ]: Hewlett Packard</li><li>• Organizational Unit Name (for example, section) [ ]: ProLiant</li><li>• Common Name (for example, user's name) [ ]: Mr Smith</li><li>• Email (for example, email address) [ ]: info@hp.com</li></ul> <p>You must confirm if you want to generate the certificate. It takes approximately 30 seconds to generate the certificate. Then the switch restarts SSL agent.</p>

**Table 100** HTTPS Access Configuration menu options

Command	Description
certSave	Allows the client, or the Web browser, to accept the certificate and save the certificate to Flash to be used when the switch is rebooted.
cur	Displays the current SSL Web Access configuration.

## Port configuration

**Command:** /cfg/port <port number>

```
[Port 1 Menu]
gig          - Gig Phy Menu
fiber        - Fiber Link Menu
aclqos       - Acl/Qos Configuration Menu
8021ppri     - Set default 802.1p priority
pvid         - Set default port VLAN id
name         - Set port name
rmon         - Enable/Disable RMON for port
tag          - Enable/disable VLAN tagging for port
tagpvid      - Enable/disable tagging on pvid
brate        - Set BroadCast Threshold
mrate        - Set MultiCast Threshold
drate        - Set Dest. Lookup Fail Threshold
ena          - Enable port
dis          - Disable port
cur          - Display current port configuration
```

This menu enables you to configure settings for individual GbE2 Interconnect Switch ports. This command is enabled by default.

The following table describes the Port Configuration Menu options.

**Table 101** Port Configuration Menu options

Command	Description
gig	Displays the Gigabit Ethernet Physical Link Menu.
fiber	Displays the Fiber Link Menu.
aclqos	Displays the ACL Quality of Service Menu.
8021ppri	Configures the port's 802.1p priority level.
pvid <1-4095>	Sets the default VLAN number which will be used to forward frames which are not VLAN tagged. The default number is 1.
<b>NOTE:</b> VLAN 4095 is reserved for switch management.	
name <1-64 characters> none	Sets a name for the port (maximum 64 characters). The assigned port name displays next to the port number on some information and statistics screens.
rmon disable enable	Enables or disables Remote Monitoring for the port. RMON must be enabled for any RMON configurations to function.
tag disable enable	Disables or enables VLAN tagging for this port. It is disabled by default.
tagpvid disable enable	Disables or enables VLAN tag persistence. When disabled, the VLAN tag is removed from packets whose VLAN tag matches the port PVID. The default value is enabled.
brate <0-262143> dis	Limits the number of broadcast packets per second to the specified value. If disabled (dis), the port forwards all broadcast packets.
mrate <0-262143> dis	Limits the number of multicast packets per second to the specified value. If disabled (dis), the port forwards all multicast packets.
drate <0-262143> dis	Limits the number of unknown unicast packets per second to the specified value. If disabled (dis), the port forwards all unknown unicast packets.
ena	Enables the port.

**Table 101** Port Configuration Menu options

Command	Description
dis	Disables the port. To temporarily disable a port without changing its configuration attributes, see the “Temporarily disabling a port” section later in this chapter.
cur	Displays current port parameters.

## Temporarily disabling a port

To temporarily disable a port without changing its stored configuration attributes, enter the following command at any prompt:

```
Main# /oper/port <port number>/dis
```

Because this configuration sets a temporary state for the port, you do not need to use **apply** or **save**. The port state will revert to its original configuration when the GbE2 Interconnect Switch is reset. See the “Menu information” section in the “Operations Menu” chapter for other operations-level commands.

## Port link configuration

**Command:** /cfg/port <port number>/gig

```
[Gigabit Link Menu]
  speed  - Set link speed
  mode    - Set full or half duplex mode
  fctl    - Set flow control
  auto    - Set auto negotiation
  cur     - Display current gig link configuration
```

Use these menu options to set port parameters for the port link.

Link menu options are described in the following table and display on the Gigabit port configuration menus for the GbE2 Interconnect Switch. Using these configuration menus, you can set port parameters such as speed, duplex, flow control, and negotiation mode for the port link.

The following table describes the Gigabit Link Configuration Menu options.

**Table 102** Gigabit Link Configuration Menu options

Command	Description
speed 10 100 1000 any	Sets the link speed. Not all options are valid on all ports. The choices include: <ul style="list-style-type: none"> <li>• 10 Mb/s</li> <li>• 100 Mb/s</li> <li>• 1000 Mb/s</li> <li>• “Any,” for automatic detection (default)</li> </ul>
mode full half any	Sets the operating mode. The choices include: <ul style="list-style-type: none"> <li>• Full-duplex</li> <li>• Half-duplex</li> <li>• “Any,” for automatic detection (default)</li> </ul>
fctl rx tx both none	Sets the flow control. The choices include: <ul style="list-style-type: none"> <li>• Receive (rx) flow control</li> <li>• Transmit (tx) flow control</li> <li>• Both receive and transmit flow control (default)</li> <li>• No flow control</li> </ul>
auto on off	Enables or disables auto-negotiation for the port.
cur	Displays current port parameters.

## Port fiber link control

**Command:** /cfg/port <port number>/fiber

```
[Fiber Link Menu]
txctrl  - Enable/Disable TX control
txpulse - Enable/Disable TX pulse
txdn    - Set TX dn time (secs)
txup    - Set TX up time (secs)
cur     - Display current fiber link configuration
```

Use this menu to control fiber-port link parameters, if necessary. By default, these menu items are disabled.

The fiber TX control options address any possible interoperability issues that may arise from linking different transceivers. Some transceivers may require a signal pulse or no signal in order to properly determine a loss of signal state.

The following table describes the Fiber Link Control Menu options.

**Table 103** Fiber Link Control Menu options

Command	Description
txctrl enable disable	Enables or disables fiber-port transmit control when the port detects RX signal loss.
txpulse enable disable	Enables or disables fiber-port transmit pulse control. When disabled, the fiber-port transmitter is disabled when RX signal loss is detected. When enabled, the fiber-port transmitter pulses the TX signal at a configurable rate defined by the txdn and txup commands.
txdn <1-10>	Configures the interval that the transmit pulse is down, in seconds. The default value is 2.
txup <1-10>	Configures the interval that the transmit pulse is up, in seconds. The default value is 1.
cur	Displays current fiber link control parameters.

## ACL Port configuration

**Command:** /cfg/port <port number>/aclqos

```
[Port 1 ACL Menu]
meter   - ACL Metering Configuration Menu
re-mark - ACL Re-mark Configuration Menu
add     - Add ACL group to this port
rem     - Remove ACL group from this port
cur     - Display current ACLs for this port
```

The following table describes the Port Access Control List Configuration Menu options.

**Table 104** ACL Port Configuration Menu options

Command	Description
meter <1-63>	Displays the Metering Menu.
re-mark <1-63>	Displays the Re-Mark Menu.
add acl blk grp <1-4096>	Adds the specified ACL, ACL block, or ACL group to the port. You can add multiple ACLs, ACL Blocks, or ACL Groups to a port, but the total number of precedence levels allowed is seven.
rem acl blk grp <1-4096>	Removes the specified ACL, ACL Block, or ACL Group from the port.
cur	Displays current ACL QoS parameters.

## ACL Port Metering configuration

**Command:** /cfg/port <port number>/aclqos/meter

```
[Metering Menu]
  cir      - Set committed rate in KiloBits/s
  mbsize   - Set maximum burst size in KiloBits
  enable   - Enable/disable port metering
  dpass    - Set to Drop or Pass out of profile traffic
  assign    - Assign meter to ACL, ACL block or ACL group
  unassign  - Unassign meter from ACL, ACL block or ACL group
  reset     - Reset meter parameters
  cur      - Display current settings
```

The following table describes the ACL Port Metering Configuration Menu options.

**Table 105** ACL Port Metering Configuration Menu options

Command	Description
cir <64-1000000>	Configures the committed rate, in Kilobits per second. The committed rate must be a multiple of 64.
mbsize <32-4096>	Configures the maximum burst size, in Kilobits. Enter one of the following values for mbsize: 32, 64, 128, 256, 512, 1024, 2048, 4096
enable e d	Enables or disables ACL Metering on the port.
dpass drop pass	Configures the ACL Meter to either drop or pass out-of-profile traffic.
assign acl blk grp <1-4096>	Adds an ACL, ACL Block, or ACL Group to the ACL Meter on this port.
unassign acl blk grp <1-4096>	Removes an ACL, ACL Block, or ACL Group from the ACL Meter on this port.
reset	Reset ACL Metering parameters to their default values.
cur	Displays current ACL Metering parameters.

## ACL Port Re-Mark configuration

**Command:** /cfg/port <port number>/aclqos/re-mark <1-63>

```
[Re-mark Menu Menu]
  inprof   - In Profile Menu
  outprof  - Out Profile Menu
  assign    - Assign re-mark action to ACL item
  unassign  - Unassign re-mark action from ACL item
  reset     - Reset re-mark settings
  cur      - Display current settings
```

You can choose to re-mark IP header data for the selected ACL Group on the port. You can configure different re-mark values, based on whether packets fall within the ACL Metering profile, or out of the ACL Metering profile.

The following table describes the ACL Port Re-Mark Configuration Menu options.

**Table 106** ACL Port Re-Mark Configuration Menu options

Command	Description
inprof	Displays the Re-Mark In-Profile Menu.
outprof	Displays the Re-Mark Out-of-Profile Menu.
assign acl blk grp <1-4096>	Assign an ACL, ACL Block, or ACL Group for DSCP remarking on this port.
unassign acl blk grp <1-4096>	Remove an ACL, ACL Block, or ACL Group from DSCP remarking on this port.
reset	Reset ACL Re-Mark parameters to their default values.
cur	Displays current Re-Mark parameters.

## ACL Port Re-Mark In-Profile configuration

**Command:** /cfg/port <port number>/aclqos/re-mark <1-63>/inprof

```
[Re-marking - In Profile Menu]
  uplp      - Set Update User Priority Menu
  updscp    - Set the update DSCP
  reset     - Reset in profile settings
  cur       - Display current settings
```

The following table describes the ACL Port Re-Mark In-Profile Configuration Menu options.

**Table 107** ACL Port Re-Mark In-Profile Configuration Menu options

Command	Description
uplp	Displays the Re-Mark In-Profile Update User Priority Menu.
updscp <0-63>	Sets the DiffServ Code Point (DSCP) of In-Profile packets to the selected value.
reset	Resets the update DSCP parameters to their default values.
cur	Displays current Re-Mark In-Profile parameters.

## Re-Mark Update User Priority configuration

**Command:** /cfg/port <port number>/aclqos/re-mark <1-63>/inprof/uplp

```
[Update User Priority Menu]
  value     - Set the update user priority
  utosp     - Enable/Disable use of TOS precedence
  reset     - Reset in profile uplp settings
  cur       - Display current settings
```

The following table describes the Update User Priority Configuration Menu options.

**Table 108** ACL Port Update User Priority Configuration Menu options

Command	Description
value <0-7>	Defines 802.1p value. The value is the priority bits information in the packet structure.
utosp enable disable	Enable or disable mapping of TOS (Type of Service) priority to 802.1p priority for In-Profile packets. When enabled, the TOS value is used to set the 802.1p value.
reset	Resets UPLP settings to their default values.
cur	Displays current Re-Mark In-Profile User Priority parameters.

## ACL Port Re-Mark Out-of-Profile configuration

**Command:** /cfg/port <port number>/aclqos/re-mark <1-63>/outprof

```
[Re-marking - Out Of Profile Menu]
  updscp    - Set the update DSCP
  reset     - Reset out of profile settings
  cur       - Display current settings
```

The following table describes the Re-Mark Out-of-Profile Configuration Menu options.

**Table 109** ACL Port Re-Mark Out-of-Profile Configuration Menu options

Command	Description
updscp <0-63>	Sets the DiffServ Code Point (DSCP) of Out-of-Profile packets to the selected value. The switch sets the DSCP value on Out-of-Profile packets.
reset	Resets the update DSCP parameters for Out-of-Profile packets to their default values.
cur	Displays current Re-Mark Out-of-Profile parameters.

## Layer 2 configuration

**Command:** /cfg/l2

```
[Layer 2 Menu]
 8021x      - 802.1x Menu
 mrst       - Multiple Spanning Tree/Rapid Spanning Tree Menu
 stp        - Spanning Tree Menu
 fdb        - FDB Menu
 trunk      - Trunk Group Menu
 thash      - IP Trunk Hash Menu
 lacp       - Link Aggregation Control Protocol Menu
 hotlink    - Hot Links Menu
 vlan       - VLAN Menu
 upfast     - Enable/disable Uplink Fast
 update     - UplinkFast station update rate
 cur        - Display current layer 2 parameters
```

The following table describes the Layer 2 Configuration Menu options.

**Table 110** L2 Configuration Menu options

Command	Description
8021x	Displays the 802.1x Configuration Menu.
mrst	Displays the Rapid Spanning Tree/Multiple Spanning Tree Protocol Configuration Menu.
stp	Displays the Spanning Tree Configuration Menu.
fdb	Displays the Forwarding Database Configuration Menu.
trunk <1-12>	Displays the Trunk Group Configuration Menu.
thash	Displays the IP Trunk Hash Menu.
lacp	Displays the Link Aggregation Control Protocol Menu.
hotlink	Displays the Hot Links Menu.
vlan <1-4095>	Displays the VLAN Configuration Menu.
upfast enable disable	Enables or disables Fast Uplink Convergence, which provides rapid Spanning Tree convergence to an upstream switch during failover.
<b>NOTE:</b> When enabled, this feature increases bridge priorities to 65500 for all STGs and path cost by 3000 for all external STP ports.	
update <10-200>	Configures the station update rate, in packets per second. The default value is 40.
cur	Displays current Layer 2 parameters.

## 802.1x configuration

**Command:** /cfg/l2/8021x

```
[802.1x Configuration Menu]
 global    - Global 802.1x configuration menu
 port      - Port 802.1x configuration menu
 ena       - Enable 802.1x access control
 dis       - Disable 802.1x access control
 cur       - Show 802.1x configuration
```

This feature allows you to configure the GbE2 Interconnect Switch as an IEEE 802.1x Authenticator, to provide port-based network access control. The following table describes the 802.1x Configuration Menu options.

**Table 111** 802.1x Configuration Menu options

Command	Description
global	Displays the global 802.1x Configuration Menu.
port <port number>	Displays the 802.1x Port Menu.
ena	Globally enables 802.1x.
dis	Globally disables 802.1x.
cur	Displays current 802.1x parameters.

## 802.1x Global configuration

**Command:** /cfg/12/8021x/global

```
[802.1x Global Configuration Menu]
mode      - Set access control mode
qtperiod  - Set EAP-Request/Identity quiet time interval
txperiod  - Set EAP-Request/Identity retransmission timeout
suptmout  - Set EAP-Request retransmission timeout
svrtmout  - Set server authentication request timeout
maxreq    - Set max number of EAP-Request retransmissions
raperiod  - Set reauthentication time interval
reauth    - Set reauthentication status to on or off
default   - Restore default 802.1x configuration
cur       - Display current 802.1x configuration
```

The global 802.1x menu allows you to configure parameters that affect all ports in the switch. The following table describes the 802.1x Global Configuration Menu options.

**Table 112** 802.1x Global Configuration Menu options

Command	Description
mode force-unauth auto force-auth	Sets the type of access control for all ports: <ul style="list-style-type: none"> <li><b>force-unauth</b>—the port is unauthorized unconditionally.</li> <li><b>auto</b>—the port is unauthorized until it is successfully authorized by the RADIUS server.</li> <li><b>force-auth</b>—the port is authorized unconditionally, allowing all traffic. The default value is force-auth.</li> </ul>
qtperiod <0-65535>	Sets the time, in seconds, the authenticator waits before transmitting an EAP-Request/ Identity frame to the supplicant (client) after an authentication failure in the previous round of authentication. The default value is 60 seconds.
txperiod <1-65535>	Sets the time, in seconds, the authenticator waits for an EAP-Response/Identity frame from the supplicant (client) before retransmitting an EAP-Request/Identity frame. The default value is 30 seconds.
suptmout <1-65535>	Sets the time, in seconds, the authenticator waits for an EAP-Response packet from the supplicant (client) before retransmitting the EAP-Request packet to the authentication server. The default value is 30 seconds.
svrtmout <1-65535>	Sets the time, in seconds, the authenticator waits for a response from the Radius server before declaring an authentication timeout. The default value is 30 seconds. The time interval between transmissions of the RADIUS Access-Request packet containing the supplicant's (client's) EAP-Response packet is determined by the current setting of /cfg/sys/radius/timeout (default is 3 seconds).
maxreq <1-10>	Sets the maximum number of times the authenticator retransmits an EAP-Request packet to the supplicant (client). The default value is 2.
raperiod <1-604800>	Sets the time, in seconds, the authenticator waits before re-authenticating a supplicant (client) when periodic re-authentication is enabled. The default value is 3600 seconds.



**Table 112** 802.1x Global Configuration Menu options

Command	Description
reauth on off	Sets the re-authentication status to on or off. The default value is off.
default	Resets the global 802.1x parameters to their default values.
cur	Displays current global 802.1x parameters.

## 802.1x Port configuration

**Command:** /cfg/12/8021x/port <port number>

```
[802.1x Port Configuration Menu]
mode          - Set access control mode
qtpperiod    - Set EAP-Request/Identity quiet time interval
txperiod     - Set EAP-Request/Identity retransmission timeout
suptmout     - Set EAP-Request retransmission timeout
svrtmout     - Set server authentication request timeout
maxreq       - Set max number of EAP-Request retransmissions
rapperiod    - Set reauthentication time interval
reauth       - Set reauthentication status to on or off
default      - Restore default 802.1x configuration
global       - Apply current global 802.1x configuration to this port
cur          - Display current 802.1x configuration
```

The 802.1x port menu allows you to configure parameters that affect the selected port in the switch. These settings override the global 802.1x parameters.

The following table describes the 802.1x Port Configuration Menu options.

**Table 113** 802.1x Global Configuration Menu options

Command	Description
mode force- unauth auto force-auth	Sets the type of access control for the port: <ul style="list-style-type: none"> <li><b>force-unauth</b>—the port is unauthorized unconditionally.</li> <li><b>auto</b>—the port is unauthorized until it is successfully authorized by the RADIUS server.</li> <li><b>force-auth</b>—the port is authorized unconditionally, allowing all traffic.</li> </ul> The default value is force-auth.
qtpperiod <0-65535>	Sets the time, in seconds, the authenticator waits before transmitting an EAP-Request/ Identity frame to the supplicant (client) after an authentication failure in the previous round of authentication. The default value is 60 seconds.
txperiod <1-65535>	Sets the time, in seconds, the authenticator waits for an EAP-Response/Identity frame from the supplicant (client) before retransmitting an EAP-Request/Identity frame. The default value is 30 seconds.
suptmout <1-65535>	Sets the time, in seconds, the authenticator waits for an EAP-Response packet from the supplicant (client) before retransmitting the EAP-Request packet to the authentication server. The default value is 30 seconds.
svrtmout <1-65535>	Sets the time, in seconds, the authenticator waits for a response from the RADIUS server before declaring an authentication timeout. The default value is 30 seconds. The time interval between transmissions of the RADIUS Access-Request packet containing the supplicant's (client's) EAP-Response packet is determined by the current setting of /cfg/sys/radius/timeout (default is 3 seconds).
maxreq <1-10>	Sets the maximum number of times the authenticator retransmits an EAP-Request packet to the supplicant (client). The default value is 2.
rapperiod <1-604800>	Sets the time, in seconds, the authenticator waits before re-authenticating a supplicant (client) when periodic re-authentication is enabled. The default value is 3600 seconds.
reauth on off	Sets the re-authentication status to on or off. The default value is off.
default	Resets the global 802.1x parameters to their default values.

**Table 113** 802.1x Global Configuration Menu options

Command	Description
cur	Displays current global 802.1x parameters.

## Rapid Spanning Tree Protocol / Multiple Spanning Tree Protocol configuration

**Command:** /cfg/12/mrst

```
[Multiple Spanning Tree Menu]
  cist      - Common and Internal Spanning Tree menu
  name      - Set MST region name
  version   - Set Version of this MST region
  maxhop    - Set Maximum Hop Count for MST (4 - 60)
  mode      - Spanning Tree Mode
  on        - Globally turns RSTP/MSTP ON
  off       - Globally turns RSTP/MSTP OFF
  cur       - Display current MST parameters
```

HP ProLiant BL p-Class GbE2 Interconnect Switch supports the IEEE 802.1w Rapid Spanning Tree Protocol (RSTP) and IEEE 802.1s Multiple Spanning Tree Protocol (MSTP). MSTP allows you to map many VLANs to a small number of spanning tree groups, each with its own topology.

You can configure up to 32 spanning tree groups on the switch. MRST is turned off by default.



**NOTE:** When Multiple Spanning Tree is turned on, VLAN 1 is moved from Spanning Tree Group 1 to the Common Internal Spanning Tree (CIST). When Multiple Spanning Tree is turned off, VLAN 1 is moved back to Spanning Tree Group 1.

The following table describes the Multiple Spanning Tree Configuration Menu options.

**Table 114** Multiple Spanning Tree Configuration Menu options

Command	Description
cist	Displays the Common Internal Spanning Tree (CIST) Menu.
name <1-32 characters>	Configures a name for the MSTP region. All devices within a MSTP region must have the same region name.
rev <0-65535>	Configures the revision level for the MSTP region. The revision level is used as a numerical identifier for the region. All devices within a MSTP region must have the same revision level number. The range is 0-65535.
maxhop <4-60>	Configures the maximum number of bridge hops a packet may traverse before it is dropped. The range is from 4 to 60 hops. The default is 20.
mode rstp mstp	Selects either Rapid Spanning Tree mode (rstp) or Multiple Spanning Tree mode (mstp). The default mode is RSTP.
on	Globally turn RSTP/MSTP ON.
<b>NOTE:</b> When RSTP is turned on, the configuration parameters for STP group 1 apply to RSTP.	
off	Globally turn RSTP/MSTP OFF.
cur	Displays the current RSTP/MSTP configuration.



### NOTE:

- IEEE 802.1w standard-based RSTP implementation runs on one STG (i.e. same as one spanning tree instance) only. As a result, if 'rstp' mode is selected under the /cfg/mrst/mode command, then only a single RSTP instance (default for STG 1) is supported for all VLANs, including the Default VLAN 1.
- If multiple spanning tree instances are required, then select 'mstp' mode so that multiple VLANs are handled by multiple spanning tree instances, as specified by IEEE 802.1s standard-based MSTP implementation.
- IEEE 802.1s MSTP supports rapid convergence using IEEE 802.1w RSTP.
- PVST+ does not support rapid convergence in current versions.



#### NOTE:

The following configurations are unsupported:

- HP PVST+ (default Spanning Tree setting) is NOT interoperable with Cisco Rapid PVST+.
- HP MSTP/RSTP (with mode set to either 'mstp' or 'rstp') is NOT interoperable with Cisco Rapid PVST+.

The following configurations are supported:

- HP PVST+ (default Spanning Tree setting) is interoperable with Cisco PVST+.
- HP MSTP/RSTP (with mode set to 'mstp') is interoperable with Cisco MST/RSTP.

## Common Internal Spanning Tree configuration

**Command:** /cfg/l2/mrst/cist

```
[Common Internal Spanning Tree Menu]
brg      - CIST Bridge parameter menu
port     - CIST Port parameter menu
default  - Default Common Internal Spanning Tree and Member parameters
cur      - Display current CIST parameters
```

The Common Internal Spanning Tree (CIST) provides compatibility with different MSTP regions and with devices running different Spanning Tree instances. It is equivalent to Spanning Tree Group 0.

The following table describes the commands used to configure Common Internal Spanning Tree Configuration Menu options.

**Table 115** Common Internal Spanning Tree Configuration Menu options

Command	Description
brg	Displays the CIST Bridge Menu.
port <port number>	Displays the CIST Port Menu.
add <1-4095>	Adds VLANs to the CIST. Enter one VLAN per line, and press <b>Enter</b> to add the VLANs.
default	Resets all CIST parameters to their default values.
cur	Displays the current CIST configuration.

## CIST bridge configuration

**Command:** /cfg/l2/mrst/cist/brg

```
[CIST Bridge Menu]
prior    - Set CIST bridge Priority (0-65535)
mxage    - Set CIST bridge Max Age (6-40 secs)
fwd      - Set CIST bridge Forward Delay (4-30 secs)
cur      - Display current CIST bridge parameters
```

CIST bridge parameters are used only when the switch is in MSTP mode. CIST parameters do not affect operation of STP/PVST.

The following table describes the commands used to configure CIST Bridge Configuration Menu options parameters.

**Table 116** CIST Bridge Configuration Menu options

Command	Description
prior <0-65535>	Configures the CIST bridge priority. The bridge priority parameter controls which bridge on the network is the MSTP root bridge. To make this switch the root bridge, configure the bridge priority lower than all other switches and bridges on your network. The lower the value, the higher the bridge priority. The range is 0 to 65535, and the default is 32768. This command does not apply to RSTP. See the "Bridge Spanning Tree configuration" section for more information.
mxage <6-40>	Configures the CIST bridge maximum age. The maximum age parameter specifies the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the MSTP network. The range is 6 to 40 seconds, and the default is 20 seconds. This command does not apply to RSTP. See the "Bridge Spanning Tree configuration" section for more information.
fwd <4-30>	Configures the CIST bridge forward delay parameter. The forward delay parameter specifies the amount of time that a bridge port has to wait before it changes from the listening state to the learning state and from the learning state to the forwarding state. The range is 4 to 30 seconds, and the default is 15 seconds. This command does not apply to RSTP. See the "Bridge Spanning Tree configuration" section for more information.
cur	Displays the current CIST bridge configuration.

## CIST port configuration

**Command:** /cfg/l2/mrst/cist/port <port number>

```
[CIST Port 1 Menu]
prior - Set port Priority (0-240)
cost  - Set port Path Cost (1-200000000)
hello  - Set CIST port Hello Time (1-10 secs)
link   - Set MSTP link type (auto, p2p, or shared; default: auto)
edge   - Enables or disables this port as an edge port
on     - Turn port's Spanning Tree ON
off    - Turn port's Spanning Tree OFF
cur    - Display current port Spanning Tree parameters
```

CIST port parameters are used to modify MRST operation on an individual port basis. CIST parameters do not affect operation of STP/PVST.

For each port, CIST is turned on by default. Port parameters include:

- Port priority
- Port path cost
- Port Hello time
- Link type
- Edge
- On and off
- Current port configuration

The **port** option of MRST is turned on by default.

The following table describes the commands used to configure CIST Port Configuration Menu options.

**Table 117** CIST Port Configuration Menu options

Command	Description
prior <0-240>	Configures the CIST port priority. The port priority helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment. The range is 0 to 240, in steps of 16 (0, 16, 32...), and the default is 128.
cost <1-200000000>	Configures the CIST port path cost. The port path cost is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. The default is 20000 for Gigabit ports.
hello <1-10>	Configures the CIST port Hello time. The Hello time specifies how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge Hello value. The range is 1 to 10 seconds, and the default is 2 seconds.
link auto p2p shared	Defines the type of link connected to the port, as follows: <b>auto</b> : Configures the port to detect the link type, and automatically match its settings. <b>p2p</b> : Configures the port for Point-To-Point protocol. <b>shared</b> : Configures the port to connect to a shared medium (usually a hub). The default link type is <b>auto</b> .
edge disable enable	Enables or disables this port as an edge port. An edge port is not connected to a bridge, and can begin forwarding traffic as soon as the link is up. Configure server ports as edge ports (enabled). This command is disabled by default.
on	Enables CIST on the port.
off	Disables CIST on the port.
cur	Displays the current CIST port configuration.

## Spanning Tree configuration

**Command:** /cfg/l2/stp

```
[Spanning Tree Group 1 Menu]
brg      - Bridge parameter menu
port     - Port parameter menu
add      - Add VLAN(s) to Spanning Tree Group
remove   - Remove VLAN(s) from Spanning Tree Group
clear    - Remove all VLANs from Spanning Tree Group
on       - Globally turn Spanning Tree ON
off      - Globally turn Spanning Tree OFF
default  - Default Spanning Tree and Member parameters
cur      - Display current bridge parameters
```

HP ProLiant BL p-Class GbE2 Interconnect Switch supports the IEEE 802.1d Spanning Tree Protocol (STP) and Cisco proprietary PVST and PVST+ protocols. STP is used to prevent loops in the network topology. You can configure up to 32 spanning tree groups on the switch. This command is turned on by default.



**NOTE:** When RSTP is turned on, only STP group 1 can be configured.

The following table describes the Spanning Tree Configuration Menu options.

**Table 118** Spanning Tree Configuration Menu options

Command	Description
brg	Displays the Bridge Spanning Tree Menu.
port <port number>	Displays the Spanning Tree Port Menu.
add <1-4095>	Associates a VLAN with a spanning tree and requires an external VLAN ID as a parameter.

**Table 118** Spanning Tree Configuration Menu options

Command	Description
remove <1-4095>	Breaks the association between a VLAN and a spanning tree and requires an external VLAN ID as a parameter.
clear	Removes all VLANs from a spanning tree.
on	Globally enables Spanning Tree Protocol.
off	Globally disables Spanning Tree Protocol.
default	Restores a spanning tree instance to its default configuration.
cur	Displays current Spanning Tree Protocol parameters.

## Bridge Spanning Tree configuration

**Command:** /cfg/12/stp/brg

```
[Bridge Spanning Tree Menu]
prior - Set bridge Priority [0-65535]
hello - Set bridge Hello Time [1-10 secs]
mxage - Set bridge Max Age (6-40 secs)
fwd - Set bridge Forward Delay (4-30 secs)
cur - Display current bridge parameters
```

Spanning tree bridge parameters can be configured for each Spanning Tree Group. STP bridge parameters include:

- Bridge priority
- Bridge hello time
- Bridge maximum age
- Forwarding delay
- Current bridge configuration

The following table describes the Bridge Spanning Tree Configuration Menu options.

**Table 119** Bridge Spanning Tree Configuration Menu options

Command	Description
prior <0-65535>	Configures the bridge priority. The bridge priority parameter controls which bridge on the network is the STP root bridge. To make this switch the root bridge, configure the bridge priority lower than all other switches and bridges on your network. The lower the value, the higher the bridge priority. The range is 0 to 65535, and the default is 32768. RSTP/MSTP: The range is 0 to 61440, in steps of 4096 (0, 4096, 8192...), and the default is 32768. This command does not apply to MSTP. See the "Common Internal Spanning Tree configuration" section for more information.
hello <1-10>	Configures the bridge hello time. The hello time specifies how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value. The range is 1 to 10 seconds, and the default is 2 seconds. This command does not apply to MSTP. See the "Common Internal Spanning Tree configuration" section for more information.
mxage <6-40>	Configures the bridge maximum age. The maximum age parameter specifies the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the STP network. The range is 6 to 40 seconds, and the default is 20 seconds. This command does not apply to MSTP. See the "Common Internal Spanning Tree configuration" section for more information.
fwd <4-30>	Configures the bridge forward delay parameter. The forward delay parameter specifies the amount of time that a bridge port has to wait before it changes from the listening state to the learning state and from the learning state to the forwarding state. The range is 4 to 30 seconds, and the default is 15 seconds. This command does not apply to MSTP. See the "Common Internal Spanning Tree configuration" section for more information.

**Table 119** Bridge Spanning Tree Configuration Menu options

Command	Description
cur	Displays the current bridge STP parameters.

When configuring STP bridge parameters, the following formulas must be used:

- $2*(fwd-1) \geq mxage$
- $2*(hello+1) \leq mxage$

## Spanning Tree port configuration

**Command:** /cfg/12/stp <1-32> / port <port number>

```
[Spanning Tree Port 1 Menu]
prior - Set port Priority (0-255)
cost - Set port Path Cost (1-65535, 0 for default)
link - Set port link type (auto, p2p, or shared; default: auto)
edge - Enables or disables this port as an edge port
on - Turn port's Spanning Tree ON
off - Turn port's Spanning Tree OFF
cur - Display current port Spanning Tree parameters
```

By default for STP/PVST+, Spanning tree is turned Off for downlink ports (1-16), and turned On for uplink and cross-connect ports (17-24). By default for RSTP/MSTP, Spanning tree is turned On for all ports, with downlink ports configured as Edge ports.

Spanning tree port parameters are used to modify STP operation on an individual port basis. STP port parameters include:

- Port priority
- Port path cost

The following table describes the Spanning Tree Port Configuration Menu options.

**Table 120** Spanning Tree Port Configuration Menu options

Command	Description
prior <0-255>	Configures the port priority. The port priority helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment. The range is 0 to 255, and the default is 128. RSTP/MSTP: The range is 0 to 240, in steps of 16 (0, 16, 32...) and the default is 128.
cost <1-200000000>	Configures the port path cost. The port path cost is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. The range is 1 to 65535. The default is 10 for 100Mb/s ports, and 1 for Gigabit ports. A value of 0 indicates that the default cost will be computed for an auto-negotiated link speed. RSTP/MSTP: The range is 1 – 200000000, and the default is 20000 for Gigabit ports.
link auto p2p shared	Defines the type of link connected to the port, as follows: auto: Configures the port to detect the link type, and automatically match its settings. This is the default value. p2p: Configures the port for Point-To-Point protocol. shared: Configures the port to connect to a shared medium (usually a hub). This command only applies when RSTP is turned on. See the “Common Internal Spanning Tree configuration” section for more information.
edge disable enable	Enables or disables this port as an edge port. An edge port is not connected to a bridge, and can begin forwarding traffic as soon as the link is up. Configure server ports as edge ports (enabled). This command only applies when RSTP is turned on. See the “Common Internal Spanning Tree configuration” section for more information.
on	Enables STP on the port.
off	Disables STP on the port.

**Table 120** Spanning Tree Port Configuration Menu options

Command	Description
cur	Displays the current STP port parameters.

## Forwarding Database configuration

**Command:** /cfg/l2/fdb

```
[FDB Menu]
static    - Static FDB Menu
aging     - Configure FDB aging value
cur       - Display current FDB configuration
```

The following table describes the Forwarding Database Configuration Menu options.

**Table 121** FDB Configuration Menu options

Command	Description
static	Displays the Static FDB Configuration Menu.
aging <0-65535>	Configures the aging value for FDB entries. The default value is 300.
cur	Displays current FDB parameters.

## Static FDB configuration

**Command:** /cfg/l2/fdb/static

```
[Static FDB Menu]
add       - Add a permanent FDB entry
del       - Delete a static FDB entry
clear     - Clear static FDB entries
cur       - Display current static FDB configuration
```

The following table describes the Static FDB Configuration Menu options.

**Table 122** Static FDB Configuration Menu options

Command	Description
add <MAC address> <VLAN> <port>	Adds a static entry to the forwarding database.
del <MAC address> <VLAN> <port>	Deletes a static entry from the forwarding database.
clear mac <MAC Address> VLAN <1-4095>  Port <port number> All	Clears specified static FDB entries from the forwarding database, as follows: <ul style="list-style-type: none"> <li>• MAC address</li> <li>• VLAN</li> <li>• Port</li> <li>• All</li> </ul>
cur	Displays current static FDB parameters.



## Trunk configuration

**Command:** /cfg/l2/trunk <1-12>

```
[Trunk group 1 Menu]
add      - Add port to trunk group
rem      - Remove port from trunk group
ena      - Enable trunk group
dis      - Disable trunk group
del      - Delete trunk group
cur      - Display current Trunk Group configuration
```

Trunk groups can provide super-bandwidth connections between GbE2 Interconnect Switches or other trunk capable devices. A trunk is a group of ports that act together, combining their bandwidth to create a single, larger port. Up to 12 trunk groups can be configured on the GbE2 Interconnect Switch, with the following restrictions.

- Any physical GbE2 Interconnect Switch port can belong to no more than one trunk group.
- Up to six ports/trunks can belong to the same trunk group.
- All ports in a trunk must have the same configuration for speed, flow control, and auto negotiation.
- Trunking from other devices must comply with Cisco® EtherChannel® technology.
- By default, port 17 and port 18 are trunked to support an internal switch-to-switch crosslink trunk.



**NOTE:** See the *HP ProLiant BL p-Class GbE2 Interconnect Switch Application Guide* for information on how to use port trunks.

The following table describes the Trunk Group Configuration Menu options.

**Table 123** Trunk Group Configuration Menu options

Command	Description
add <port number>	Adds a physical port to the current trunk group.
rem <port number>	Removes a physical port from the current trunk group.
ena	Enables the current trunk group.
dis	Turns the current trunk group off.
del	Removes the current trunk group configuration.
cur	Displays current trunk group parameters.

## IP Trunk Hash configuration

**Command:** /cfg/l2/thash

```
[IP Trunk Hash Menu]
set      - IP Trunk Hash Settings Menu
cur      - Display current IP trunk hash configuration
```

The following table describes the IP Trunk Hash Configuration Menu options.

**Table 124** IP Trunk Hash Configuration Menu options

Command	Description
set	Displays the Trunk Hash Settings menu.
cur	Display current trunk hash configuration.

## Layer 2 IP Trunk Hash configuration

**Command:** /cfg/l2/thash/set

```
[set IP Trunk Hash Settings Menu]
smac      - Enable/disable smac hash
dmac      - Enable/disable dmac hash
sip       - Enable/disable sip hash
dip       - Enable/disable dip hash
cur       - Display current trunk hash setting
```

Trunk hash parameters are set globally for the GbE2 Interconnect Switch. You can enable one or two parameters, to configure any of the following valid combinations:

- SMAC (source MAC only)
- DMAC (destination MAC only)
- SIP (source IP only)
- DIP (destination IP only)
- SIP + DIP (source IP and destination IP)
- SMAC + DMAC (source MAC and destination MAC)

The following table describes the IP Trunk Hash Configuration Menu options.

**Table 125** IP Trunk Hash Set Menu options

Command	Description
smac enable disable	Enable or disable trunk hashing on the source MAC.
dmac enable disable	Enable or disable trunk hashing on the destination MAC.
sip enable disable	Enable or disable trunk hashing on the source IP.
dip enable disable	Enable or disable trunk hashing on the destination IP.
cur	Display current trunk hash configuration.

## Link Aggregation Control Protocol configuration

**Command:** /cfg/l2/lacp

```
[LACP Menu]
sysprio   - Set LACP system priority
timeout   - Set LACP system timeout scale for timing out partner info
port      - LACP port Menu
cur       - Display current LACP configuration
```

The following table describes the LACP Configuration Menu options.

**Table 126** LACP Configuration Menu options

Command	Description
sysprio <1-65535>	Defines the priority value (1 through 65535) for the switch. Lower numbers provide higher priority. The default value is 32768.
timeout short long	Defines the timeout period before invalidating LACP data from a remote partner. Choose <b>short</b> (3 seconds) or <b>long</b> (90 seconds). The default value is <b>long</b> .
<b>NOTE:</b> HP recommends that you use a timeout value of <b>long</b> , to reduce LACPDU processing. If your switch's CPU utilization rate remains at 100% for periods of 90 seconds or more, consider using static trunks instead of LACP.	
port <port number>	Displays the LACP Port menu.
cur	Display current LACP configuration.

## LACP Port configuration

**Command:** /cfg/l2/lacp/port <port number>

```
[LACP Port 2 Menu]
mode      - Set LACP mode
prio      - Set LACP port priority
adminkey  - Set LACP port admin key
cur       - Display current LACP port configuration
```

The following table describes the LACP Port Configuration Menu options.

**Table 127** LACP Port Configuration Menu options

Command	Description
mode off active passive	Set the LACP mode for this port, as follows: <ul style="list-style-type: none"><li>• <b>off</b> Turn LACP off for this port. You can use this port to manually configure a static trunk. The default value is <b>off</b>.</li><li>• <b>active</b> Turn LACP on and set this port to active. Active ports initiate LACPDUs.</li><li>• <b>passive</b> Turn LACP on and set this port to passive. Passive ports do not initiate LACPDUs, but respond to LACPDUs from active ports.</li></ul>
prio <1-65535>	Sets the priority value for the selected port. Lower numbers provide higher priority. Default is 128.
adminkey <1-65535>	Set the admin key for this port. Only ports with the same admin key and oper key (operational state generated internally) can form a LACP trunk group.
cur	Displays the current LACP configuration for this port.

## Hot Links configuration

**Command:** /cfg/l2/hotlink

```
[Hot Links Menu]
trigger  - Trigger Menu
sndfdb   - Enable/disable FDB update
on       - Globally turn Hot Links ON
off      - Globally turn Hot Links OFF
cur      - Display current Hot Links configuration
```

The following table describes the Hot Links Menu options.

**Table 128** Hot Links Menu options

Command	Description
trigger <1-4>	Displays the Hot Links trigger menu.
sndfdb enable disable	Enables or disables FDB Update, which allows the GbE2 to send FDB and MAC update packets over the active interface. The default value is <b>disabled</b> .
on	Globally turns Hot Links <b>on</b> .
off	Globally turns Hot Links <b>off</b> . The default option is <b>off</b> .
cur	Displays the current Hot Links configuration.

## Hot Links Trigger configuration

**Command:** /cfg/l2/hotlink/trigger <trigger number>

```
[Trigger 1 Menu]
  master    - Master Menu
  backup    - Backup Menu
  fdelay    - Set Forward Delay (secs)
  name      - Set Trigger Name
  preempt   - Enable/disable Preemption
  ena       - Enable Trigger
  dis       - Disable Trigger
  cur       - Display current Trigger configuration
```

The following table describes the Hot Links Trigger Menu options.

**Table 129** Hot Links Trigger Menu options

Command	Description
master	Displays the Master interface menu for the selected trigger.
backup	Displays the Backup interface menu for the selected trigger.
fdelay <0-3600>	Configures the Forward Delay interval, in seconds. The default value is 1.
name <string>	Configures a name for the trigger.
preempt enable disable	Enables or disables pre-emption, which allows the Master interface to transition to the Active state whenever it becomes available. The default option is enabled.
ena	Enables the Hot Links trigger.
dis	Disables the Hot Links trigger.
cur	Displays the current trigger configuration.

## Hot Links Master configuration

**Command:** /cfg/l2/hotlink/trigger/master

```
[Master Menu]
  port      - Set port in Master
  trunk     - Set trunk in Master
  cur       - Display current Master configuration
```

The following table describes the Hot Links Master Menu options.

**Table 130** Hot Links Master Menu options

Command	Description
port <port number (17-24)>	Adds the selected port to the Master interface.
trunk <1-12>	Adds the selected trunk to the Master interface.
cur	Displays the current Master configuration.

## Hot Links Backup configuration

**Command:** /cfg/l2/hotlink/trigger/backup

```
[Backup Menu]
  port      - Set port in Backup
  trunk     - Set trunk in Backup
  cur       - Display current Backup configuration
```

The following table describes the Hot Links Backup Menu options.

**Table 131** Hot Links Backup Menu options

Command	Description
port <port number (17-24)>	Adds the selected port to the Backup interface.
trunk <1-12>	Adds the selected trunk to the Backup interface.
cur	Displays the current Backup configuration.

## VLAN configuration

**Command:** /cfg/l2/vlan <1-4095>

```
[VLAN 1 Menu]
name      - Set VLAN name
stg       - Assign VLAN to a Spanning Tree Group
add       - Add port to VLAN
rem       - Remove port from VLAN
def       - Define VLAN as list of ports
ena       - Enable VLAN
dis       - Disable VLAN
del       - Delete VLAN
cur       - Display current VLAN configuration
```

The commands in this menu configure VLAN attributes, change the status of the VLAN, delete the VLAN, and change the port membership of the VLAN.

By default, the VLAN menu option is disabled except VLAN 1, which is always enabled. The GbE2 Interconnect Switch supports a maximum of 1,000 VLANs.



**NOTE:** See the *HP ProLiant BL p-Class GbE2 Interconnect Switch Application Guide* for information on VLANs.

The following table describes the VLAN Configuration Menu options.

**Table 132** VLAN Configuration Menu options

Command	Description
name <1-32 characters>	Assigns a name to the VLAN or changes the existing name. The default VLAN name is the first one.
stg <1-32>	Assigns a VLAN to a spanning tree group.
add <port number>	Adds ports or trunk groups to the VLAN membership.
rem <port number>	Removes ports or trunk groups from this VLAN.
def <list of port numbers>	Defines which ports are members of this VLAN. Every port must be a member of at least one VLAN. By default, it defines ports to VLAN 1.
ena	Enables this VLAN.
dis	Disables this VLAN without removing it from the configuration.
del	Deletes this VLAN.
cur	Displays the current VLAN configuration.



**IMPORTANT:** All ports must belong to at least one VLAN. Any port which is removed from a VLAN and which is not a member of any other VLAN is automatically added to default VLAN #1. You cannot remove a port from VLAN #1 if the port has no membership in any other VLAN. Also, you cannot add a port to more than one VLAN unless the port has VLAN tagging turned on. Refer to the **tag** command, in the “Port configuration” section earlier in this chapter.

## Layer 3 configuration

**Command:** /cfg/l3

```
[Layer 3 Menu]
  if      - Interface Menu
  gw      - Default Gateway Menu
  route   - Static Route Menu
  arp     - ARP Menu
  frwd    - Forwarding Menu
  nwf     - Network Filters Menu
  rmap    - Route Map Menu
  rip     - Routing Information Protocol Menu
  ospf    - Open Shortest Path First (OSPF) Menu
  igmp    - IGMP Menu
  dns     - Domain Name System Menu
  bootp   - Bootstrap Protocol Relay Menu
  vrrp    - Virtual Router Redundancy Protocol Menu
  rtrid   - Set router ID
  cur     - Display current IP configuration
```

The following table describes the Layer 3 Configuration Menu options.

**Table 133** L3 Configuration Menu options

Command	Description
if <1-255>	Displays the IP Interface Menu.
gw <1-4>	Displays the IP Default Gateway Menu.
route	Displays the IP Static Route Menu.
arp	Displays the Address Resolution Protocol Menu.
frwd	Displays the IP Forwarding Menu.
nwf <1-256>	Displays the Network Filter Configuration Menu.
rmap <1-32>	Displays the Route Map Menu.
rip	Displays the Routing Interface Protocol Menu.
ospf	Displays the OSPF Menu.
igmp	Displays the IGMP Menu.
dns	Displays the IP Domain Name System Menu.
bootp	Displays the Bootstrap Protocol Menu.
vrrp	Displays the Virtual Router Redundancy Configuration Menu.
rtrid <IP address>	Sets the router ID.
cur	Displays the current IP configuration.

## IP interface configuration

**Command:** /cfg/l3/if <1-255>

```
[IP Interface 1 Menu]
  addr    - Set IP address
  mask    - Set subnet mask
  vlan    - Set VLAN number
  relay   - Enable/disable BOOTP relay
  ena     - Enable IP interface
  dis     - Disable IP interface
  del     - Delete IP interface
  cur     - Display current interface configuration
```

The GbE2 Interconnect Switch can be configured with up to 255 IP interfaces. Each IP interface represents the GbE2 Interconnect Switch on an IP subnet on your network. The IP Interface option is disabled by default.

The following table describes the IP Interface Configuration Menu options.

**Table 134** IP Interface Configuration Menu options

Command	Description
addr <IP address>	Configures the IP address of the switch interface, using dotted decimal notation. For example, 100.10.1.1
mask <IP subnet mask>	Configures the IP subnet address mask for the interface using dotted decimal notation. For example, 255.255.255.0
vlan <1-4095>	Configures the VLAN number for this interface. Each interface can belong to one VLAN, though any VLAN can have multiple IP interfaces in it.
relay disable enable	Enables or disables the BOOTP relay on this interface. BOOTP Relay is enabled by default.
ena	Enables this IP interface.
dis	Disables this IP interface.
del	Removes this IP interface.
cur	Displays the current interface settings.



**NOTE:** If you enter an IP address, you will be prompted to change the BOOTP setting.

## Default Gateway configuration

**Command:** /cfg/l3/gw <1-4>

```
[Default gateway 1 Menu]
addr      - Set IP address
intr      - Set interval between ping attempts
retry     - Set number of failed attempts to declare gateway DOWN
arp       - Enable/disable ARP only health checks
ena       - Enable default gateway
dis       - Disable default gateway
del       - Delete default gateway
cur       - Display current default gateway configuration
```

The GbE2 Interconnect Switch supports up to four gateways. By default, no gateways are configured on the switch. Enter 1, 2, 3, or 4 in the command as the <gateway number>, depending upon which gateway you want to configure.

The following table describes the Default IP Gateway Configuration Menu options.

**Table 135** Default IP Gateway Configuration Menu options

Command	Description
addr <IP address>	Configures the IP address of the default IP gateway using dotted decimal notation. For example, 100.10.1.1
intr <0-60>	The switch pings the default gateway to verify that it is up. The <b>intr</b> option sets the time between health checks. The range is from 0 to 60 seconds. The default is 2 seconds.
retry <1-120>	Sets the number of failed health check attempts required before declaring this default gateway inoperative. The range is from 1 to 120 attempts. The default is 8 attempts.
arp disable enable	Enables or disables Address Resolution Protocol (ARP) health checks. This command is disabled by default.
ena	Enables the gateway for use.
dis	Disables the gateway.
del	Deletes the gateway from the configuration.
cur	Displays the current gateway settings.

## IP Static Route configuration

**Command:** /cfg/l3/route

```
[IP Static Route Menu]
add      - Add static route
rem      - Remove static route
cur      - Display current static route configuration
```

The following table describes the Static Route Configuration Menu options.

**Table 136** Static Route Configuration Menu options

Command	Description
add <IP address> <IP subnet mask> <gateway> <interface>	Adds a static route. You will be prompted to enter a destination IP address, destination subnet mask, and gateway address. Enter all addresses using dotted decimal notation.
rem <IP address> <IP subnet mask>	Removes a static route. The destination address of the route to remove must be specified using dotted decimal notation.
cur	Displays the current IP configuration.

## Address Resolution Protocol configuration

**Command:** /cfg/l3/arp

```
[ARP Menu]
static   - Static ARP Menu
rearp    - Set re-ARP period in minutes
cur      - Display current ARP configuration
```

Address Resolution Protocol (ARP) is the TCP/IP protocol that resides within the Internet layer. ARP resolves a physical address from an IP address. ARP queries machines on the local network for their physical addresses. ARP also maintains IP to physical address pairs in its cache memory. In any IP communication, the ARP cache is consulted to see if the IP address of the computer or the router is present in the ARP cache. Then the corresponding physical address is used to send a packet.

The following table describes the ARP Configuration Menu options.

**Table 137** ARP Configuration Menu options

Command	Description
static	Displays Static ARP menu.
rearp <2-120>	Defines re-ARP period in minutes. You can set this duration between two and 120 minutes.
cur	Displays the current ARP configurations.

## ARP Static configuration

**Command:** /cfg/l3/arp/static

```
[Static ARP Menu]
add      - Add a permanent ARP entry
del      - Delete an ARP entry
cur      - Display current static ARP configuration
```

Static ARP entries are permanent in the ARP cache and do not age out like the ARP entries that are learnt dynamically. Static ARP entries enable the switch to reach the hosts without sending an ARP broadcast request to the network. Static ARPs are also useful to communicate with devices that do not respond to ARP requests. Static ARPs can also be configured on some gateways as a protection against malicious ARP Cache corruption and possible DOS attacks.

The following table describes the Static ARP Configuration Menu options.



**Table 138** Static ARP Configuration Menu options

Command	Description
add <IP address> <MAC address> <VLAN number> <port number>	Adds a permanent ARP entry.
del <IP address>	Deletes a permanent ARP entry.
cur	Displays current static ARP configuration.

## IP Forwarding configuration

**Command:** /cfg/l3/frwd

```
[IP Forwarding Menu]
dirbr    - Enable/disable forwarding directed broadcasts
on       - Globally turn IP Forwarding ON
off      - Globally turn IP Forwarding OFF
cur      - Display current IP Forwarding configuration
```

The following table describes the IP Forwarding Configuration Menu options.

**Table 139** IP Forwarding Configuration Menu options

Command	Description
dirbr disable enable	Enables or disables forwarding directed broadcasts. This command is disabled by default.
on	Enables IP forwarding (routing) on the GbE2 Interconnect Switch.
off	Disables IP forwarding (routing) on the GbE2 Interconnect Switch. Forwarding is turned off by default.
cur	Displays the current IP forwarding settings.

## Network Filter configuration

**Command:** /cfg/l3/nwf <1-256>

```
[IP Network Filter 1 Menu]
addr     - IP Address
mask     - IP Subnet mask
enable   - Enable Network Filter
disable  - Disable Network Filter
delete   - Delete Network Filter
current  - Display current Network Filter configuration
```

The following table describes the Network Filter Configuration Menu options.

**Table 140** Network Filter Configuration Menu options

Command	Description
addr <IP address>	Sets the starting IP address for this filter. The default address is 0.0.0.0
mask <IP subnet mask>	Sets the IP subnet mask that is used with /cfg/l3/nwf/addr to define the range of IP addresses that will be accepted by the peer when the filter is enabled. The default value is 0.0.0.0
enable	Enables the Network Filter configuration.
disable	Disables the Network Filter configuration.
delete	Deletes the Network Filter configuration.
current	Displays the current the Network Filter configuration.

## Route Map configuration

**Command:** /cfg/l3/rmap <1-32>

```

[IP Route Map 1 Menu]
  alist      - Access List number
  aspath     - AS Filter Menu
  ap         - Set as-path prepend of the matched route
  lp         - Set local-preference of the matched route
  metric     - Set metric of the matched route
  type       - Set OSPF metric-type of the matched route
  prec       - Set the precedence of this route map
  weight     - Set weight of the matched route
  enable     - Enable route map
  disable    - Disable route map
  delete     - Delete route map
  current    - Display current route map configuration

```

Routing maps control and modify routing information. The *map number* (1-32) represents the routing map you wish to configure.

The following table describes the Route Map Configuration Menu options.

**Table 141** Route Map Configuration Menu options

Command	Description
alist <1-8>	Displays the Access List menu.
aspath <1-8>	Displays the Autonomous System (AS) Filter menu.
ap <AS number> [<AS number>] [<AS number>]   none	Sets the AS path preference of the matched route. One to three path preferences can be configured.
lp <0-4294967294>   none	Sets the local preference of the matched route, which affects both inbound and outbound directions. The path with the higher preference is preferred.
metric <0-4294967294>   none	Sets the metric of the matched route.
type 1   2   none	Assigns the type of OSPF metric. The default is type 1. <ul style="list-style-type: none"> <li>Type 1—External routes are calculated using both internal and external metrics.</li> <li>Type 2—External routes are calculated using only the external metrics. Type 2 routes have more cost than Type 1.</li> <li>none—Removes the OSPF metric.</li> </ul>
prec <1-256>	Sets the precedence of the route map. The smaller the value, the higher the precedence. Default value is 10.
weight <0-65534>   none	Sets the weight of the route map.
enable	Enables the route map.
disable	Disables the route map.
delete	Deletes the route map.
cur	Displays the current route configuration.

## IP Access List configuration

**Command:** /cfg/l3/rmap <1-32>/alist <1-8>

```
[IP Access List 1 Menu]
nwf      - Network Filter number
metric   - Metric
action   - Set Network Filter action
enable   - Enable Access List
disable  - Disable Access List
delete   - Delete Access List
current  - Display current Access List configuration
```

The *route map number* (1-32) and the *access list number* (1-8) represent the IP access list you wish to configure. The following table describes the IP Access List Configuration Menu options.

**Table 142** IP Access List Configuration Menu options

Command	Description
nwf <1-256>	Sets the network filter number.
metric <1-4294967294> none	Sets the metric value in the AS-External (ASE) LSA.
action permit deny	Permits or denies action for the access list.
enable	Enables the access list.
disable	Disables the access list.
delete	Deletes the access list.
cur	Displays the current Access List configuration.

## Autonomous System Path configuration

**Command:** /cfg/l3/rmap <1-32>/aspath <1-8>

```
[AS Filter 1 Menu]
as       - AS number
action   - Set AS Filter action
enable   - Enable AS Filter
disable  - Disable AS Filter
delete   - Delete AS Filter
current  - Display current AS Filter configuration
```

The *rmap number* (1-32) and the *path number* (1-8) represent the AS path you wish to configure. The following table describes the Autonomous System Path Configuration Menu options.

**Table 143** Autonomous System Path Configuration Menu options

Command	Description
as <1-65535>	Sets the Autonomous System filter's path number.
action permit deny	Permits or denies Autonomous System filter action.
enable	Enables the Autonomous System filter.
disable	Disables the Autonomous System filter.
delete	Deletes the Autonomous System filter.
cur	Displays the current Autonomous System filter configuration.

# Routing Information Protocol configuration

**Command:** /cfg/l3/rip

```
[Routing Information Protocol Menu]
if          - RIP Interface Menu
update      - Set update period in seconds
redist      - RIP Route Redistribute Menu
on          - Globally turn RIP ON
off         - Globally turn RIP OFF
current     - Display current RIP configuration
```

The RIP Menu is used for configuring Routing Information Protocol parameters. This option is turned off by default. The following table describes the RIP Configuration Menu options.

**Table 144** RIP Configuration Menu options

Command	Description
if <1-255>	Displays the RIP Interface menu.
update <1-120>	Configures the time interval for sending for RIP table updates, in seconds. The default value is 30 seconds.
redist	Displays the RIP Route Redistribute menu.
on	Globally turns RIP on.
off	Globally turns RIP off.
cur	Displays the current RIP configuration.

## RIP Interface configuration

**Command:** /cfg/l3/rip/if <1-255>

```
[RIP Interface 1 Menu]
version      - Set RIP version
supply       - Enable/disable supplying route updates
listen       - Enable/disable listening to route updates
poison       - Enable/disable poisoned reverse
split        - Enable/disable split horizon
trigg        - Enable/disable triggered updates
mcast        - Enable/disable multicast updates
default      - Set default route action
metric       - Set metric
auth         - Set authentication type
key          - Set authentication key
enable       - Enable interface
disable      - Disable interface
current      - Display current RIP interface configuration
```

The RIP Menu is used for configuring Routing Information Protocol parameters. This option is turned off by default.



**NOTE:** Do not configure RIP1 parameters if your routing equipment uses RIP version 2.

The following table describes the RIP Interface Configuration Menu options.

**Table 145** RIP Interface Configuration Menu options

Command	Description
version 1 2 both	Configures the RIP version used by this interface. The default value is version 2.
supply disable enable	When enabled, the switch supplies routes to other routers. This command is enabled by default.
listen disable enable	When enabled, the switch learns routes from other routers. This command is enabled by default.
poison disable enable	When enabled, the switch uses split horizon with poisoned reverse. When disabled, the switch uses only split horizon. The default value is disabled.

**Table 145** RIP Interface Configuration Menu options

Command	Description
<code>split disable enable</code>	Enables or disables split horizon. The default value is enabled.
<code>trigg disable enable</code>	Enables or disables Triggered Updates. Triggered Updates are used to speed convergence. When enabled, Triggered Updates force a router to send update messages immediately, even if it is not yet time for the update message. The default value is disabled.
<code>mcast disable enable</code>	Enables or disables multicast updates of the routing table (using address 224.0.0.9). The default value is enabled.
<code>default disable enable</code>	When enabled, the switch accepts RIP default routes from other routers, but gives them lower priority than configured default gateways. When disabled, the switch rejects RIP default routes. The default value is disabled.
<code>metric &lt;1-15&gt;</code>	Configures the route metric, which indicates the relative distance to the destination. The default value is 1.
<code>auth none password</code>	Configures the authentication type. The default is none.
<code>key</code>	Configures the authentication key password.
<code>enable</code>	Enables this RIP interface.
<code>disable</code>	Disables this RIP interface.
<code>cur</code>	Displays the current RIP configuration.

## RIP Route Redistribution configuration

**Command:** `/cfg/l3/rip/redist fixed|static|ospf|eospf`

```
[RIP Redistribute Fixed Menu]
add      - Add rmap into route redistribution list
rem      - Remove rmap from route redistribution list
export   - Export all routes of this protocol
cur      - Display current route-maps added
```

The following table describes the RIP Route Redistribute Menu options.

**Table 146** RIP Interface Configuration Menu options

Command	Description
<code>add &lt;1-32&gt; &lt;1-32&gt; all</code>	Adds selected routing maps to the RIP route redistribution list. To add all the 32 route maps, enter <code>all</code> . To add specific route maps, enter routing map numbers one per line, NULL at the end. This option adds a route map to the route redistribution list. The routes of the redistribution protocol matched by the route maps in the route redistribution list will be redistributed.
<code>remove &lt;1-32&gt; &lt;1-32&gt; all</code>	Removes the route map from the RIP route redistribution list. Removes routing maps from the list. To remove all 32 route maps, enter <code>all</code> . To remove specific route maps, enter routing map numbers one per line, NULL at end.
<code>export &lt;1-15&gt; none</code>	Exports the routes of this protocol in which the metric and metric type are specified. To remove a previous configuration and stop exporting the routes of the protocol, enter <code>none</code> .
<code>cur</code>	Displays the current RIP route redistribute configuration.

# Open Shortest Path First configuration

**Command:** /cfg/13/ospf

```
[Open Shortest Path First Menu]
aindex  - OSPF Area (index) Menu
range   - OSPF Summary Range Menu
if       - OSPF Interface Menu
virt     - OSPF Virtual Links Menu
md5key   - OSPF MD5 Key Menu
host     - OSPF Host Entry Menu
redist   - OSPF Route Redistribute Menu
lsdb     - Set the LSDB limit for external LSA
default  - Export default route information
on       - Globally turn OSPF ON
off      - Globally turn OSPF OFF
cur      - Display current OSPF configuration
```

The following table describes the Open Shortest Path First Menu options.

**Table 147** OSPF Configuration Menu options

Command	Description
aindex <0-2>	Displays the area index menu. This area index does not represent the actual OSPF area number.
range <1-16>	Displays summary routes menu for up to 16 IP addresses.
if <1-255>	Displays the OSPF interface configuration menu.
virt <1-3>	Displays the Virtual Links menu used to configure OSPF for a Virtual Link.
md5key <1-255 characters>	Assigns a string to MD5 authentication key.
host <1-128>	Displays the menu for configuring OSPF for the host routes. Up to 128 host routes can be configured. Host routes are used for advertising network device IP addresses to external networks to perform server load balancing within OSPF. It also makes Area Border Route (ABR) load sharing and ABR failover possible.
redist <fixed static rip ebgp ibgp>	Displays Route Distribution Menu.
lsdb <0-2000>	Sets the link state database limit. Enter 0 (zero) for no limit.
default <1-16777215> 1 2> none	Sets one default route among multiple choices in an area. Enter none for no default route.
on	Enables OSPF.
off	Disables OSPF.
cur	Displays the current OSPF configuration settings.

## OSFP Area Index configuration

**Command:** /cfg/l3/ospf/aindex <0-2>

```
[OSPF Area (index) 1 Menu]
  areaid - Set area ID
  type   - Set area type
  metric - Set stub area metric
  auth   - Set authentication type
  spf    - Set time interval between two SPF calculations
  enable - Enable area
  disable - Disable area
  delete - Delete area
  cur    - Display current OSPF area configuration
```

The following table describes the Area Index Configuration Menu options.

**Table 148** OSPF Area Index Configuration Menu options

Command	Description
areaid <IP address>	Defines the IP address of the OSPF area number.
type transit stub nssa	Defines the type of area. For example, when a virtual link has to be established with the backbone, the area type must be defined as transit. <ul style="list-style-type: none"><li>• <b>Transit area:</b> allows area summary information to be exchanged between routing devices. Any area that is not a stub area or NSSA is considered to be transit area.</li><li>• <b>Stub area:</b> is an area where external routing information is not distributed. Typically, a stub area is connected to only one other area.</li><li>• <b>NSSA:</b> Not-So-Stubby Area (NSSA) is similar to stub area with additional capabilities. For example, routes originating from within the NSSA can be propagated to adjacent transit and backbone areas. External routes from outside the Autonomous System (AS) can be advertised within the NSSA but are not distributed into other areas.</li></ul>
metric <1-65535>	Configures a stub area to send a numeric metric value. All routes received via that stub area carry the configured metric to potentially influencing routing decisions. Metric value assigns the priority for choosing the switch for default route. Metric type determines the method for influencing routing decisions for external routes.
auth none password md5	Defines the authentication method, as follows: <b>None:</b> No authentication required. <b>Password:</b> Authenticates simple passwords so that only trusted routing devices can participate. <b>MD5:</b> This parameter is used when MD5 cryptographic authentication is required.
spf <0-255>	Sets time interval between two successive SPF (shortest path first) calculations of the shortest path tree using the Dijkstra's algorithm.
enable	Enables the OSPF area.
disable	Disables the OSPF area.
delete	Deletes the OSPF area.
cur	Displays the current OSPF configuration.

## OSPF Summary Range configuration

**Command:** /cfg/l3/ospf/range <1-16>

```
[OSPF Summary Range 1 Menu]
addr      - Set IP address
mask      - Set IP mask
aindex    - Set area index
hide      - Enable/disable hide range
enable    - Enable range
disable   - Disable range
delete    - Delete range
cur       - Display current OSPF summary range configuration
```

The following table describes the OSPF Summary Range Configuration Menu options.

**Table 149** OSPF Summary Range Configuration Menu options

Command	Description
addr <IP Address>	Configures the base IP address for the range. For example, 100.10.1.1
mask <IP address mask>	Configures the IP address mask for the range.
aindex <0-2>	Configures the area index used by the switch.
hide disable enable	Hides the OSPF summary range.
enable	Enables the OSPF summary range.
disable	Disables the OSPF summary range.
delete	Deletes the OSPF summary range.
cur	Displays the current OSPF summary range.

## OSPF Interface configuration

**Command:** /cfg/l3/ospf/if <1-255>

```
[OSPF Interface 1 Menu]
aindex    - Set area index
prio      - Set interface router priority
cost      - Set interface cost
hello     - Set hello interval in seconds
dead      - Set dead interval in seconds
trans     - Set transit delay in seconds
retra     - Set retransmit interval in seconds
key       - Set authentication key
mdkey     - Set MD5 key ID
enable    - Enable interface
disable   - Disable interface
delete    - Delete interface
cur       - Display current OSPF interface configuration
```

The following table describes the OSPF Interface Configuration Menu options.

**Table 150** OSPF Interface Configuration Menu options

Command	Description
aindex <0-2>	Configures the OSPF area index.
prio <0-255>	Configures the assigned priority value to the OSPF interfaces. (A priority value of 127 is the highest and 1 is the lowest. A priority value of 0 specifies that the interface cannot be used as Designated Router (DR) or Backup Designated Router (BDR).)
cost <1-65535>	Configures cost set for the selected path—preferred or backup. Usually the cost is inversely proportional to the bandwidth of the interface. Low cost indicates high bandwidth.
hello <1-65535>	Configures the interval in seconds between the hello packets for the interfaces.



**Table 150** OSPF Interface Configuration Menu options

Command	Description
dead <1-65535>	Configures the health parameters of a hello packet, which is set for an interval of seconds before declaring a silent router to be down.
trans <1-3600>	Configures the transit delay in seconds.
retra <1-3600>	Configures the retransmit interval in seconds.
key <key string> none	Sets the authentication key to clear the password.
mdkey <1-255> none	Assigns an MD5 key to the interface.
enable	Enables the OSPF interface.
disable	Disables the OSPF interface.
delete	Deletes the OSPF interface.
cur	Displays the current settings for OSPF interface.

## OSPF Virtual Link configuration

**Command:** /cfg/l3/ospf/virt <1-3>

```
[OSPF Virtual Link 1 Menu]
aindex - Set area index
hello   - Set hello interval in seconds
dead    - Set dead interval in seconds
trans   - Set transit delay in seconds
retra   - Set retransmit interval in seconds
nbr     - Set router ID of virtual neighbor
key     - Set authentication key
mdkey   - Set MD5 key ID
enable  - Enable interface
disable - Disable interface
delete  - Delete interface
cur     - Display current OSPF interface configuration
```

The following table describes the OSPF Virtual Link Configuration Menu options.

**Table 151** OSPF Virtual Link Configuration Menu options

Command	Description
aindex <0-2>	Configures the OSPF area index.
hello <1-65535>	Configures the authentication parameters of a hello packet, which is set to be in an interval of seconds.
dead <1-65535>	Configures the health parameters of a hello packet, which is set to be in an interval of seconds. Default is 40 seconds.
trans <1-3600>	Configures the delay in transit in seconds. Default is one second.
retra <1-3600>	Configures the retransmit interval in seconds. Default is five seconds.
nbr <IP address>	Configures the router ID of the virtual neighbor. Default is 0.0.0.0
key <password>	Configures the password (up to eight characters) for each virtual link. Default is none.
mdkey <1-255> none	Sets MD5 key ID for each virtual link. Default is none.
enable	Enables OSPF virtual link.
disable	Disables OSPF virtual link.
delete	Deletes OSPF virtual link.
cur	Displays the current OSPF virtual link settings.

## OSPF Host Entry configuration

**Command:** /cfg/l3/ospf/host <1-128>

```

[OSPF Host Entry 1 Menu]
  addr      - Set host entry IP address
  aindex    - Set area index
  cost      - Set cost of this host entry
  enable     - Enable host entry
  disable    - Disable host entry
  delete     - Delete host entry
  cur       - Display current OSPF host entry configuration

```

The following table describes the OSPF Host Entry Configuration Menu options.

**Table 152** OSPF Host Entry Configuration Menu options

Command	Description
addr <IP address>	Configures the base IP address for the host entry. For example, 100.10.1.1
aindex <0-2>	Configures lays the area index of the host.
cost <1-65535>	Configures the cost value of the host.
enable	Enables OSPF host entry.
disable	Disables OSPF host entry.
delete	Deletes OSPF host entry.
cur	Displays the current OSPF host entries.

## OSPF Route Redistribution configuration

**Command:** /cfg/l3/ospf/redist fixed|static|rip|ebgp|ibgp

```

[OSPF Redistribute Fixed Menu]
  add      - Add rmap into route redistribution list
  rem      - Remove rmap from route redistribution list
  export   - Export all routes of this protocol
  cur      - Display current route-maps added

```

The following table describes the OSPF Route Redistribution Configuration Menu options.

**Table 153** OSPF Route Redistribution Configuration Menu options

Command	Description
add <1-32> <1-32>  all	Adds selected routing maps to the rmap list. To add all the 32 route maps, enter all. To add specific route maps, enter routing map numbers one per line, NULL at the end. This option adds a route map to the route redistribution list. The routes of the redistribution protocol matched by the route maps in the route redistribution list will be redistributed.
rem <1-32> <1-32> ...  all	Removes the route map from the route redistribution list. Removes routing maps from the rmap list. To remove all 32 route maps, enter all. To remove specific route maps, enter routing map numbers one per line, NULL at end.
export <1-16777215> 1 2 none	Exports the routes of this protocol as external OSPF AS-external LSAs in which the metric and metric type are specified. To remove a previous configuration and stop exporting the routes of the protocol, enter none.
cur	Displays the current route map settings.

## OSPF MD5 Key configuration

**Command:** /cfg/l3/ospf/md5key <key ID>

```
[OSPF MD5 Key 1 Menu]
key      - Set authentication key
delete   - Delete key
cur      - Display current MD5 key configuration
```

The following table describes the OSPF MD5 Key Configuration Menu options.

**Table 154** OSPF MD5 Key Configuration Menu options

Command	Description
key	Sets the authentication key for this OSPF packet.
delete	Deletes the authentication key for this OSPF packet.
cur	Displays the current MD5 key configuration.

## IGMP configuration

**Command:** /cfg/l3/igmp

```
[IGMP Menu]
snoop      - IGMP Snoop Menu
mrouter     - Static Multicast Router Menu
igmpflt    - IGMP Filtering Menu
on          - Globally turn IGMP ON
off         - Globally turn IGMP OFF
cur        - Display current IGMP configuration
```

IGMP Snooping allows the switch to forward multicast traffic only to those ports that request it. IGMP Snooping prevents multicast traffic from being flooded to all ports. The switch learns which server hosts are interested in receiving multicast traffic, and forwards it only to ports connected to those servers.

The following table describes the IGMP Menu options.

**Table 155** IGMP Snoop Menu options

Command	Description
snoop	Displays the IGMP Snoop Menu.
mrouter	Displays the Static Multicast Router Menu.
igmpflt	Displays the IGMP Filtering Menu.
on	Globally turns IGMP on.
off	Globally turns IGMP off.
cur	Displays the current IGMP configuration parameters.

## IGMP snooping configuration

**Command:** /cfg/l3/igmp/snoop

```
[IGMP Snoop Menu]
timeout - Set report timeout
mrto    - Set multicast router timeout
qintrval - Set IGMP query interval
robust  - Set expected packet loss on subnet
aggr    - Aggregate IGMP report
srcip   - Set source ip to use when proxying GSQ
add     - Add VLAN(s) to IGMP Snooping
rem     - Remove VLAN(s) from IGMP Snooping
clear   - Remove all VLAN(s) from IGMP Snooping
fastlv  - Enable/disable Fastleave processing in VLAN
cur     - Display current IGMP Snooping configuration
```

The following table describes the IGMP Snoop Configuration Menu options.

**Table 156** IGMP Snoop Menu options

Command	Description
timeout <1-255>	Sets the Maximum Response Time (MRT) for IGMP hosts. MRT is one of the parameters used to determine the age out period of the IGMP hosts. Increasing the timeout increases the age out period. The range is from 1 to 255 seconds. The default is 10 seconds
mrto <1-600>	Configures the age-out period for the IGMP Mrouter in the Mrouter table. If the switch does not receive a General Query from the Mrouter for mrto seconds, the switch removes the multicast router from its Mrouter table. The range is from 1 to 600 seconds. The default is 255 seconds.
qintrval <1-600>	Sets the IGMP router query interval. The range is 1-600 seconds. The default value is 125.
robust <2-10>	Configures the IGMP Robustness variable, which allows you to tune the switch for expected packet loss on the subnet. If the subnet is expected to be lossy (high rate of packet loss), then increase the value. The default value is 2.
aggr disable enable	Enables or disables IGMP Membership Report aggregation.
srcip <IP address>	Configures the source IP address used as a proxy for IGMP Group Specific Queries.
add <1-4095>	Adds the VLAN to IGMP Snooping.
rem <1-4095>	Removes the VLAN from IGMP Snooping.
clear	Removes all VLANs from IGMP Snooping.
fastlv <1-4095> disable enable	Enables or disables Fastleave processing. Fastleave allows the switch to immediately remove a port from the IGMP port list, if the host sends a Leave message, and the proper conditions are met. This command is disabled by default.
ena	Enables IGMP Snooping.
dis	Disables IGMP Snooping.
cur	Displays the current IGMP Snooping parameters.

## IGMP static multicast router configuration

**Command:** /cfg/l3/igmp/mrouter

```
[Static Multicast Router Menu]
add - Add port as Multicast Router Port
rem - Remove port as Multicast Router Port
cur - Display current Multicast Router configuration
```

The following table describes the Static Multicast Router Configuration Menu options.



**NOTE:** When you configure a static multicast router on a VLAN, the process of learning multicast routers is disabled for that VLAN.

**Table 157** IGMP Static Multicast Router Menu

Command	Description
add <port number> <1-4095> <1-2>	Selects a port/VLAN combination on which the static multicast router is connected, and configures the IGMP version (1 or 2) of the multicast router.
<b>NOTE:</b> Port number must be an external port (19-24).	
remove <port number> <1-4095> <1-2>	Removes a static multicast router from the selected port/VLAN combination.
cur	Displays the current IGMP Static Multicast Router parameters.

## IGMP filtering configuration

**Command:** /cfg/l3/igmp/igmpflt

```
[IGMP Filter Menu]
filter - IGMP Filter Definition Menu
port - IGMP Filtering Port Menu
ena - Enable IGMP Filtering
dis - Disable IGMP Filtering
cur - Display current IGMP Filtering configuration
```

The following table describes the IGMP Filter Configuration Menu options.

**Table 158** IGMP Filtering Menu

Command	Description
filter <1-16>	Displays the IGMP Filter Definition Menu.
port <port number>	Displays the IGMP Filtering Port Menu.
ena	Enables IGMP filtering globally.
dis	Disables IGMP Filtering globally.
cur	Displays the current IGMP Filtering parameters.

## IGMP filter definition

**Command:** /cfg/l3/igmp/igmpflt/filter <1-16>

```
[IGMP Filter 1 Definition Menu]
range - Set IP Multicast address range
action - Set filter action
ena - Enable filter
dis - Disable filter
del - Delete filter
cur - Display current IGMP filter configuration
```

The following table describes the IGMP Filter Definition Menu options.

**Table 159** IGMP Filter Definition Menu

Command	Description
range <IP multicast address> <IP multicast address>	Configures the range of IP multicast addresses for this filter. Enter the first IP multicast address of the ranger, followed by the second IP multicast address of the range.
action allow deny	Allows or denies multicast traffic for the IP multicast addresses specified.
ena	Enables this IGMP filter.
dis	Disables this IGMP filter.
del	Deletes this filter's parameter definitions.
cur	Displays the current IGMP filter.

## IGMP filtering port configuration

**Command:** /cfg/l3/igmp/igmpflt/port <port number>

```
[IGMP Port 17 Menu]
filt - Enable/disable IGMP Filtering on port
add - Add IGMP filter to port
rem - Remove IGMP filter from port
cur - Display current IGMP Filtering Port configuration
```

The following table describes the IGMP Port Filtering Configuration Menu options.

**Table 160** IGMP Filtering Port Menu

Command	Description
filt enable disable	Enables or disables IGMP Filtering on this port.
add <1-16>	Adds an IGMP filter to this port.
rem <1-16>	Removes an IGMP filter from this port.
cur	Displays the current IGMP filter parameters for this port.

## Domain name system configuration

**Command:** /cfg/l3/dns

```
[Domain Name System Menu]
  prima    - Set IP address of primary DNS server
  secon    - Set IP address of secondary DNS server
  dname    - Set default domain name
  cur      - Display current DNS configuration
```

The Domain Name System (DNS) Configuration Menu is used for defining the primary and secondary DNS servers on your local network, and for setting the default domain name served by the GbE2 Interconnect Switch services. DNS parameters must be configured prior to using hostname parameters with the **ping**, **tracert**, and **tracert** commands.

The following table describes the Domain Name System (DNS) Configuration Menu options.

**Table 161** Domain Name System (DNS) Configuration Menu options

Command	Description
prima <IP address>	You will be prompted to set the IP address for your primary DNS server. Use dotted decimal notation. For example, 100.10.1.1
secon <IP address>	You will be prompted to set the IP address for your secondary DNS server. If the primary DNS server fails, the configured secondary will be used instead. Enter the IP address using dotted decimal notation. For example, 100.10.1.2
dname <dotted DNS notation> none	Sets the default domain name used by the switch. For example: mycompany.com
cur	Displays the current Domain Name System (DNS) settings.

## Bootstrap Protocol Relay configuration

**Command:** /cfg/l3/bootp

```
[Bootstrap Protocol Relay Menu]
  addr     - Set IP address of BOOTP server
  addr2    - Set IP address of second BOOTP server
  on       - Globally turn BOOTP relay ON
  off      - Globally turn BOOTP relay OFF
  cur      - Display current BOOTP relay configuration
```

The Bootstrap Protocol (BOOTP) Relay Menu is used to allow hosts to obtain their configurations from a Dynamic Host Configuration Protocol (DHCP) server. The BOOTP configuration enables the switch to forward a client request for an IP address to two DHCP/BOOTP servers with IP addresses that have been configured on the GbE2 Interconnect Switch.

BOOTP relay is turned off by default.

The following table describes the BOOTP Configuration Menu options.

**Table 162** BOOTP Configuration Menu options

Command	Description
addr <IP address>	Sets the IP address of the BOOTP server. For example, 100.10.1.1
addr2 <IP address>	Sets the IP address of the secondary BOOTP server. For example, 100.10.1.2
on	Globally turns on BOOTP relay.
off	Globally turns on BOOTP relay.
cur	Displays the current BOOTP relay configuration.

# Virtual Router Redundancy Protocol configuration

**Command:** /cfg/l3/vrrp

```
[Virtual Router Redundancy Protocol Menu]
vr      - VRRP Virtual Router Menu
group   - VRRP Virtual Router Group Menu
if      - VRRP Interface Menu
track   - VRRP Priority Tracking Menu
on      - Globally turn VRRP ON
off     - Globally turn VRRP OFF
cur     - Display current VRRP configuration
```

Virtual Router Redundancy Protocol (VRRP) support on the GbE2 Interconnect Switch provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

By default, VRRP is disabled. For more information on VRRP, see the “High Availability” chapter in the *HP ProLiant BL p-Class GbE2 Interconnect Switch Application Guide*.

The following table describes the VRRP Configuration Menu options.

**Table 163** VRRP Configuration Menu options

Command	Description
vr <1-255>	Displays the VRRP Virtual Router Menu. This menu is used for configuring up to 255 virtual routers on this switch.
group	Displays the VRRP virtual router group menu, used to combine all virtual routers together as one logical entity. Group options must be configured when using two or more GbE2 Interconnect Switches in a hot-standby failover configuration where only one switch is active at any given time.
if <1-255>	Displays the VRRP Virtual Router Interface Menu.
track	Displays the VRRP Tracking Menu. This menu is used for weighting the criteria used when modifying priority levels in the master router election process.
on	Globally enables VRRP on this switch.
off	Globally disables VRRP on this switch.
cur	Displays the current VRRP parameters.

## VRRP Virtual Router configuration

**Command:** /cfg/l3/vrrp/vr <1-255>

```
[VRRP Virtual Router 1 Menu]
track   - Priority Tracking Menu
vrid    - Set virtual router ID
addr    - Set IP address
if      - Set interface number
prio    - Set reenter priority
adver   - Set advertisement interval
preem   - Enable/disable preemption
ena     - Enable virtual router
dis     - Disable virtual router
del     - Delete virtual router
cur     - Display current VRRP virtual router configuration
```

This menu is used for configuring virtual routers for this switch. A virtual router is defined by its virtual router ID and an IP address. On each VRRP-capable routing device participating in redundancy for this virtual router, a virtual router will be configured to share the same virtual router ID and IP address.

Virtual routers are disabled by default.

The following table describes the Virtual Router Configuration Menu options.



**Table 164** Virtual Router Configuration Menu options

Command	Description
<code>track</code>	Displays the VRRP Priority Tracking Menu for this virtual router. Tracking is a proprietary extension to VRRP, used for modifying the standard priority system used for electing the master router.
<code>vrid &lt;1-255&gt;</code>	<p>Defines the virtual router ID. This is used in conjunction with <code>addr</code> (below) to define a virtual router on this switch. To create a pool of VRRP-enabled routing devices which can provide redundancy to each other, each participating VRRP device must be configured with the same virtual router: one that shares the same <code>vrid</code> and <code>addr</code> combination.</p> <p>The <code>vrid</code> for standard virtual routers (where the virtual router IP address is not the same as any virtual server) can be any integer between 1 and 255. The default value is 1.</p> <p>All <code>vrid</code> values must be unique within the VLAN to which the virtual router's IP interface belongs.</p>
<code>addr &lt;IP address&gt;</code>	Defines the IP address for this virtual router using dotted decimal notation. This is used in conjunction with the <code>vrid</code> (above) to configure the same virtual router on each participating VRRP device. The default address is 0.0.0.0
<code>if &lt;1-255&gt;</code>	<p>Selects a switch IP interface (between 1 and 255). If the IP interface has the same IP address as the <code>addr</code> option above, this switch is considered the "owner" of the defined virtual router. An owner has a special priority of 255 (highest) and will always assume the role of master router, even if it must preempt another virtual router which has assumed master routing authority. This preemption occurs even if the <code>preem</code> option below is disabled. The default value is 1.</p>
<code>prio &lt;1-254&gt;</code>	<p>Defines the election priority bias for this virtual server. This can be any integer between 1 and 254. The default value is 100.</p> <p>During the master router election process, the routing device with the highest virtual router priority number wins. If there is a tie, the device with the highest IP interface address wins. If this virtual router's IP address (<code>addr</code>) is the same as the one used by the IP interface, the priority for this virtual router will automatically be set to 255 (highest).</p> <p>When priority tracking is used (<code>/cfg/13/vrrp/track</code> or <code>/cfg/13/vrrp/vr #/track</code>), this base priority value can be modified according to a number of performance and operational criteria.</p>
<code>adver &lt;1-255&gt;</code>	Defines the time interval between VRRP master advertisements. This can be any integer between 1 and 255 seconds. The default value is 1.
<code>preem disable enable</code>	Enables or disables master preemption. When enabled, if this virtual router is in backup mode but has a higher priority than the current master, this virtual router will preempt the lower priority master and assume control. Note that even when <code>preem</code> is disabled, this virtual router will always preempt any other master if this switch is the owner (the IP interface address and virtual router <code>addr</code> are the same). By default, this option is enabled.
<code>ena</code>	Enables this virtual router.
<code>dis</code>	Disables this virtual router.
<code>del</code>	Deletes this virtual router from the switch configuration.
<code>cur</code>	Displays the current configuration information for this virtual router.

## VRRP Virtual Router Priority Tracking configuration

**Command:** /cfg/l3/vrrp/vr <1-255>/track

```
[VRRP Virtual Router 1 Priority Tracking Menu]
vrs      - Enable/disable tracking master virtual routers
ifs      - Enable/disable tracking other interfaces
ports    - Enable/disable tracking VLAN switch ports
cur      - Display current VRRP virtual router configuration
```

This menu is used for modifying the priority system used when electing the master router from a pool of virtual routers. Various tracking criteria can be used to bias the election results. Each time one of the tracking criteria is met, the priority level for the virtual router is increased by an amount defined through the VRRP Tracking Menu.

Criteria are tracked dynamically, continuously updating virtual router priority levels when enabled. If the virtual router preemption option is enabled, this virtual router can assume master routing authority when its priority level rises above that of the current master.

Some tracking criteria (*vrs*, *ifs*, and *ports* below) apply to standard virtual routers, otherwise called “virtual interface routers”. A *virtual server* router is defined as any virtual router whose IP address (*addr*) is the same as any configured virtual server IP address.

The following table describes the Virtual Router Priority Tracking Configuration Menu options.

**Table 165** Virtual Router Priority Tracking Configuration Menu options

Command	Description
vrs disable enable	When enabled, the priority for this virtual router will be increased for each virtual router in master mode on this switch. This is useful for making sure that traffic for any particular client/server pairing are handled by the same switch, increasing routing and load balancing efficiency. This command is disabled by default.
ifs disable enable	When enabled, the priority for this virtual router will be increased for each other IP interface active on this switch. An IP interface is considered active when there is at least one active port on the same VLAN. This helps elect the virtual routers with the most available routes as the master. This command is disabled by default.
ports disable enable	When enabled, the priority for this virtual router will be increased for each active port on the same VLAN. A port is considered “active” if it has a link and is forwarding traffic. This helps elect the virtual routers with the most available ports as the master. This command is disabled by default.
cur	Displays the current configuration for priority tracking for this virtual router.

## VRRP Virtual Router Group configuration

**Command:** /cfg/l3/vrrp/group

```
[VRRP Virtual Router Group Menu]
track    - Priority Tracking Menu
vrid     - Set virtual router ID
if       - Set interface number
prio     - Set renter priority
adver    - Set advertisement interval
preem    - Enable/disable preemption
ena      - Enable virtual router
dis      - Disable virtual router
del      - Delete virtual router
cur      - Display current VRRP virtual router configuration
```

The Virtual Router Group menu is used for associating all virtual routers into a single logical virtual router, which forces all virtual routers on the switch to either be master or backup as a group. A virtual router is defined by its virtual router ID and an IP address. On each VRRP-capable routing device participating in redundancy for this virtual router, a virtual router will be configured to share the same virtual router ID and IP address.

The following table describes the Virtual Router Group Configuration Menu options.

**Table 166** Virtual Router Group Configuration Menu options

Command	Description
<code>track</code>	Displays the VRRP Priority Tracking Menu for the virtual router group. Tracking is a proprietary extension to VRRP, used for modifying the standard priority system used for electing the master router.
<code>vrid &lt;1-255&gt;</code>	Defines the virtual router ID. The <code>vrid</code> for standard virtual routers (where the virtual router IP address is not the same as any virtual server) can be any integer between 1 and 255. All <code>vrid</code> values must be unique within the VLAN to which the virtual router's IP interface (see <code>if</code> below) belongs. The default virtual router ID is 1.
<code>if &lt;1-255&gt;</code>	Selects a switch IP interface (between 1 and 255). The default switch IP interface number is 1.
<code>prio &lt;1-254&gt;</code>	Defines the election priority bias for this virtual router group. This can be any integer between 1 and 254. The default value is 100. During the master router election process, the routing device with the highest virtual router priority number wins. If there is a tie, the device with the highest IP interface address wins. If this virtual router's IP address ( <code>addr</code> ) is the same as the one used by the IP interface, the priority for this virtual router will automatically be set to 255 (highest). When priority tracking is used ( <code>/cfg/13/vrrp/track</code> or <code>/cfg/13/vrrp/vr #/track</code> ), this base priority value can be modified according to a number of performance and operational criteria.
<code>adver &lt;1-255&gt;</code>	Defines the time interval between VRRP master advertisements. This can be any integer between 1 and 255 seconds. The default is 1.
<code>preem disable enable</code>	Enables or disables master preemption. When enabled, if the virtual router group is in backup mode but has a higher priority than the current master, this virtual router will preempt the lower priority master and assume control. Note that even when <code>preem</code> is disabled, this virtual router will always preempt any other master if this switch is the owner (the IP interface address and virtual router <code>addr</code> are the same). By default, this option is enabled.
<code>ena</code>	Enables the virtual router group.
<code>dis</code>	Disables the virtual router group.
<code>del</code>	Deletes the virtual router group from the switch configuration.
<code>cur</code>	Displays the current configuration information for the virtual router group.

## VRRP Virtual Router Group Priority Tracking configuration

**Command:** `/cfg/13/vrrp/group/track`

```
[Virtual Router Group Priority Tracking Menu]
vrs      - Enable/disable tracking master virtual routers
ifs      - Enable/disable tracking other interfaces
ports    - Enable/disable tracking VLAN switch ports
cur      - Display current VRRP Group Tracking configuration
```



**NOTE:** If *Virtual Router Group Tracking* is enabled, then the tracking option will be available only under *group* option. The tracking setting for the other individual virtual routers will be ignored.

The following table describes the Virtual Router Group Priority Tracking Configuration Menu options.

**Table 167** Virtual Router Group Priority Tracking Configuration Menu options

Command	Description
<code>vrs disable enable</code>	When enabled, the priority for this virtual router will be increased for each virtual router in master mode on this switch. This is useful for making sure that traffic for any particular client/server pairing are handled by the same switch, increasing routing and load balancing efficiency. This command is disabled by default.
<code>ifs disable enable</code>	When enabled, the priority for this virtual router will be increased for each other IP interface active on this switch. An IP interface is considered active when there is at least one active port on the same VLAN. This helps elect the virtual routers with the most available routes as the master. This command is disabled by default.
<code>ports disable enable</code>	When enabled, the priority for this virtual router will be increased for each active port on the same VLAN. A port is considered “active” if it has a link and is forwarding traffic. This helps elect the virtual routers with the most available ports as the master. This command is disabled by default.
<code>cur</code>	Displays the current configuration for priority tracking for this virtual router.

## VRRP Interface configuration

**Command:** `/cfg/l3/vrrp/if <1-255>`

```
[VRRP Interface 1 Menu]
auth      - Set authentication types
passw     - Set plain-text password
del       - Delete interface
cur       - Display current VRRP interface configuration
```

This menu is used for configuring VRRP authentication parameters for the IP interfaces used with the virtual routers. The *interface-number* (1 to 128) represents the IP interface on which authentication parameters must be configured.

The following table describes the VRRP Interface Configuration Menu options.

**Table 168** VRRP Interface Configuration Menu options

Command	Description
<code>auth none password</code>	Defines the type of authentication that will be used: <code>none</code> (no authentication), or <code>password</code> (password authentication).
<code>passw &lt;password&gt;</code>	Defines a plain text password up to eight characters long. This password will be added to each VRRP packet transmitted by this interface when password authentication is chosen (see <b>auth</b> above).
<code>del</code>	Clears the authentication configuration parameters for this IP interface. The IP interface itself is not deleted.
<code>cur</code>	Displays the current configuration for this IP interface’s authentication parameters.

## VRRP Tracking configuration

**Command:** `/cfg/l3/vrrp/track`

```
[VRRP Tracking Menu]
vrs      - Set priority increment for virtual router tracking
ifs      - Set priority increment for IP interface tracking
ports    - Set priority increment for VLAN switch port tracking
cur      - Display current VRRP Priority Tracking configuration
```

This menu is used for setting weights for the various criteria used to modify priority levels during the master router election process. Each time one of the tracking criteria is met, the priority level for the virtual router is increased by an amount defined through this menu.



**NOTE:** These priority tracking options only define increment values. These options do not affect the VRRP master router election process until options under the VRRP Virtual Router Priority Tracking Menu are enabled.

The following table describes the VRRP Tracking Configuration Menu options.

**Table 169** VRRP Tracking Configuration Menu options

Command	Description
<code>vrs &lt;0-254&gt;</code>	Defines the priority increment value (0 through 254) for virtual routers in master mode detected on this switch. The default value is 2.
<code>ifs &lt;0-254&gt;</code>	Defines the priority increment value (0 through 254) for active IP interfaces detected on this switch. The default value is 2.
<code>ports &lt;0-254&gt;</code>	Defines the priority increment value (0 through 254) for active ports on the virtual router's VLAN. The default value is 2.
<code>cur</code>	Displays the current configuration of priority tracking increment values.

## Quality of Service configuration

**Command:** `/cfg/qos`

```
[QoS Menu]
8021p      - 802.1p Menu
```

Use the Quality of Service (QoS) menus to configure the IEEE 802.1p priority value of incoming packets. This allows you to differentiate between various types of traffic, and provide different priority levels. The following table describes the QoS Configuration Menu options.

**Table 170** QoS Configuration Menu options

Command	Description
<code>8021p</code>	Displays 802.1p configuration menu.

## QoS 802.1p configuration

**Command:** `/cfg/qos/8021p`

```
[802.1p Menu]
priq          - Set priority to COS queue mapping
qweight       - Set weight to a COS queue
numcos        - Set number of COS queue
cur           - Display current 802.1p configuration
```

This feature provides the GbE2 Interconnect Switch the capability to filter IP packets based on the IEEE 802.1p bits in the packet's VLAN header. The 802.1p bits specify the priority that you should give to the packets while forwarding them. The packets with a higher (non-zero) priority bits are given forwarding preference over packets with numerically lower priority bits value.

The following table describes the 802.1p Configuration Menu options.

**Table 171** 802.1p Configuration Menu options

Command	Description
<code>priq &lt;0-7&gt; &lt;0-7&gt;</code>	Maps the 802.1p priority of to the Class of Service queue (COSq) priority. Enter the 802.1p priority value (0-7), followed by the Class of Service queue (0-7) that handles the matching traffic.
<code>qweight &lt;0-7&gt; &lt;0-15&gt;</code>	Configures the weight of the selected Class of Service queue (COSq). Enter the queue number (0-7), followed by the scheduling weight (0-15).
<code>numcos 2   8</code>	Sets the number of Class of Service queues for switch ports. Default is 8.
<code>cur</code>	Displays the current 802.1p parameters.

## Access Control configuration

**Command:** `/cfg/acl`

```
[ACL Menu]
acl      - Access Control List Item Config Menu
block    - Access Control List Block Config Menu
group    - Access Control List Group Config Menu
cur      - Display current ACL configuration
```

Use this menu to create Access Control Lists (ACLs), ACL Blocks, and ACL Groups. ACLs define matching criteria used for IP filtering and Quality of Service functions.

The following table describes the Access Control Configuration Menu options.

**Table 172** Access Control Configuration Menu options

Command	Description
<code>acl &lt;1-4096&gt;</code>	Displays Access Control List (ACL) configuration menu.
<code>block &lt;1-4096&gt;</code>	Displays ACL Block configuration menu.
<code>group &lt;1-4096&gt;</code>	Displays ACL Group configuration menu.
<code>cur</code>	Displays the current Access Control parameters.

## Access Control List configuration

**Command:** `/cfg/acl/acl <1-4096>`

```
[ACL 1 Menu]
ethernet - Ethernet Header Options Menu
ipv4     - IP Header Options Menu
tcpudp   - TCP/UDP Header Options Menu
pktfmt   - Set to filter specific packet format types
egrport  - Set to filter for packets egressing this port
action   - Set filter action
stats    - Enable/disable statistics for this acl
reset    - Reset filtering parameters
cur      - Display current filter configuration
```

These menus allow you to define filtering criteria for each Access Control List (ACL). The following table describes the ACL Configuration Menu options.

**Table 173** ACL Configuration Menu options

Command	Description
<code>ethernet</code>	Displays the ACL Ethernet configuration menu.
<code>ipv4</code>	Displays the ACL IP version 4 configuration menu.
<code>tcpudp</code>	Displays the ACL TCP/UDP configuration menu.
<code>pktfmt</code>	Displays the ACL Packet Format configuration menu.
<code>egrport &lt;port number&gt;</code>	Configures the ACL to function on egress packets.
<code>action permit deny setcos</code>	Configures a filter action for packets that match the ACL definitions. You can choose to permit (pass) or deny (drop) packets, or set the Class of Service queue that handles the packets.
<code>stats e d</code>	Enables or disables the statistics collection for the Access Control List.
<code>reset</code>	Resets the ACL parameters to their default values.
<code>cur</code>	Displays the current ACL parameters.

## ACL Ethernet Filter configuration

**Command:** /cfg/acl/acl <1-4096>/ethernet

```
[Filtering Ethernet Menu]
smac      - Set to filter on source MAC
dmac      - Set to filter on destination MAC
vlan      - Set to filter on VLAN ID
etype     - Set to filter on ethernet type
pri       - Set to filter on priority
reset     - Reset all fields
cur       - Display current parameters
```

This menu allows you to define Ethernet matching criteria for an ACL. The following table describes the Ethernet Filter Configuration Menu options.

**Table 174** Ethernet Filter Configuration Menu options

Command	Description
smac <MAC address>	Defines the source MAC address for this ACL. For example: 00:60:cf:40:56:00
dmac <MAC address>	Defines the destination MAC address for this ACL. For example: 00:60:cf:40:56:00
vlan <1-4095> <VLAN mask (0xfff)>	Defines a VLAN number and mask for this ACL.
etype ARP IP IPv6 MPLS RARP any 0xXXXX	Defines the Ethernet type for this ACL.
pri <0-7>	Defines the Ethernet priority value for the ACL.
reset	Resets Ethernet parameters for the ACL to their default values.
cur	Displays the current Ethernet parameters for the ACL.

## ACL IP Version 4 Filter configuration

**Command:** /cfg/acl/acl <1-4096>/ipv4

```
[Filtering IPv4 Menu]
sip       - Set to filter on source IP address
dip       - Set to filter on destination IP address
proto     - Set to filter on protocol
tos       - Set to filter on TOS
reset     - Reset all fields
cur       - Display current parameters
```

This menu allows you to define IPv4 matching criteria for an ACL. The following table describes the IP version 4 Filter Configuration Menu options.

**Table 175** IPv4 Filter Configuration Menu options

Command	Description														
sip <IP address>	Defines a source IP address for the ACL. If defined, traffic with this source IP address will match this ACL. Specify an IP address in dotted decimal notation. For example, 100.10.1.1														
dip <IP address>	Defines a destination IP address for the ACL. If defined, traffic with this destination IP address will match this ACL. For example, 100.10.1.2														
proto <0-255>	Defines an IP protocol for the ACL. If defined, traffic from the specified protocol matches this filter. Specify the protocol number. Listed below are some of the well-known protocols. <table><tr><th>Number</th><th>Name</th></tr><tr><td>1</td><td>icmp</td></tr><tr><td>2</td><td>igmp</td></tr><tr><td>6</td><td>tcp</td></tr><tr><td>17</td><td>udp</td></tr><tr><td>89</td><td>ospf</td></tr><tr><td>112</td><td>vrrp</td></tr></table>	Number	Name	1	icmp	2	igmp	6	tcp	17	udp	89	ospf	112	vrrp
Number	Name														
1	icmp														
2	igmp														
6	tcp														
17	udp														
89	ospf														
112	vrrp														
tos <0-255>	Defines a Type of Service value for the ACL. For more information on ToS, see RFC 1340 and 1349.														

**Table 175** IPv4 Filter Configuration Menu options

Command	Description
reset	Resets the IPv4 parameters for the ACL to their default values.
cur	Displays the current IPV4 parameters.

## ACL TCP/UDP Filter configuration

**Command:** /cfg/acl/acl <1-4096>/tcpudp

```
[Filtering TCP/UDP Menu]
sport      - Set to filter on TCP/UDP source port
dport      - Set to filter on TCP/UDP destination port
flags      - Set to filter TCP/UDP flags
reset      - Reset all fields
cur        - Display current parameters
```

This menu allows you to define TCP/UDP matching criteria for an ACL. The following table describes the TCP/UDP Filter Configuration Menu options.

**Table 176** TCP/UDP Filter Configuration Menu options

Command	Description																												
sport <1-65535>	<p>Defines a source port for the ACL. If defined, traffic with the specified TCP or UDP source port will match this ACL. Specify the port number. Listed below are some of the well-known ports:</p> <table> <tr> <th>Number</th><th>Name</th></tr> <tr><td>20</td><td>ftp-data</td></tr> <tr><td>21</td><td>ftp</td></tr> <tr><td>22</td><td>ssh</td></tr> <tr><td>23</td><td>telnet</td></tr> <tr><td>25</td><td>smtp</td></tr> <tr><td>37</td><td>time</td></tr> <tr><td>42</td><td>name</td></tr> <tr><td>43</td><td>whois</td></tr> <tr><td>53</td><td>domain</td></tr> <tr><td>69</td><td>tftp</td></tr> <tr><td>70</td><td>gopher</td></tr> <tr><td>79</td><td>finger</td></tr> <tr><td>80</td><td>http</td></tr> </table>	Number	Name	20	ftp-data	21	ftp	22	ssh	23	telnet	25	smtp	37	time	42	name	43	whois	53	domain	69	tftp	70	gopher	79	finger	80	http
Number	Name																												
20	ftp-data																												
21	ftp																												
22	ssh																												
23	telnet																												
25	smtp																												
37	time																												
42	name																												
43	whois																												
53	domain																												
69	tftp																												
70	gopher																												
79	finger																												
80	http																												
dport <1-65535>	<p>Defines a destination port for the ACL. If defined, traffic with the specified TCP or UDP destination port will match this ACL. Specify the port number, just as with sport above.</p>																												
flags <value (0x0-0x3f)>	Defines a TCP/UDP flag for the ACL.																												
reset	Resets the TCP/UDP parameters for the ACL to their default values.																												
cur	Displays the current TCP/UDP Filtering parameters.																												



## ACL Packet Format configuration

**Command:** /cfg/acl/acl <1-4096>/pktfmt

```
[Filtering Packet Format Menu]
ethfmt - Set to filter on ethernet format
tagfmt - Set to filter on ethernet tagging format
reset  - Reset all fields
cur    - Display current parameters
```

The following table describes the Packet Format Configuration Menu options.

**Table 177** Packet Format Configuration Menu options

Command	Description
ethfmt none/ethII/802.3	Defines the Ethernet format for the ACL.
tagfmt none tagged	Defines the tagging format for the ACL.
reset	Resets Packet Format parameters for the ACL to their default values.
cur	Displays the current Packet Format parameters for the ACL.

## ACL Block configuration

**Command:** /cfg/acl/block <1-4096>

```
[ACL Block 1 Menu]
addacl - Add ACL item to block
remacl - Remove ACL item from block
cur    - Display current ACL items in block
```

This menu allows you to compile one or more ACLs into an ACL Block. Each ACL in the ACL Block must fall within the same mask.

The following table describes the ACL Block Configuration Menu options.

**Table 178** ACL Block Configuration Menu options

Command	Description
addacl <1-4096>	Adds the selected ACL to the ACL Block.
remacl <1-4096>	Removes the selected ACL from the ACL Block.
cur	Displays the current ACL block parameters.

## ACL Group configuration

**Command:** /cfg/acl/group <1-4096>

```
[ACL Group 1 Menu]
add - Add ACL or ACL block to group
rem - Remove ACL or ACL block from group
cur - Display current ACL items in group
```

This menu allows you to compile one or more ACLs and ACL Blocks into an ACL Group. Once you create an ACL Group, you can assign the ACL Group to one or more ports.

The following table describes the ACL Group Configuration Menu options.

**Table 179** ACL Group Configuration Menu options

Command	Description
add acl blk <1-4096>	Adds the selected ACL or ACL Block to the ACL Group.
rem acl blk <1-4096>	Removes the selected ACL or ACL Block from the ACL Group.
cur	Displays the current ACL group parameters.

## Remote Monitoring configuration

**Command:** /cfg/rmon

```
[RMON Menu]
hist      - RMON History Menu
event     - RMON Event Menu
alarm     - RMON Alarm Menu
cur       - Display current RMON configuration
```

Remote Monitoring (RMON) allows you to monitor traffic flowing through the GbE2 Interconnect Switch. The RMON MIB is described in RFC 1757.

The following table describes the RMON Configuration Menu options.

**Table 180** RMON Menu options

Command	Description
hist	Displays the RMON History Menu.
event	Displays the RMON Event Menu.
alarm	Displays the RMON Alarm Menu.
cur	Displays the current RMON configuration.

## RMON history configuration

**Command:** /cfg/rmon/hist <1-65535>

```
[RMON History 1 Menu]
ifoid     - Set interface MIB object to monitor
rbnum     - Set the number of requested buckets
intrval   - Set polling interval
owner     - Set owner for the RMON group of statistics
delete    - Delete this history and restore defaults
cur       - Display current history configuration
```

The following table describes the RMON History Menu options.

**Table 181** RMON History Menu options

Command	Description
ifoid <1-127 characters>	Configures the interface MIB Object Identifier. The IFOID must correspond to the standard interface OID, as follows: 1.3.6.1.2.1.2.2.1.1.x The interface OID can have a maximum of 127 characters.
rbnum <1-65535>	Configures the requested number of buckets, which is the number of discrete time intervals over which data is to be saved. The range is from 1 to 65535. The default is 30.
<b>NOTE:</b> The maximum number of buckets that can be granted is 50.	
intrval <1-3600>	Configures the time interval over which the data is sampled for each bucket. The range is from 1 to 3600 seconds. The default value is 1800 seconds.
owner <1-127 characters>	Enter a text string that identifies the person or entity that uses this history index. The owner can have a maximum of 127 characters.
delete	Deletes the selected history index.
cur	Displays the current RMON History parameters.

## RMON event configuration

**Command:** /cfg/rmon/event <1-65535>

```
[RMON Event 1 Menu]
  descn    - Set description for the event
  type     - Set event type
  owner    - Set owner for the event
  delete   - Delete this event and restore defaults
  cur      - Display current event configuration
```

The following table describes the RMON Event Menu options.

**Table 182** RMON Event Menu options

Command	Description
descn <1-127 characters>	Enter a text string to describe the event. The description can have a maximum of 127 characters.
type none log trap both	Selects the type of notification provided for this event. For log events, an entry is made in the log table and sent to the configured syslog host. For trap events, an SNMP trap is sent to the management station (/cfg/snmp/trap).
owner <1-127 characters>	Enter a text string that identifies the person or entity that uses this event index. The owner can have a maximum of 127 characters.
delete	Deletes this event index.
cur	Displays the current RMON Event parameters.

## RMON alarm configuration

**Command:** /cfg/rmon/alarm <1-65535>

```
[RMON Alarm 1 Menu]
  oid      - Set MIB oid datasource to monitor
  intrval  - Set alarm interval
  sample   - Set sample type
  almttype - Set startup alarm type
  rlimit   - Set rising threshold
  flimit   - Set falling threshold
  revtidx  - Set event index to fire on rising threshold crossing
  fevtidx  - Set event index to fire on falling threshold crossing
  owner    - Set owner for the alarm
  delete   - Delete this alarm and restore defaults
  cur      - Display current alarm configuration
```

The Alarm RMON group can track rising or falling values for a MIB object. The MIB object must be a counter, gauge, integer, or time interval. Each alarm index must correspond to an event index that triggers once the alarm threshold is crossed.

The following table describes the RMON Alarm Menu options.

**Table 183** RMON Alarm Menu options

Command	Description
oid <1-127 characters>	Configures an alarm MIB Object Identifier. The alarm OID can have a maximum of 127 characters.
intrval <1-65535 seconds>	Configures the time interval over which data is sampled and compared with the rising and falling thresholds. The range is from 1 to 65535 seconds. The default is 1800 seconds.

**Table 183** RMON Alarm Menu options

Command	Description
sample abs delta	Configures the method of sampling the selected variable and calculating the value to be compared against the thresholds, as follows: <b>abs</b> : absolute value, the value of the selected variable is compared directly with the thresholds at the end of the sampling interval. <b>delta</b> : delta value, the value of the selected variable at the last sample is subtracted from the current value, and the difference compared with the thresholds.
almttype rising falling either	Configures the alarm type as rising, falling, or either (rising or falling).
rlimit < -2147483647 to 2147483647>	Configures the rising threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single event is generated.
flimit < -2147483647 to 2147483647>	Configures the falling threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single event is generated.
revtidx <0-65535>	Configures the rising alarm event index that is triggered when a rising threshold is crossed. The range is from 0 to 65535. The default value is 0.
fevtidx <0-65535>	Configures the falling alarm event index that is triggered when a falling threshold is crossed. The range is from 0 to 65535. The default value is 0.
owner <1-127>	Enter a text string that identifies the person or entity that uses this alarm index. The owner can have a maximum of 127 characters.
delete	Deletes this alarm index.
cur	Displays the current RMON Alarm parameters.

## Port mirroring

**Command:** /cfg/pmirr

```
[Port Mirroring Menu]
mirror - Enable/Disable Mirroring
monport - Monitoring Port based PM Menu
cur      - Display All Mirrored and Monitoring Ports
```

The Port Mirroring Configuration Menu is used to configure, enable, and disable the monitored port. When enabled, network packets being sent and/or received on a target port are duplicated and sent to a monitor port. By attaching a network analyzer to the monitor port, you can collect detailed information about your network performance and usage. Port mirroring is disabled by default.



**NOTE:** See the “Troubleshooting Tools” appendix in the *HP ProLiant BL p-Class GbE2 Interconnect Switch Application Guide* for information on how to use port mirroring.

The following table describes the Port Mirroring Configuration Menu options.

**Table 184** Port Mirroring Configuration Menu options

Command	Description
mirror disable enable	Enables or disables port mirroring
monport <port number>	Displays port mirroring menu.
cur	Displays current settings of the mirrored and monitoring ports.

## Port-based port mirroring

**Command:** /cfg/pmirr/monport <port number>

```
[Port 1 Menu]
add          - Add "Mirrored" port
rem          - Rem "Mirrored" port
delete      - Delete this "Monitor" port
cur          - Display current Port-based Port Mirroring configuration
```

The following table describes the port-based Port Mirroring Configuration Menu options.

**Table 185** Port Mirroring Configuration Menu options

Command	Description
add <mirrored port> in out both	Adds the port to be mirrored. This command also allows you to enter the direction of the traffic. It is necessary to specify the direction because: <ul style="list-style-type: none"><li>• If the source port of the frame matches the mirrored port and the mirrored direction is ingress or both (ingress and egress), the frame is sent to the mirrored port.</li><li>• If the destination port of the frame matches the mirrored port and the mirrored direction is egress or both, the frame is sent to the monitoring port.</li></ul>
rem <mirrored port>	Removes the mirrored port.
delete	Deletes this monitored port.
cur	Displays the current settings of the monitoring port.

## Uplink Failure Detection configuration

**Command:** /cfg/ufd

```
[Uplink Failure Detection Menu]
fdp - Failure Detection Pair Menu
on  - Globally turn Uplink Failure Detection ON
off - Globally turn Uplink Failure Detection OFF
cur - Display current Uplink Failure Detection configuration
```

Uplink Failure Detection (UFD) supports network fault tolerance in network adapter teams. Use this menu to configure a Failure Detection Pair of one Links to Monitor (LtM) group and one Links to Disable (LtD) group. When UFD is enabled and a Failure Detection Pair is configured, the switch automatically disables ports in the LtD if it detects a failure in the LtM. The failure conditions which are monitored in the LtM group include port link state moving to down, or port state moving to Blocking if Spanning Tree Protocol is enabled.

The following table describes the Uplink Failure Detection (UFD) Configuration Menu options.

**Table 186** Uplink Failure Detection Configuration Menu options

Command	Description
fdp	Displays the Failure Detection Pair menu.
on	Globally turns Uplink Failure Detection ON.
off	Globally turns Uplink Failure Detection OFF.
cur	Displays the current Uplink Failure Detection configuration parameters.

## Failure Detection Pair configuration

**Command:** /cfg/ufd/fdp

```
[FDP Menu]
ltm      - Link to Monitor Menu
ltd      - Link to Disable Menu
ena      - Enable FDP
dis      - Disable FDP
current  - Display current FDP configuration
```

Use these commands to configure a Failure Detection Pair, which consists of one Link to Monitor (LtM) and one Link to Disable (LtD). When the switch detects a failure on the LtM, it automatically disables the ports in the LtD.

The following table describes the Failure Detection Pair (FDP) configuration Menu options.

**Table 187** Failure Detection Pair Configuration Menu options

Command	Description
ltm	Displays the Links to Monitor menu.
ltd	Displays the Links to Disable menu.
ena	Enables the FDP Parameters.
dis	Disables the FDP Parameters.
current	Displays the current FDP configuration.

## Link to Monitor configuration

**Command:** /cfg/ufd/fdp/ltm

```
[Failure Link to Monitor Menu]
addport  - Add port to Link to Monitor
remport  - Remove port from Link to Monitor
addtrnk  - Add trunk to Link to Monitor
remtrnk  - Remove trunk from Link to Monitor
cur      - Display current LtM configuration
```

The following table describes the Link to Monitor (LtM) Menu options. The LtM can consist of only one uplink port (ports 19-24) or a single trunk containing only uplink ports.

**Table 188** Link to Monitor Menu options

Command	Description
addport <port number>	Adds a port to the LtM. Only uplink ports (19-24) are allowed in the LtM.
remport <port number>	Removes a port from the LtM.
addtrnk <1-12>	Adds a trunk group to the LtM. The LtM trunk group can contain only uplink ports (19-24).
remtrnk <1-12>	Removes a trunk group from the LtM.
cur	Displays the current LtM configuration.

## Link to Disable configuration

**Command:** /cfg/ufd/fdp/ltd

```
[Failure Link to Disable Menu]
  addport - Add port to Link to Disable
  remport - Remove port from Link to Disable
  addtrnk - Add trunk to Link to Disable
  remtrnk - Remove trunk from Link to Disable
  cur      - Display current LtD configuration
```

The following table describes the Link to Disable (LtD) Menu options. The LtD can consist of any mix of downlink ports (ports 1-16) and trunk groups that contain only downlink ports.

**Table 189** Link to Disable Menu options

Command	Description
addport <port number>	Adds a port to the current LtD group. Only downlink ports (1-16) are allowed in the LtD.
remport <port number>	Removes a port from the current LtD group.
addtrunk <1-12>	Adds a trunk group to the current LtD group. LtD trunk groups can contain only downlink ports (1-16).
remtrunk <1-12>	Removes a trunk group from the current LtD group.
cur	Displays the current LtD configuration.

## Dump

**Command:** /cfg/dump

The dump program writes the current GbE2 Interconnect Switch configuration to the terminal screen. To start the dump program, at the **Configuration#** prompt, enter:

```
Configuration# dump
```

The configuration is displayed with parameters that have been changed from the default values. The screen display can be captured, edited, and placed in a script file, which can be used to configure other GbE2 Interconnect Switches. Paste the configuration commands from the script file at the command line prompt of the GbE2 Interconnect Switch. The active configuration can also be saved or loaded via TFTP.

## Saving the active GbE2 Interconnect Switch configuration

**Command:** /cfg/ptcfg <TFTP server> <filename>

When the **ptcfg** command is used, the active configuration commands of the GbE2 Interconnect Switch (as displayed using /cfg/dump) will be uploaded to the specified script configuration file on the TFTP server. To start the GbE2 Interconnect Switch configuration upload, at the **Configuration#** prompt, enter:

```
Configuration# ptcfg <TFTP server> <filename>
```

Where <TFTP server> is the TFTP server IP address or hostname and <filename> is the name of the target script configuration file.



**NOTE:** The output file is formatted with line-breaks but no carriage returns. The file cannot be viewed with editors that require carriage returns (such as Microsoft Notepad).



**NOTE:** If the TFTP server is running SunOS™ or the Solaris™ operating system, the specified **ptcfg** file must exist prior to executing the **ptcfg** command and must be writable (set with proper permission, and not locked by any application). The contents of the specified file will be replaced with the current configuration data.

## Restoring the active GbE2 Interconnect Switch configuration

**Command:** `/cfg/gtcfg <TFTP server> <filename>`

When the **gtcfg** command is used, the active configuration will be replaced with the commands found in the specified configuration file. The file can contain a full GbE2 Interconnect Switch configuration or a partial configuration. The configuration loaded using **gtcfg** is not activated until the **apply** command is used. If the **apply** command is found in the configuration script file loaded using this command, the apply action will be performed automatically.

To start the GbE2 Interconnect Switch configuration download, at the **Configuration#** prompt, enter:

```
Configuration# gtcfg <TFTP server> <filename>
```

Where *<TFTP server>* is the TFTP server IP address or hostname and *<filename>* is the name of the target script configuration file.



**NOTE:** The GbE2 Interconnect Switch supports three configuration files: active, backup, and factory. See the “Selecting a configuration block” section in the “Boot Options Menu” chapter for information on how to set which configuration file to use upon boot up.



# Operations Menu

## Introduction

Operations-level commands are used for making immediate and temporary changes to GbE2 Interconnect Switch configuration. The Operations Menu is used for bringing ports temporarily in and out of service. This menu is available only from an administrator and operator login.

## Menu information

**Command:** /oper

```
[Operations Menu]
port          - Operational Port Menu
vrrp          - Operational Virtual Router Redundancy Menu
passwd        - Change current user password
clrlog        - Clear syslog messages
ntpreq        - Send NTP request
```

The following table describes the Operations Menu options.

**Table 190** Operations Menu options

Command	Description
port <port number>	Displays the Operational Port Menu.
vrrp	Displays the Operational Virtual Router Redundancy Menu.
passwd <1-128 characters>	Allows the user to change the password. You need to enter the current password in use for validation.
clrlog	Clears all Syslog messages.
ntpreq	Allows the user to send requests to the NTP server.

## Operations-level port options

**Command:** /oper/port <port number>

```
[Operations Port 1 Menu]
8021x         - 8021.x Menu
rmon          - Enable/Disable RMON for port
ena           - Enable port
dis           - Disable port
cur           - Current port state
```

Operations-level port options are used for temporarily disabling or enabling a port.

**Table 191** Operations-Level Port Menu options

Command	Description
8021x	Displays the 802.1x Port Menu.
rmon disable enable	Enables or disables Remote Monitoring for the port. RMON must be enabled for any RMON configurations to function.
ena	Temporarily enables the port. The port will be returned to its configured operation mode when the GbE2 Interconnect Switch is reset.
dis	Temporarily disables the port. The port will be returned to its configured operation mode when the GbE2 Interconnect Switch is reset.
cur	Displays the current settings for the port.

## Operations-level port 802.1x options

**Command:** /oper/port <port number>/8021x

```
[802.1x Operation Menu]
reset      - Reinitialize 802.1x access control on this port
reauth     - Initiate reauthentication on this port now
```

Operations-level port 802.1x options are used to temporarily set 802.1x parameters for a port.

**Table 192** Operations-Level Port 802.1x Menu options

Command	Description
reset	Re-initializes the 802.1x access-control parameters for the port. The following actions take place, depending on the 802.1x port configuration: <ul style="list-style-type: none"><li>• <b>force unauth</b>—the port is placed in unauthorized state, and traffic is blocked.</li><li>• <b>auto</b>—the port is placed in unauthorized state, then authentication is initiated.</li><li>• <b>force auth</b>—the port is placed in authorized state, and authentication is not required.</li></ul>
reauth	Re-authenticates the supplicant (client) attached to the port. This command only applies if the port's 802.1x mode is configured as auto.

## Operations-level VRRP options

**Command:** /oper/vrrp

```
[VRRP Operations Menu]
back      - Set virtual router to backup
```

Operations-level VRRP options are described in the following table.

**Table 193** Operations-Level VRRP Menu options

Command	Description
back <1-255>	Forces the specified master virtual router on this switch into backup mode. This is generally used for passing master control back to a preferred switch once the preferred switch has been returned to service after a failure. When this command is executed, the current master gives up control and initiates a new election by temporarily advertising its own priority level as 0 (lowest). After the new election, the virtual router forced into backup mode by this command will resume master control in the following cases: <ul style="list-style-type: none"><li>• This switch owns the virtual router (the IP addresses of the virtual router and its IP interface are the same)</li><li>• This switch's virtual router has a higher priority and preemption is enabled.</li><li>• There are no other virtual routers available to take master control.</li></ul>

---

# Boot Options Menu

## Introduction

You must be logged in to the GbE2 Interconnect Switch as the administrator to use the Boot Options Menu.

The Boot Options Menu provides options for:

- Selecting a switch software image to be used when the GbE2 Interconnect Switch is next reset.
- Selecting a configuration block to be used when the GbE2 Interconnect Switch is next reset.
- Downloading or uploading a new software image to the GbE2 Interconnect Switch via FTP/TFTP.

## Menu information

**Command:** /boot

```
[Boot Options Menu]
image - Select software image to use on next boot
conf  - Select config block to use on next boot
gting - Download new software image via FTP/TFTP
ptimg - Upload selected software image via FTP/TFTP
reset - Reset switch [WARNING: Restarts Spanning Tree]
cur   - Display current boot options
```

Each of the Boot Options Menu commands is discussed in greater detail in the following sections.

## Updating the GbE2 Interconnect Switch software image

The GbE2 Interconnect Switch software image is the executable code running on the switch. A version of the image ships with the GbE2 Interconnect Switch, and comes pre-installed on the device. As new versions of the image are released, you can upgrade the software running on your GbE2 Interconnect Switch.

Upgrading the software image on your GbE2 Interconnect Switch requires the following:

- Loading the new image onto a FTP/TFTP server on your network
- Downloading the new image from the FTP/TFTP server to your GbE2 Interconnect Switch
- Selecting the new software image to be loaded into GbE2 Interconnect Switch memory the next time the switch is reset

## Downloading new software to your GbE2 Interconnect Switch

The GbE2 Interconnect Switch can store up to two different software images, called **image1** and **image2**, as well as boot software, called **boot**. When you download new software, you must specify where it should be placed: either into **image1**, **image2**, or **boot**.

For example, if your active image is currently loaded into **image1**, you would probably load the new image software into **image2**. This lets you test the new software and reload the original active image (stored in **image1**), if needed.

To download new software to your GbE2 Interconnect Switch, you will need the following:

- The image or boot software loaded on a FTP or TFTP server on your network
- The hostname or IP address of the FTP or TFTP server
- The user name and password for FTP server, if necessary
- The name of the new software image or boot file



---

**NOTE:** The DNS parameters must be configured if specifying hostnames. See the “Domain name system configuration” section in the “Configuration Menu” chapter.

---

When the above requirements are met, use the following procedure to download the new software to your GbE2 Interconnect Switch.

1. At the Boot Options# prompt, enter:

```
Boot Options# gting
```

2. Enter the name of the GbE2 Interconnect Switch software to be replaced:

```
Enter name of switch software image to be replaced  
["image1"/"image2"/"boot"]: <image>
```

3. Enter the hostname or IP address of the FTP or TFTP server:

```
Enter hostname or IP address of FTP/TFTP server: <server name or IP  
address>
```

4. Enter the name of the new software file on the server:

```
Enter name of file on FTP/TFTP server: <filename>
```

The exact form of the name will vary by TFTP server. However, the file location is normally relative to the TFTP directory.

5. Enter the user name, if you are using a FTP server:

```
Enter username for FTP server or hit return for TFTP server: <userID>
```

6. Enter the password for the FTP server (if prompted):

```
Enter password for username on FTP server: <password>
```

7. The system prompts you to confirm your request.

You should next select a software image to run, as described in the "Selecting a Soft Image to Run" section.

8. If you are loading an image from which you are not currently booted, the system prompts you to change the image.

```
image2 currently contains Software Version 3.1.1  
that was downloaded at 15:46:36 Wed Apr 23, 2007.  
New download will replace image2 with file "3.2.0_OS.img"  
from TFTP server 192.168.2.4.  
Confirm download operation [y/n]: y  
Invoking TFTP over port 69...  
Starting download...  
File appears valid  
Download in  
progress.....  
Image download complete (1333953 bytes)  
Writing to flash...This takes about 90 seconds. Please wait  
Write complete (1333953 bytes), now verifying FLASH...  
Verification of new image2 in FLASH successful.  
image2 now contains Software Version 3.2.0  
Switch is currently set to boot software image1.  
Do you want to change that to the new image2? [y/n] y  
Next boot will use new software image2.
```

## Selecting a software image to run

You can select which software image (**image1** or **image2**) you want to run in GbE2 Interconnect Switch memory for the next reboot.

1. At the Boot Options# prompt, enter:

```
Boot Options# image
```

2. Enter the name of the image you want the GbE2 Interconnect Switch to use upon the next boot. The system informs you of which image is currently set to be loaded at the next reset, and prompts you to enter a new choice:

```
Currently set to use switch software "image1" on next reset.  
Specify new image to use on next reset ["image1"/"image2"]:
```

## Uploading a software image from your GbE2 Interconnect Switch

You can upload a software image from the GbE2 Interconnect Switch to a FTP or TFTP server.

1. At the Boot Options# prompt, enter:

```
Boot Options# ptimg
```

2. The system prompts you for information. Enter the desired image:

```
Enter name of switch software image to be uploaded  
["image1"|"image2"|"boot"]: <image> <hostname or server-IP-addr>  
<server-filename>
```

3. Enter the name or the IP address of the FTP or TFTP server:

```
Enter hostname or IP address of FTP/TFTP server: <server name or IP  
address>
```

4. Enter the name of the file into which the image will be uploaded on the FTP or TFTP server:

```
Enter name of file on FTP/TFTP server: <filename>
```

5. Enter the user name, if you are using a FTP server:

```
Enter username for FTP server or hit return for TFTP server: <userID>
```

6. Enter the password for the FTP server (if prompted):

```
Enter password for username on FTP server: <password>
```

7. The system then requests confirmation of what you have entered. To have the file uploaded, enter y.

```
image2 currently contains Software Version 3.2.0  
  
Upload will transfer image2 (1889411 bytes) to file "test"  
on TFTP server 192.1.1.1.  
  
Confirm upload operation [y/n]: y
```

## Selecting a configuration block

When you make configuration changes to the GbE2 Interconnect Switch, you must save the changes so that they are retained beyond the next time the switch is reset. When you execute the **save** command, your new configuration changes are placed in the active configuration block. The previous configuration is copied into the backup configuration block.

There is also a factory configuration block. This holds the default configuration set by the factory when your GbE2 Interconnect Switch was manufactured. Under certain circumstances, it may be desirable to reset the GbE2 Interconnect Switch configuration to the default. This can be useful when a custom-configured GbE2 Interconnect Switch is moved to a network environment where it will be re-configured for a different purpose.

Use the following procedure to set which configuration block you want the GbE2 Interconnect Switch to load the next time it is reset:

1. At the Boot Options# prompt, enter:

```
Boot Options# conf
```

2. Enter the name of the configuration block you want the GbE2 Interconnect Switch to use.

The system indicates which configuration block is currently set to be loaded at the next reset, and prompts you to enter a new choice:

```
Currently set to use active configuration block on next reset.  
Specify new block to use ["active"/"backup"/"factory"]:
```

## Resetting the GbE2 Interconnect Switch

You can reset the GbE2 Interconnect Switch to make your software image file and configuration block changes occur.

Resetting the GbE2 Interconnect Switch causes the Spanning Tree Protocol to restart. This process can be lengthy, depending on the topology of your network.

To reset the GbE2 Interconnect Switch, at the Boot Options# prompt, enter:

```
>> Boot Options# reset
```

You are prompted to confirm your request.

To display current boot options, enter:

```
>> Boot Options# cur
```

## Accessing the ISCLI

To access the ISCLI, enter the following command from the AOS CLI, and reset the switch:

```
Boot Options# mode iscli
```

The default command-line interface for the GbE2 is the AOS CLI. To access the AOS CLI, enter the following command and reset the GbE2:

```
>> Switch# boot cli-mode aos
```

Users can select the CLI mode upon login, if the `/boot/prompt` command is enabled. Only an administrator connected through the console port can view and enable `/boot/prompt`. When `/boot/prompt` is enabled, the first user to log in can select either the CLI mode. Subsequent users must use the selected CLI mode, until all users have logged out.

# Maintenance Menu

## Introduction

The Maintenance Menu is used for debugging purposes, enabling you to generate a technical support dump of the critical state information in the GbE2 Interconnect Switch, and to clear entries in the Forwarding Database and the Address Resolution Protocol (ARP) and routing tables. This menu is available only from an administrator and operator login.

## Menu information

**Command:** /maint

```
[Maintenance Menu]
  sys      - System Maintenance Menu
  fdb      - Forwarding Database Manipulation Menu
  debug    - Debugging Menu
  arp      - ARP Cache Manipulation Menu
  route    - IP Route Manipulation Menu
  igmp     - IGMP Multicast Group Menu
  uudmp    - Uuencode FLASH dump
  ptdmp    - tftp put FLASH dump to tftp server
  cldmp    - Clear FLASH dump
  panic    - Dump state information to FLASH and reboot
  tsdmp    - Tech support dump
  pttsdmp  - tftp put tech support dump to tftp server
```

Dump information contains internal GbE2 Interconnect Switch state data that is written to flash memory on the switch after any one of the following occurs:

- The GbE2 Interconnect Switch administrator forces a switch panic. The panic option, found in the Maintenance Menu, causes the GbE2 Interconnect Switch to dump state information to flash memory, and then causes the switch to reboot.
- The GbE2 Interconnect Switch administrator enters the switch reset key combination (Ctrl-Shift-6) on a device that is attached to the console port.
- The GbE2 Interconnect Switch detects a hardware or software problem that requires a reboot.

The following table describes the Maintenance Menu options.

**Table 194** Maintenance Menu options

Command	Usage
sys	Displays the System Maintenance Menu.
fdb	Displays the Forwarding Database Manipulation Menu.
debug	Displays the Debug Menu.
arp	Displays the ARP Cache Manipulation Menu.
route	Displays the IP Route Manipulation Menu.
igmp	Displays the IGMP Maintenance Menu.
uudmp	Displays dump information in uuencoded format.
ptdmp hostname, filename [-mgmt -data]	Saves the system dump information via TFTP.
cldmp	Clears dump information from flash memory.
panic	Dumps MP information to flash and reboots.
tsdmp	Dumps all GbE2 Interconnect Switch information, statistics, and configuration.
pttsdmp	Redirects the technical support dump (tsdmp) to an external TFTP server.

## System maintenance options

**Command:** /maint/sys

```
[System Maintenance Menu]
flags - Set NVRAM flag word
```

The System Maintenance Menu is reserved for use by HP technical support. The options are used to perform system debugging.

The following table describes the System Maintenance Menu options.

**Table 195** System Maintenance Menu options

Command	Usage
flags <new NVRAM flags word as 0XXXXXXXX>	Sets the flags that are used for debugging purposes by HP technical support.

## Forwarding Database options

**Command:** /maint/fdb

```
[FDB Manipulation Menu]
find - Show a single FDB entry by MAC address
port - Show FDB entries for a single port
vlan - Show FDB entries for a single VLAN
dump - Show all FDB entries
clear - Clear entire FDB, then re-add static entries
```

The Forwarding Database (FDB) Manipulation Menu can be used to view information and to delete a MAC address from the Forwarding Database or clear the entire Forwarding Database. This is helpful in identifying problems associated with MAC address learning and packet forwarding decisions.

The following table describes the FDB Manipulation Menu options.

**Table 196** FDB Manipulation Menu options

Command	Usage
find <MAC address> [<1-4095>]	Displays a single database entry by its MAC address. You are prompted to enter the MAC address of the device. Enter the MAC address using one of the following: <ul style="list-style-type: none"><li>• <b>xx:xx:xx:xx:xx:xx</b> format (for example: 08:00:20:12:34:56)</li><li>• <b>xxxxxxxxxxxx</b> format (for example: 080020123456).</li></ul>
port <port number>	Displays all FDB entries for a particular port.
vlan <1-4095>	Displays all FDB entries on a single VLAN.
dump	Displays all entries in the Forwarding Database.
clear	Clears the entire Forwarding Database from GbE2 Interconnect Switch memory, then adds the static entries to the Forwarding Database.

## Debugging options

**Command:** /maint/debug

```
[Miscellaneous Debug Menu]
tbuf - Show MP trace buffer
snap - Show MP snap (or post-mortem) trace buffer
clrcfg - Clear all flash configs
```



The Miscellaneous Debug Menu displays trace buffer information about events that can be helpful in understanding GbE2 Interconnect Switch operation. You can view the following information using the Debug Menu:

- Events traced by the management processor (MP)
- Events traced to a buffer area when a reset occurs

If the GbE2 Interconnect Switch resets for any reason, the management processor (MP) trace buffer is saved into the snap trace buffer area. The output from these commands can be interpreted by HP technical support.

The following table describes the Miscellaneous Debug Menu options:

**Table 197** Miscellaneous Debug Menu options

Command	Usage
tbuf	Displays the management processor trace buffer. Header information similar to the following is shown: MP trace buffer at 13:28:15 Fri May 25, 2002; mask: 0x2ffdf748 The buffer information is displayed after the header.
snap	Displays the management processor snap (or post-mortem) trace buffer. This buffer contains information traced at the time that a reset occurred.
clrcfg	Deletes all flash configuration blocks. The next time the GbE2 Interconnect Switch is rebooted, it returns to the factory default settings.

## ARP cache options

**Command:** /maint/arp

```
[Address Resolution Protocol Menu]
  find      - Show a single ARP entry by IP address
  port      - Show ARP entries on a single port
  vlan      - Show ARP entries on a single VLAN
  addr      - Show ARP entries for switch's interfaces
  dump      - Show all ARP entries
  add       - Add a permanent ARP entry
  del       - Delete an ARP entry
  clear     - Clear ARP cache
```

The following table describes the Address Resolution Protocol Menu options:

**Table 198** Address Resolution Protocol Menu options

Command	Usage
find <IP address>	Shows a single ARP entry by IP address. For example, 192.4.17.35
port <port number>	Shows ARP entries on a single port.
vlan <1-4095>	Shows ARP entries on a single VLAN.
addr	Shows the list of IP addresses that the switch will respond to for ARP requests.
dump	Shows all ARP entries.
add <IP address> <MAC address> <1-4095> <port number>	Adds a single ARP entry to switch memory.
del <IP address>	Removes a single ARP entry from switch memory.
clear	Clears the entire ARP list from GbE2 Interconnect Switch memory.



**NOTE:** To display all ARP entries currently held in the GbE2 Interconnect Switch, or a portion according to one of the options listed on the menu above (**find**, **port**, **vlan**, **dump**), see the “ARP information” section of the “Information Menu” chapter.

## IP Route Manipulation options

**Command:** /maint/route

```
[IP Routing Menu]
find      - Show a single route by destination IP address
gw        - Show routes to a single gateway
type      - Show routes of a single type
tag       - Show routes of a single tag
if        - Show routes on a single interface
dump      - Show all routes
clear     - Clear route table
```

The following table describes the IP Route Manipulation Menu options:

**Table 199** IP Route Manipulation Menu options

Command	Usage
find <IP address>	Shows a single route by destination IP address.
gw <IP address>	Shows routes to a default gateway.
type indirect direct local broadcast martian  multicast	Shows routes of a single type.
tag fixed static addr rip ospf  broadcast martian	Shows routes of a single tag.
if <1-255>	Shows routes on a single interface.
dump	Shows all routes.
clear	Clears the route table from switch memory.

## IGMP Multicast Group options

**Command:** /maint/igmp

```
[IGMP Multicast Group Menu]
snoop     - IGMP Snooping Menu
mrouter   - IGMP Multicast Router Port Menu
clear     - Clear group and mrouter tables
```

The following table describes the IGMP Multicast Group Maintenance Menu options.

**Table 200** IGMP Multicast Group Menu options

Command	Usage
snoop	Displays the IGMP Snooping maintenance menu.
mrouter	Displays the IGMP Multicast Router maintenance menu.
clear	Clears IGMP Multicast data from switch memory.

## IGMP Snooping options

**Command:** /maint/igmp/snoop

```
[IGMP Multicast Group Menu]
find      - Show a single group by IP group address
vlan      - Show groups on a single vlan
port      - Show groups on a single port
trunk     - Show groups on a single trunk
dump      - Show all groups
clear     - Clear group tables
```

The following table describes the IGMP Snoop Maintenance Menu options.

**Table 201** IGMP Snooping Menu options

Command	Usage
find <IP address>	Shows a single IGMP Multicast group by IP address.
vlan <1-4095>	Shows IGMP Multicast groups on a single VLAN.
port <port number>	Shows IGMP Multicast groups on a single port.
dump	Shows all IGMP Multicast groups.
clear	Clears IGMP Multicast data from switch memory.

## IGMP Mrouter options

**Command:** /maint/igmp/mrouter

```
[IGMP Multicast Routers Menu]
vlan      - Show all multicast router ports on a single vlan
dump      - Show all multicast router ports
clear     - Clear multicast router port table
```

The following table describes the IGMP Multicast Routers Maintenance Menu options.

**Table 202** IGMP Multicast Group Menu options

Command	Usage
vlan <1-4095>	Shows IGMP Multicast groups on a single VLAN.
dump	Shows all IGMP Multicast routers.
clear	Clears IGMP Multicast router data from switch memory.

## Uencode flash dump

**Command:** /maint/uudmp

Using this command, dump information is presented in uuencoded format. This format makes it easy to capture the dump information as a file or a string of characters.

If you want to capture dump information to a file, set your communication software on your workstation to capture session data prior to issuing the **uudmp** command. This will ensure that you do not lose any information. Once entered, the **uudmp** command will cause approximately 23,300 lines of data to be displayed on your screen and copied into the file.

Using the **uudmp** command, dump information can be read multiple times. The command does not cause the information to be updated or cleared from flash memory.

Dump information is not cleared automatically. In order for any subsequent dump information to be written to flash memory, you must manually clear the dump region. For more information on clearing the dump region, see the "Clearing dump information" section later in this chapter.

To access dump information, at the Maintenance# prompt, enter:

```
Maintenance# uudmp
```

The dump information is displayed on your screen and, if you have configured your communication software to do so, captured to a file. If the dump region is empty, the following displays:

```
No FLASH dump available.
```

## FTP/TFTP system dump put

**Command:** /maint/ptdmp <server> <filename>

Use this command to put (save) the system dump to a FTP or TFTP server.



**NOTE:** If the FTP/TFTP server is running SunOS or the Solaris operating system, the specified **ptdmp** file must exist prior to executing the **ptdmp** command, and must be writable (set with proper permission, and not locked by any application). The contents of the specified file will be replaced with the current dump data.

To save dump information via FTP/TFTP, at the Maintenance# prompt, enter:

```
Maintenance# ptdmp <server> <filename>
```

Type the FTP/TFTP server IP address or hostname as <server>, and the target dump file as <filename>.

## Clearing dump information

**Command:** /maint/cltmp

To clear dump information from flash memory, at the Maintenance# prompt, enter:

```
Maintenance# cltmp
```

The GbE2 Interconnect Switch clears the dump region of flash memory and displays the following message:

```
FLASH dump region cleared.
```

If the flash dump region is already clear, the switch displays the following message:

```
FLASH dump region is already clear.
```

## Panic command

**Command:** /maint/panic

The panic command causes the GbE2 Interconnect Switch to immediately dump state information to flash memory and automatically reboot.

To select panic, at the Maintenance# prompt, enter:

```
>> Maintenance# panic
A FLASH dump already exists.
Confirm replacing existing dump and reboot [y/n]:
```

Enter **y** to confirm the command:

```
Confirm dump and reboot [y/n]: y
```

A list of messages is displayed:

```
Starting system dump...done.

Reboot at 11:54:08 Wednesday February 28, 2007...

. . . . .

. . . . .

Rebooted because of console PANIC command.

Booting complete
```

## Unscheduled system dumps

If there is an unscheduled system dump to flash memory, the following message is displayed when you log on to the GbE2 Interconnect Switch:

Note: A system dump exists in FLASH. The dump was saved at 13:43:22 Wednesday February 28, 2007. Use /maint/uudmp to extract the dump for analysis and /maint/cldmp to clear the FLASH region. The region must be cleared before another dump can be saved.

# Index

## 8

802.1x information, 37  
802.1x statistics, 62

## A

abbreviating commands, 17  
access control, user, 101  
active configuration block, 88, 166  
active switch configuration: gtcfg, 160; ptcfg, 159; restoring, 160  
Address Resolution Protocol (ARP):  
  add/delete entries, 169; address list, 169  
Address Resolution Protocol (ARP)  
  Menu, 46  
aging: STP information, 39, 41  
apply command, 15, 88  
auto-negotiation: enable/disable on port, 107, 108; flow control configuration, 107  
autonomous system filter action, 131

## B

backup configuration block, 88, 166  
banner (system option), 90  
Boot Options Menu, 163  
bootstrap protocol (BOOTP): obtain the IP address, 10  
bridge maximum age parameter:  
  configuration, 118; information, 39, 41, 43  
bridge parameter menu, for STP, 115  
bridge priority, 39  
Bridge Protocol Data Unit (BPDU), 39, 41, 43  
bridge Spanning Tree parameters, 118

## C

capture dump information to a file, 171  
clear: ARP entries, 169; dump information, 172  
commands: abbreviations, 17; global commands, 15; shortcuts, 17; tab completion, 17  
Common Internal Spanning Tree information, 42  
configuration: apply changes, 88; default gateway interval, for health checks, 127; default gateway IP address, 127; dump command, 159; flow control, 107, 108; Gigabit Ethernet, 106; operating mode, 107, 108; port link speed,

107, 108; port mirroring, 156; port trunking, 121; revert changes, 88; save changes, 88; switch IP address, 127; view pending changes, 88; VLAN default (PVID), 106; VLAN IP interface, 127; VLAN tagging, 106  
configuration block, 166  
configuring RMON (remote monitoring), 154  
connecting: via console, 9; via Secure Shell (SSH), 10; via Telnet, 10  
console port, connecting, 9  
cost: STP information, 39, 41, 43; STP port option, 119

## D

daylight savings time, 95  
debugging, 167  
default gateway, interval for health checks, 127  
default password: administrator, 19; operator, 21; user, 20  
diff command, 15, 88  
diff flash command, 15, 88  
disconnect idle timeout, 12  
download software, 163  
dump: configuration, 159; information, 59; state information, 172; statistics, 86  
duplex mode, link status, 22, 57  
dynamic routes, 170

## F

factory configuration block, 166  
factory default configuration, 18  
first-time configuration, 18  
flow control: configuration, 107, 108; display setting, 22; link status, 57  
Forwarding Database (FDB):  
  maintenance, 168  
Forwarding Database Information Menu, 33  
Forwarding Database Manipulation Menu, 168  
forwarding state (FWD), 34, 39, 41, 43  
fwd (STP bridge option), 119  
FwdDel (forward delay), bridge port, 39, 41, 43

## G

gig (Port Menu option), 106  
Gigabit Ethernet Physical Link, 106  
Gigabit Ethernet, configuration, 106  
global commands, 15  
Greenwich Mean Time (GMT), 95  
gtcfg (TFTP load command), 160

## H

health checks: default gateway interval, retries, 127; retry, number of failed health checks, 127  
hello, STP information, 39, 41, 43  
history command, 16  
Hot Links: configuration, 123

## I

idle timeout, overview, 12  
IEEE standards, 802.1d Spanning Tree Protocol, 38  
IGMP Mrouter options, 171  
IGMP Multicast Group options, 170  
IGMP Snooping options, 170  
image: download, 163; software, selection, 165  
information dump, 59  
Information Menu, 22  
interface statistics, 66, 67  
Internet Protocol (IP) statistics, 67  
IP address: ARP information, 47; BOOTP, 10; default gateway configuration, 127  
active IP interface: active, 148  
IP interface: address configuration, 127; information, 52; VLAN configuration, 127  
IP Interface Configuration Menu, 126  
IP Route Manipulation options, 170

## L

LACP statistics, 69, 70  
Layer 2 information, 32  
Layer 2 statistics, 69  
Layer 3 information, 44  
Layer 3 statistics, 70  
LEARNING (port state), 39, 41, 43  
lines command, 15  
Link Aggregation Control Protocol information, 34  
link speed, configuration, 107, 108  
link status: command, 57; display setting, 22; duplex mode, 22, 57; port speed, 22, 57  
log, syslog messages, 91  
login notice, 90

## M

Main Menu, 14  
Maintenance Menu, 167  
management processor (MP): trace buffer, 169  
mask, IP interface subnet address, 127

MD5 cryptographic authentication, 135  
media access control (MAC) address:  
  ARP information, 47; display  
  address, 10; FDB information, 33;  
  FDB manipulation, 168  
Miscellaneous Debug Menu, 169  
monitor port, 156

## N

Network Time Protocol (NTP):  
  synchronization, 95; time zone, 95  
null modem cable, 9

## O

online help, 15  
operating mode, configuration, 107,  
  108  
Operations-level port 802.1x options,  
  162  
Operations-level port options, 161  
Operations-level VRRP options, 162  
ospf: area index, 134; interface, 134;  
  Not-So-Stubby Area, 135; stub area,  
  135; transit area, 135  
OSPF configuration, 134  
OSPF information, 48

## P

panic: command, 172; switch, 167  
passwords, defaults, 19  
ping command, 15  
popd command, 16  
port configuration, 106  
Port Menu: configuration options, 106,  
  107, 108, 109, 110; Gigabit  
  Ethernet (gig) configuration, 106  
port mirroring, configuration, 156  
port number, 57  
port speed, 22, 57  
port statistics, 61  
port trunking configuration, 121  
ports: disable (temporarily), 107;  
  information, 57; membership of the  
  VLAN, 44; priority, 39, 41, 43; STP  
  port priority, 119  
preemption: assuming VRRP master  
  routing authority, 146  
priority (STP port option), 119  
prsr, primary radius server, 93  
ptcfg (TFTP save command), 159  
pushd command, 16  
pwd command, 15

## Q

quiet (screen display option), 16

## R

Rapid Spanning Tree and Multiple  
  Spanning Tree information, 40  
read community string (SNMP option),  
  96  
reboot, 167, 172  
retries, radius server, 93  
retry, health checks for default  
  gateway, 127  
revert apply command, 15, 88  
revert command, 15, 88  
RMON: alarm information, 55; event  
  information, 56; history information,  
  54  
RMON configuration: alarm, 155;  
  event, 155; history, 154  
RMON Information Menu, 54  
poisoned reverse, as used with split  
  horizon: poisoned reverse, 133  
Routing Information Protocol (RIP):  
  version 1 parameters, 132  
split horizon: split horizon, 133

## S

save command, 15, 88, 166  
save n command, 15  
secret, radius server, 93  
secsrv, secondary radius server, 93  
Secure Shell (SSH): encryption and  
  authentication methods, 10  
Secure Shell Server (SSHD) Menu, 92  
Setup utility: introduction, 18; start, 18  
shortcuts, 17  
Simple Network Management Protocol  
  (SNMP): optional setup, 18  
snap traces, buffer, 169  
SNMP: set and get access, 96  
SNMPv3 Access Table information, 25  
SNMPv3 Community Table  
  information, 26  
SNMPv3 dump, 29  
SNMPv3 Group Table information, 26  
SNMPv3 Information Menu, 23  
SNMPv3 Notify Table information, 28  
SNMPv3 Target Address Table  
  information, 27  
SNMPv3 Target Parameters Table  
  information, 27  
SNMPv3 USM User Table information,  
  24  
SNMPv3 View Table information, 25  
software: image, 163  
Spanning Tree Protocol (STP): bridge  
  parameters, 118; information, 38;  
  port cost option, 119; port priority  
  option, 119; root bridge, 118;  
  switch reset effect, 166; with trunk  
  groups, 43  
sshport, 92  
starting switch setup, 18  
state (STP information), 39, 41, 43  
statistics dump, 86

Statistics Menu, 60  
subnet address mask configuration, IP  
  subnet address, 127  
subnets: IP interface, 126  
switch: reset, 166  
syslog: display messages, 31  
system: date and time, 23, 24, 25,  
  26, 27, 28, 31, 32, 45, 69;  
  information, 30, 58  
System Configuration Menu, 89  
System Information Menu, 23  
system options: login banner, 90;  
  tntport, 90

## T

tab completion, 17  
TCP statistics, 81  
Telnet: requirements, 10  
telnet command, 16  
timeout, radius server, 93  
timeouts, idle connection, 12  
tntport, system option, 90  
trace buffer, 169  
traceroute command, 15  
Tracking: VRRP; tracking, 145  
transmit flow control, 107  
Trivial File Transfer Protocol (TFTP):  
  PUT and GET commands, 159; use  
  for updating switch software image,  
  163  
typographical conventions, 13  
tzone, 95

## U

UCB statistics, 81  
UDP statistics, 76  
unscheduled system dump, 173  
upgrade, switch software, 163  
user access control configuration, 101  
user access levels, 11  
uuencode flash dump, 171

## V

verbose n command, 16  
view pending configuration changes,  
  88  
virtual router: description, 145;  
  tracking criteria, 146  
virtual router group: VRRP priority  
  tracking, 147  
Virtual Router Redundancy Protocol  
  (VRRP): password, authentication;  
  VRRP authentication, 148; group  
  options (prio); virtual router; priority,  
  147; priority election for the virtual  
  router, 145  
virtual routers: increasing priority level  
  of, 146; master preemption (preem);  
  virtual router, 147; master  
  preemption (prio); virtual router, 145

VLAN: active port; VLAN, 148  
VLAN tagging: port configuration,  
106  
VLANs: ARP entry information, 47;  
configuration, 125; information, 44;

name, 44; port membership, 44;  
setting default number (PVID), 106;  
tagging, 22, 57; VLAN number, 44  
VRID (virtual router ID), 145, 147  
VRRP: master advertisements, 145

VRRP configuration, 144  
VRRP information, 53  
VRRP master advertisements: time  
interval, 147